

Please rate this document after reviewing at the bottom of this page.

## REMOVAL

### ⚠ CAUTION

Put on gloves to protect your hands.

### NOTICE

- When prying with a flat-tip screwdriver or use a prying trim tool, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Disconnect the negative (-) battery terminal.
2. Remove the console upper complete (A) by using a remover.




3. Disconnect the connectors (A) from the console upper complete.



4. Remove the connector (A) from the console floor switch complete.

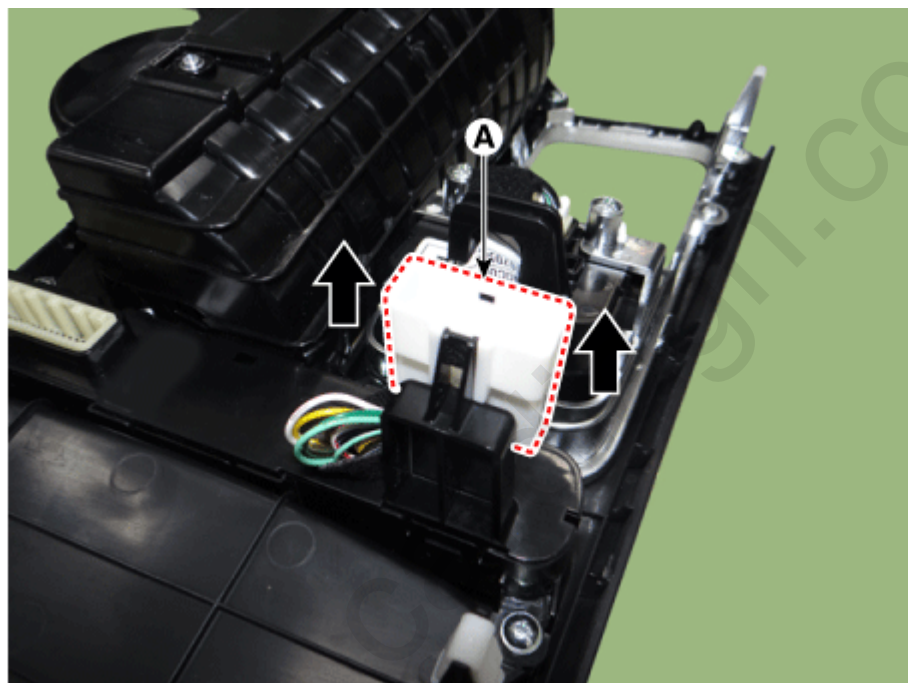

5. Remove the console floor switch complete (A) after loosening the mounting screws.

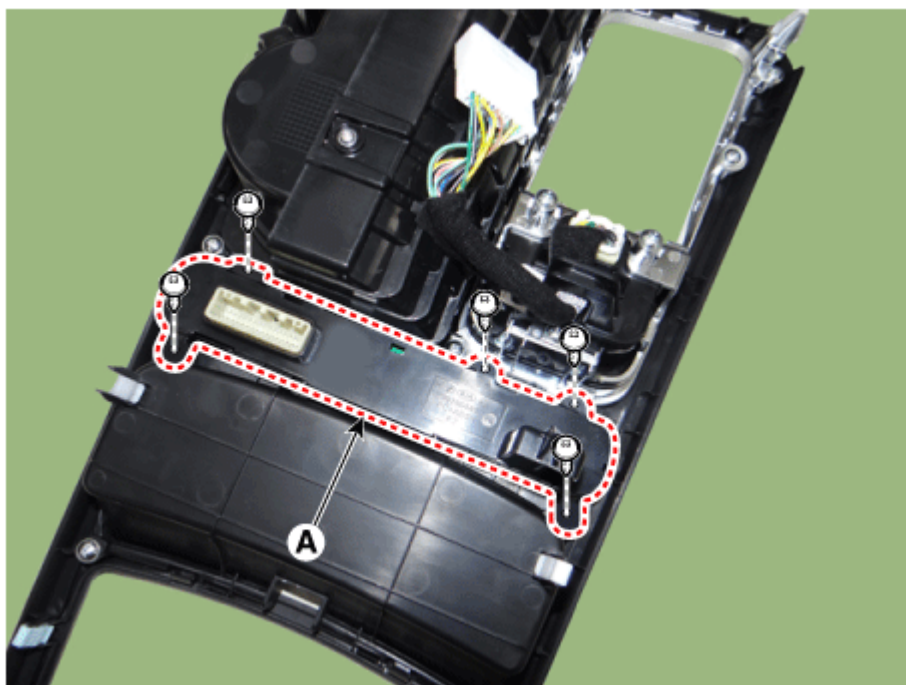

## INSTALLATION

1. Install the console floor switch complete.
2. Install the connector from the console floor switch complete.
3. Connect the connectors from the console upper complete.
4. Install the console upper complete.
5. Connect the negative (-) battery terminal.

### NOTICE

- Make sure that the connectors are plugged in properly.
- Check the AVM system for normal operation.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**