



Description

It's a system that uses illumination sensor to automatically turn ON the tail lamp and head lamp based on the change in surrounding environment's illumination condition. It activates when the vehicle enters/exits tunnel, or when the illumination condition in surrounding environment changes due to rain, snow, or fog. Precautions corresponding to the use of this system are as follows.

1. Do not add another device on top of this device.
2. Be sure to switch to manual during poor visibility climate, such as fog, heavy rain, or cloudy weather.
3. Illumination intensity in an actual vehicle is not always constant, and lamp ON/OFF time may vary depending on the climate, season, and surrounding environment.
4. Use this system only during sunrise and sunset period, and manually control lamp ON/OFF for general conditions.
5. Error may occur if light block coating that may change interior illumination is applied.