





Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the heater & A/C control unit.
(Refer to Heating,Ventilation And Air Conditioning - "Heater & A/C Control Unit (DATC)")
3. Remove the crash pad passenger side panel.
(Refer to Body - "Crash Pad Center Panel")
4. Remove the AVN head unit (A) after loosening the mounting screws.

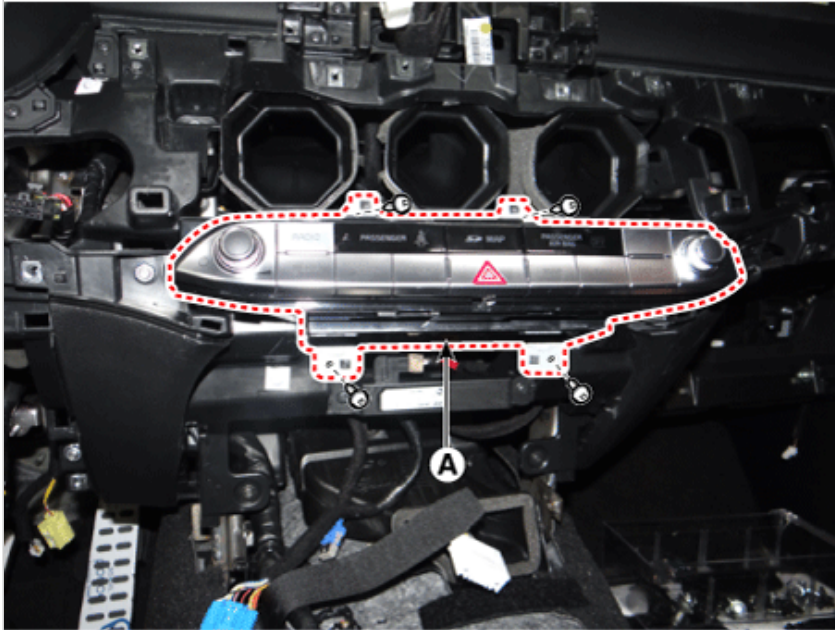

5. Remove the AVN head unit after disconnecting the connectors and antenna cable (A).

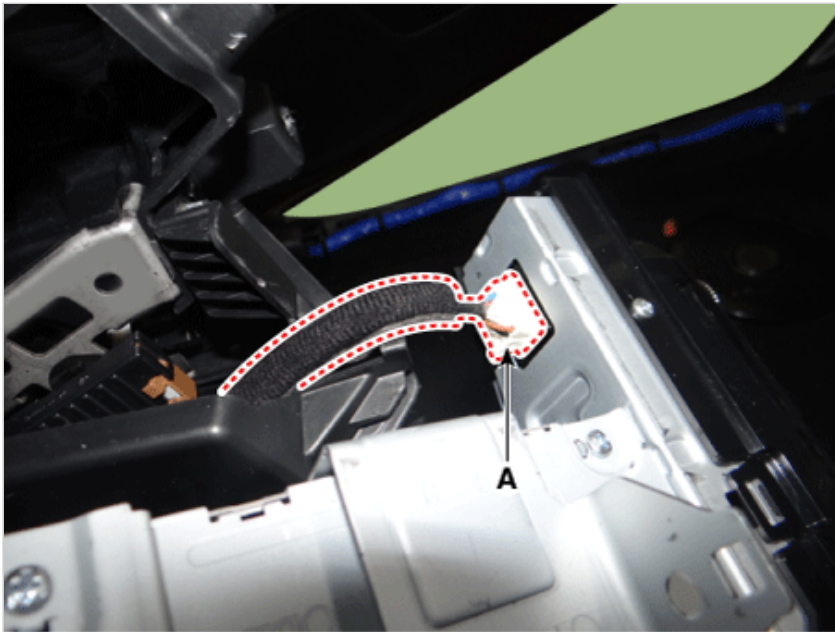



Installation

1. Install the AVN head unit after connecting the AVN head unit connectors and cable.
2. Install the crash pad passenger side panel.
3. Connect the negative (-) battery terminal.

NOTICE

- Make sure the connector are connected in properly.
- Check the AVN system for normal operation.