


Components

[Mobis]

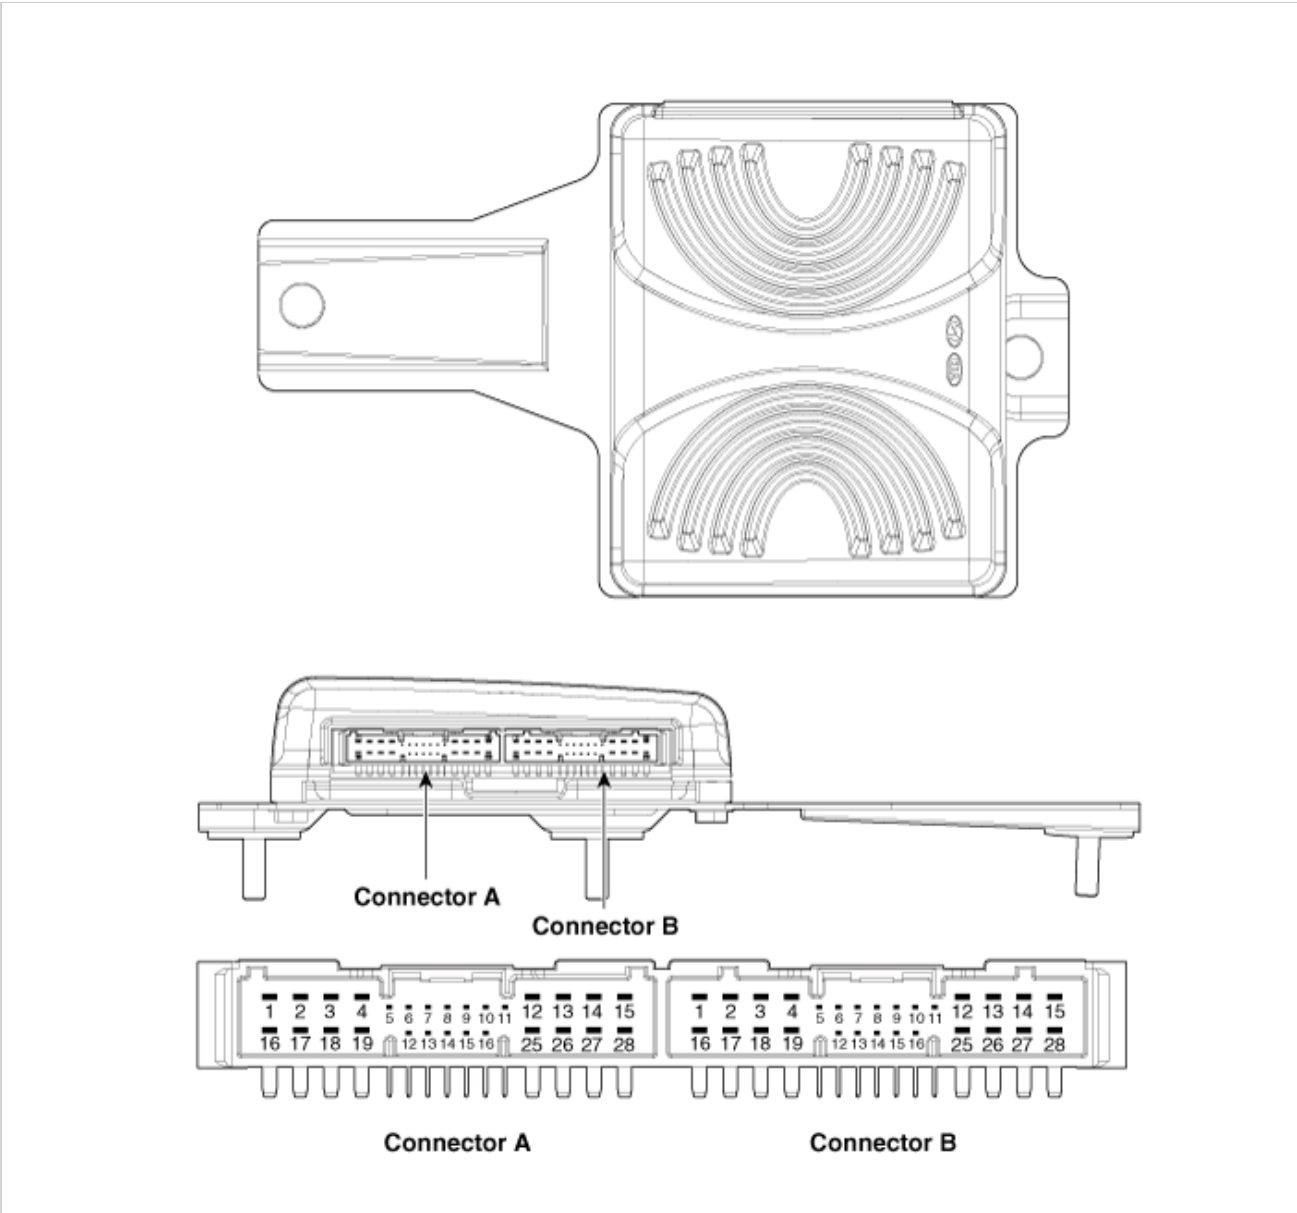


Connector Pin Information

No.	Connector A	Connector B
1	Battery (+)	Rear door left speaker (+)
2	Battery (+)	Rear door left speaker (-)
3	Battery (+)	Rear door right speaker (+)
4	Battery (+)	Rear door right speaker (-)
5	-	Reserved
6	Multimedia-CAN (High)	-
7	Multimedia-CAN (Low)	-
8	ACC	-
9	Amplifier navigation voice (+)	-
10	-	-
11	-	-

12	Front door left speaker (+)	-
13	Front door left speaker (-)	-
14	Front door right speaker (+)	-
15	Front door left speaker (-)	-
16	Ground	Subwoofer speaker 1 (+)
17	Ground	Subwoofer speaker 1 (-)
18	Ground	Subwoofer speaker 2 (+)
19	Ground	Subwoofer speaker 2 (-)
20	Amplifier SPDIF (High)	-
21	Amplifier SPDIF (Low)	-
22	Amplifier SPDIF (Ground)	-
23	Amplifier navigation voice (-)	-
24	IGN1	-
25	Front center speaker (+)	-
26	Front center speaker (-)	-
27	-	-
28	-	-

[Harman]

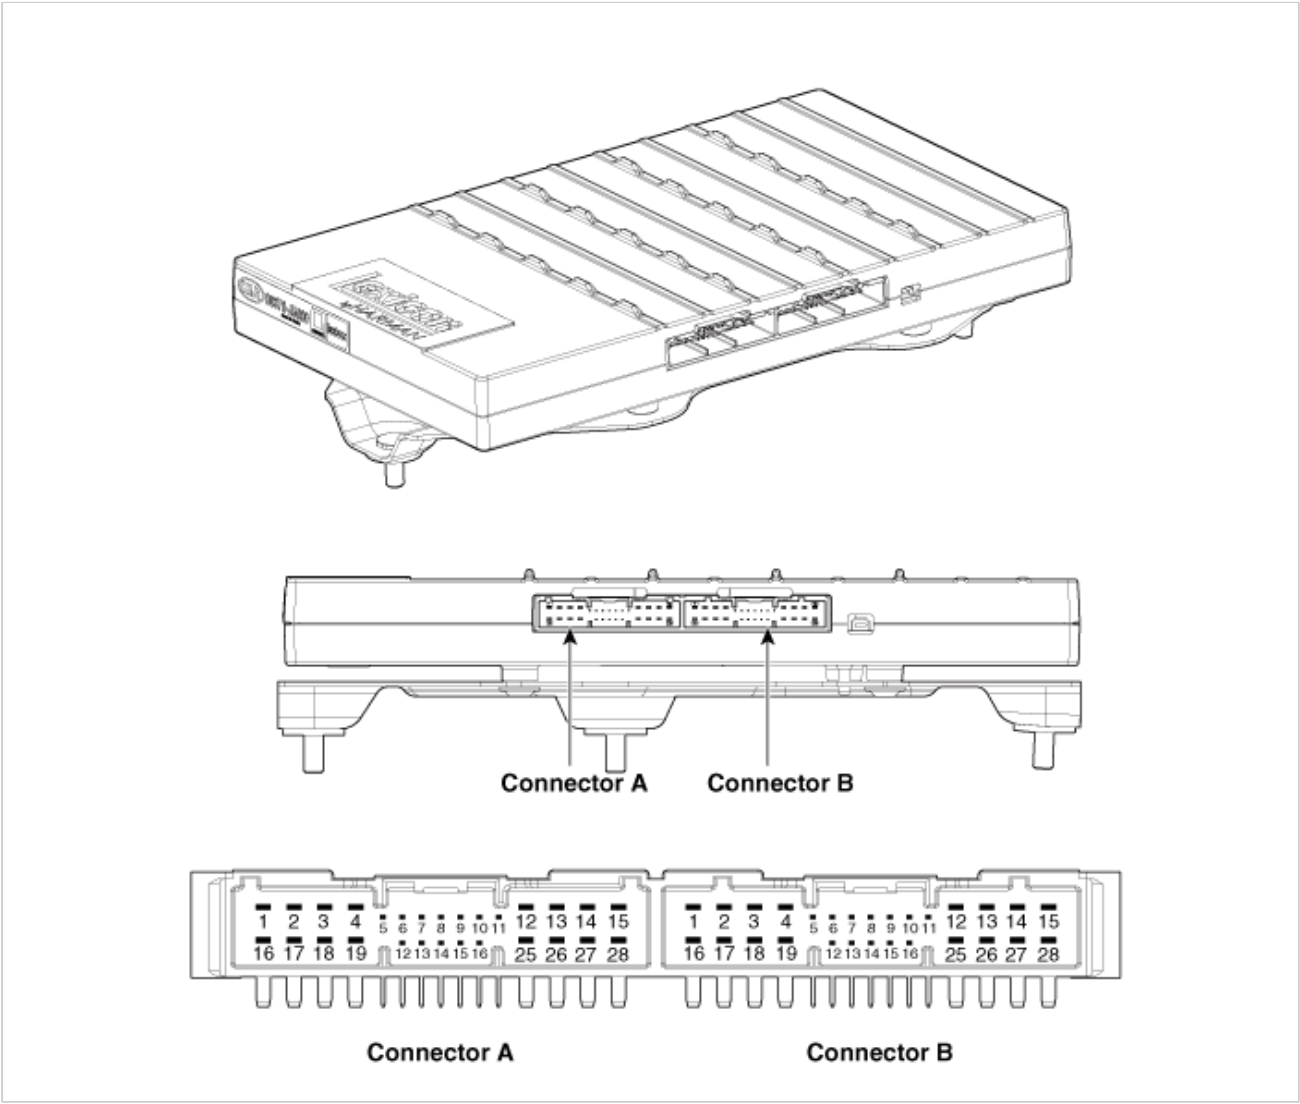

No.	Connector A	Connector B
1	Battery (+)	Subwoofer speaker 2 (+)

2	Battery (+)	Subwoofer speaker 1 (+)
3	Battery (+)	Front door right speaker (+)
4	Battery (+)	Front door left speaker (+)
5	-	-
6	Multimedia-CAN (High)	-
7	Multimedia-CAN (Low)	-
8	ACC	-
9	Amplifier navigation voice (+)	-
10	-	-
11	-	-
12	-	Rear door right speaker (+)
13	Front door center speaker (+)	Rear door left speaker (+)
14	Front door right tweeter speaker (+)	Surround right speaker (+)
15	Front door left tweeter speaker (+)	Surround left speaker (+)
16	Ground	Subwoofer speaker 2 (-)
17	Ground	Subwoofer speaker 1 (-)
18	Ground	Front door right speaker (-)
19	Ground	Front door left speaker (-)
20	Amplifier SPDIF (High)	-
21	Amplifier SPDIF (Low)	-
22	Amplifier SPDIF (Ground)	-
23	Amplifier navigation voice (-)	-
24	IGN1	-
25	-	Rear door right speaker (-)
26	Front door center speaker (-)	Rear door left speaker (-)
27	Front door right tweeter speaker (-)	Surround right speaker (-)
28	Front door left tweeter speaker (-)	Surround left speaker (-)