




Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the overhead console lamp.
(Refer to Lighting System - "Overhead Console Lamp")
3. Remove the hands free mic (A) after loosening the mounting screws.

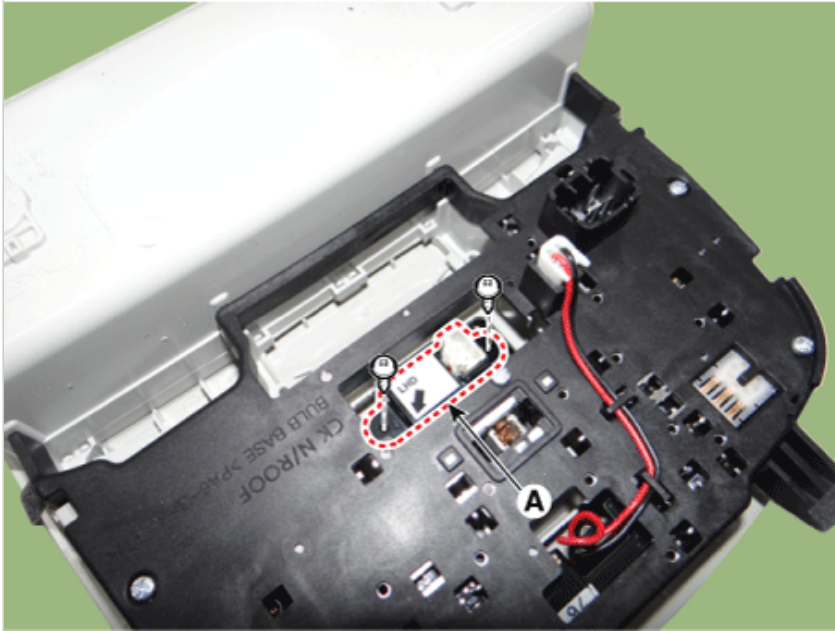

4. Check the continuity of between terminals.

