



Description

1. To display back of the vehicle to assist the driver, it receives vehicle rear side image signal from the rear view monitor and displays it on AVN monitor or LHS of inside rearview mirror.
2. Rear view monitor is a supplementary device that displays dead zone on monitor screen that automatically operates when the gear stays in "R" for over 3 seconds.
3. It displays the estimated trajectory with parking guideline in accordance with the operating angle of steering wheel. (There is no separate unit.)

System Structure (Rear view monitor operated by steering)

