



## Removal

### Information


In case of bad quality or poor focus, be sure to check the camera lense surface condition and foreign materials.

1. Disconnect the negative (-) battery terminal.


2. Remove the liftgate back panel.

**(Refer to Body - "Liftgate Back Panel")**


3. Disconnect the license lamp connectors (A).

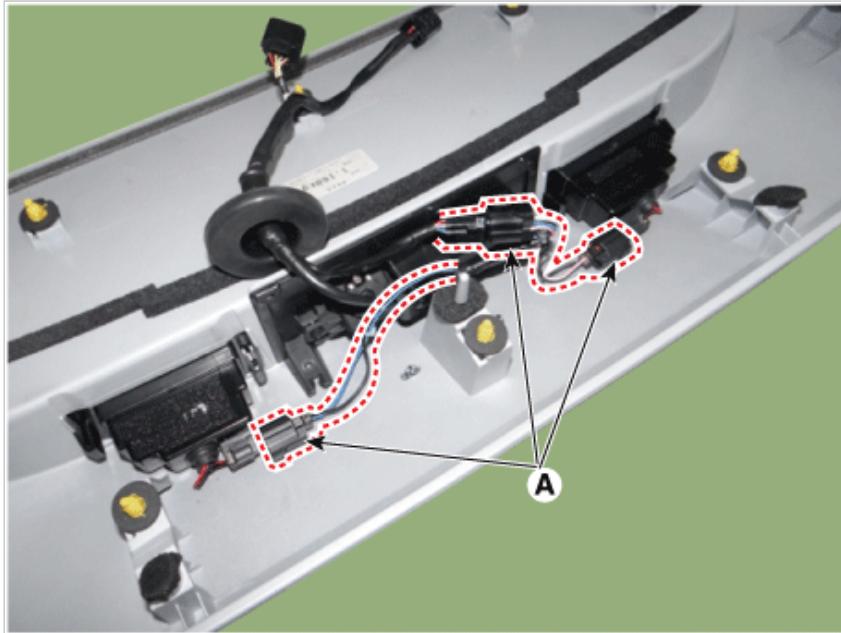

4. Remove the liftgate outside handle assembly (A) after loosening the mounting screws.

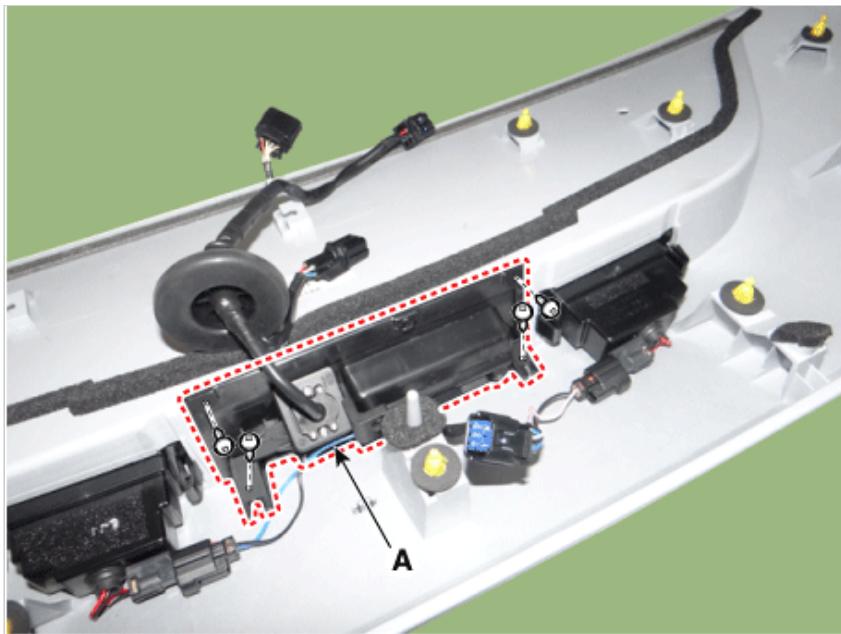

5. Remove the rear view camera (A) after loosening the mounting screws.

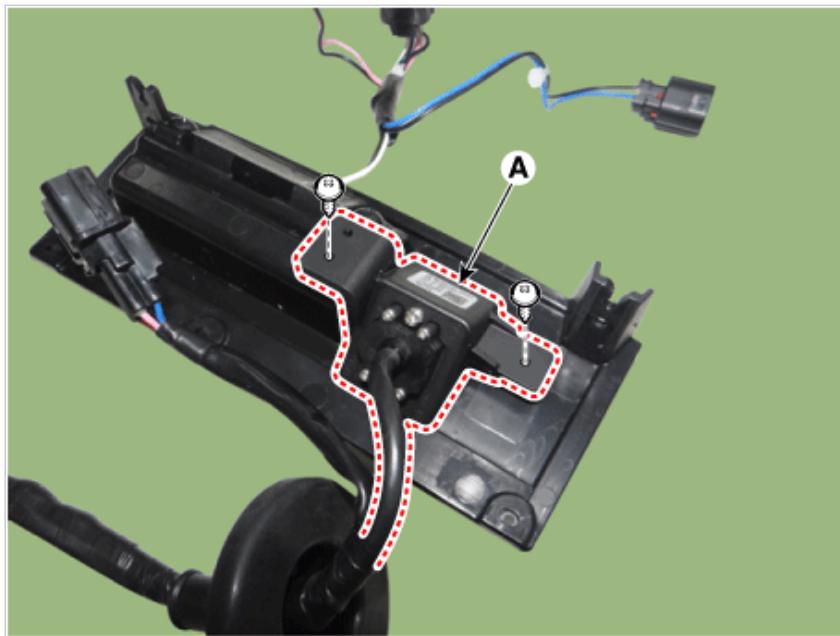

## Installation

1. Install the rear view camera.
2. Install the liftgate outside handle assembly.
3. Connect the license lamp connectors.
4. Install the liftgate back panel.
5. Connect the negative (-) battery terminal.