



Diagnosis With KDS

1. BCW system defects can be quickly diagnosed with the KDS operates actuator quickly to monitor, input/output value and self diagnosis.
2. Connect the cable of KDS to the data link connector in driver side crash pad lower panel, and turn on the KDS.
3. Select the vehicle model and then BCW system.
4. Select "Input/output monitoring", if you want to check current data of BCW system.
5. If you want to check each module operation forcefully, select "Actuation test".