





Removal

Parking Distance Warning-Forward (PDW-F) Sensor


1. Disconnect the negative (-) battery terminal.
2. Remove the front bumper assembly.
(Refer to Body - "Front Bumper Assembly")
3. Remove the front bumper energy absorber (A).

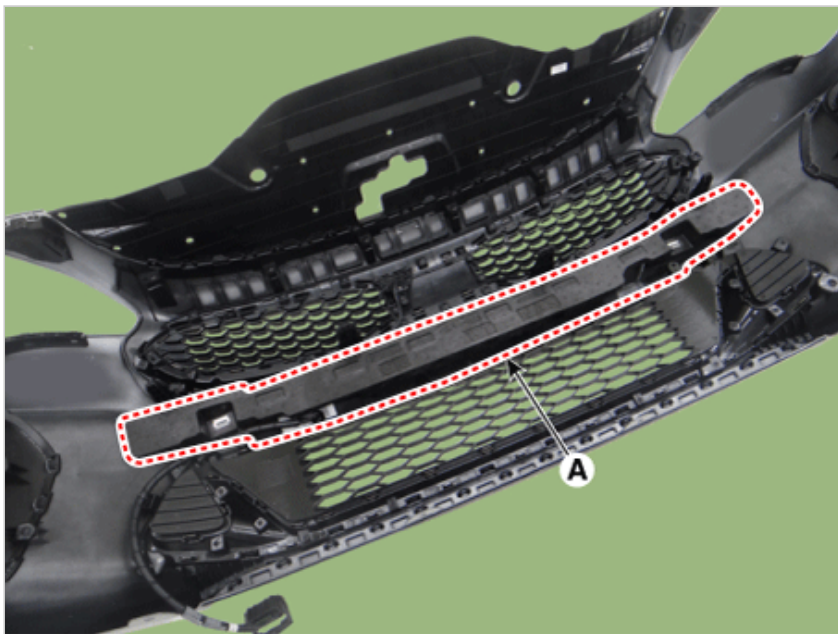


4. Disconnect the connector (A) from the PDW-F sensor.
[A Type]

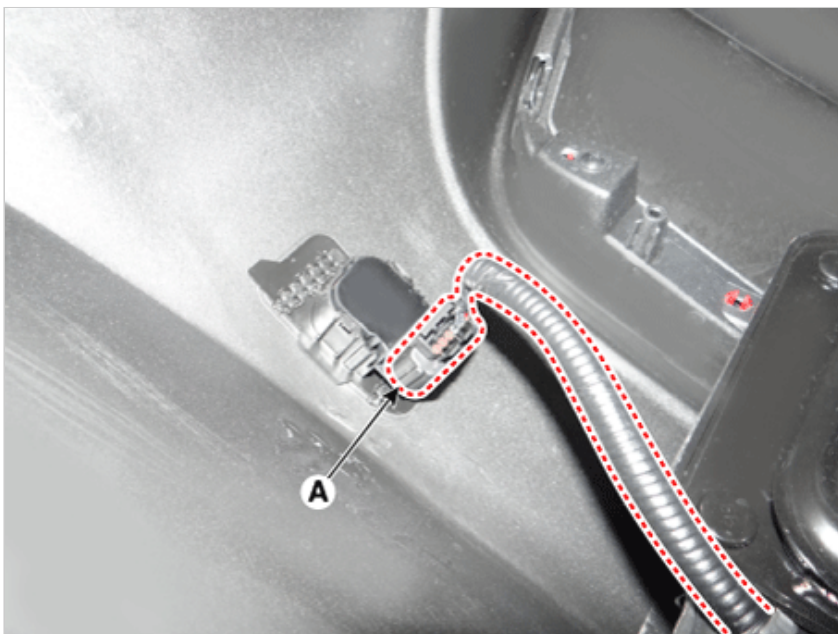


[B Type]

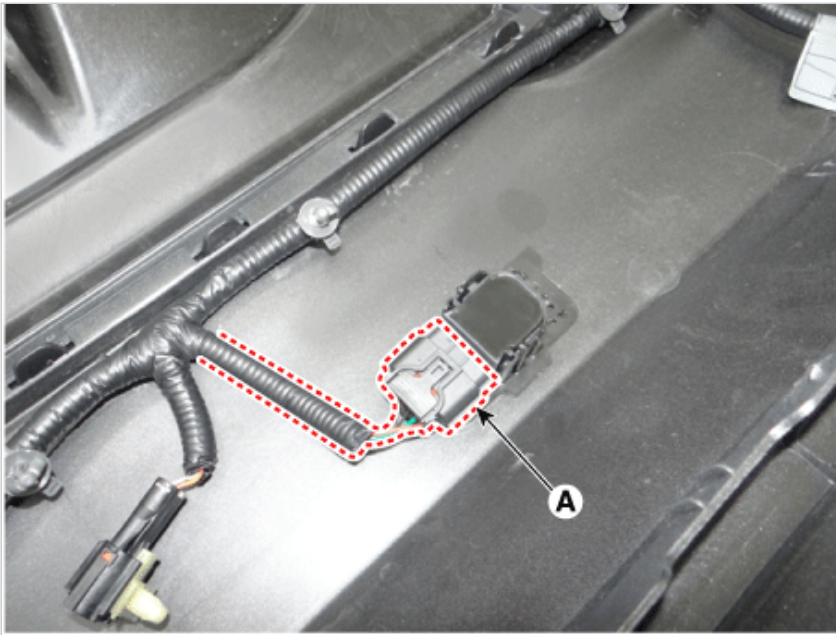

5. Pull out the PDW-F sensor (A) after opening the sensor holder (B).
[A Type]

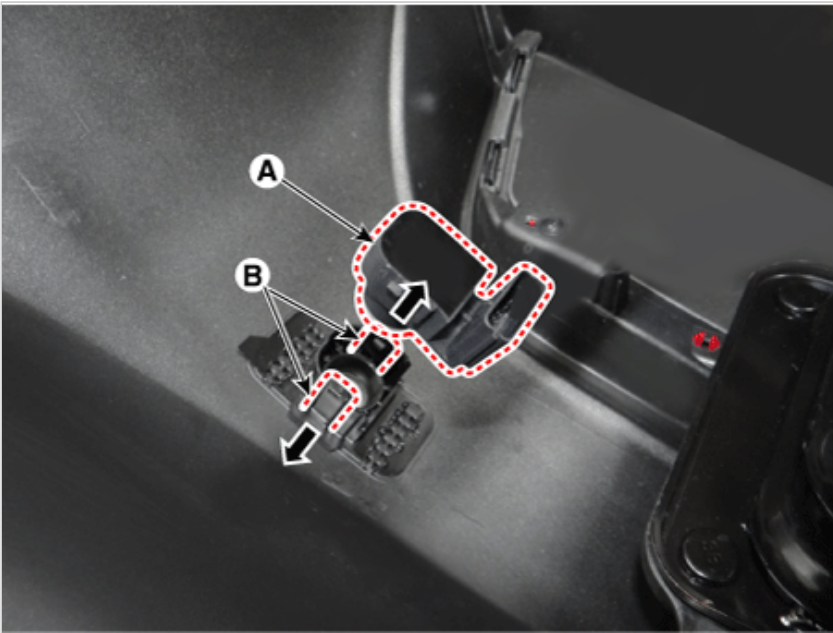


[B Type]

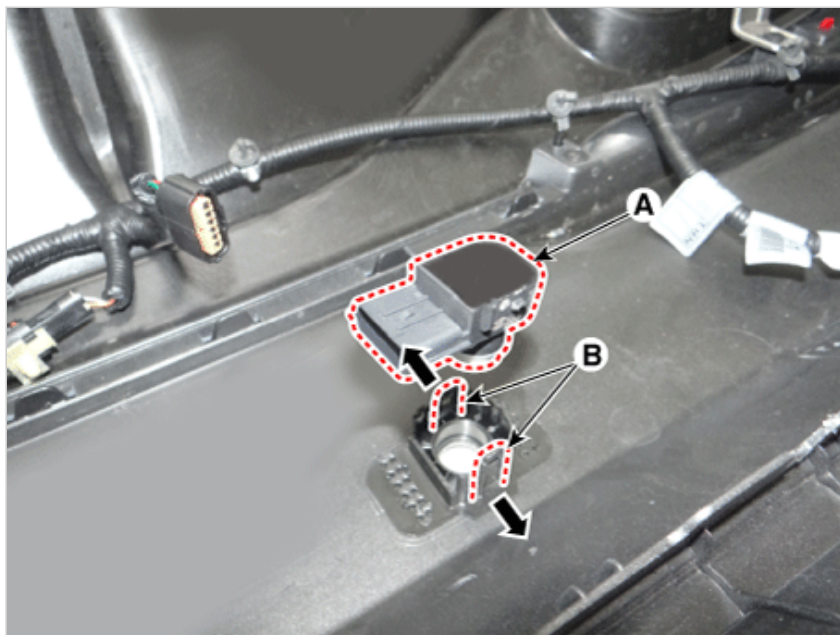


Parking Distance Warning-Reverse (PDW-R) Sensor

1. Disconnect the negative (-) battery terminal.
2. Remove the rear bumper beam assembly.
(Refer to Body - "Rear Bumper Beam Assembly")
3. Disconnect the connector (A) from the PDW-R sensor.


[A Type]

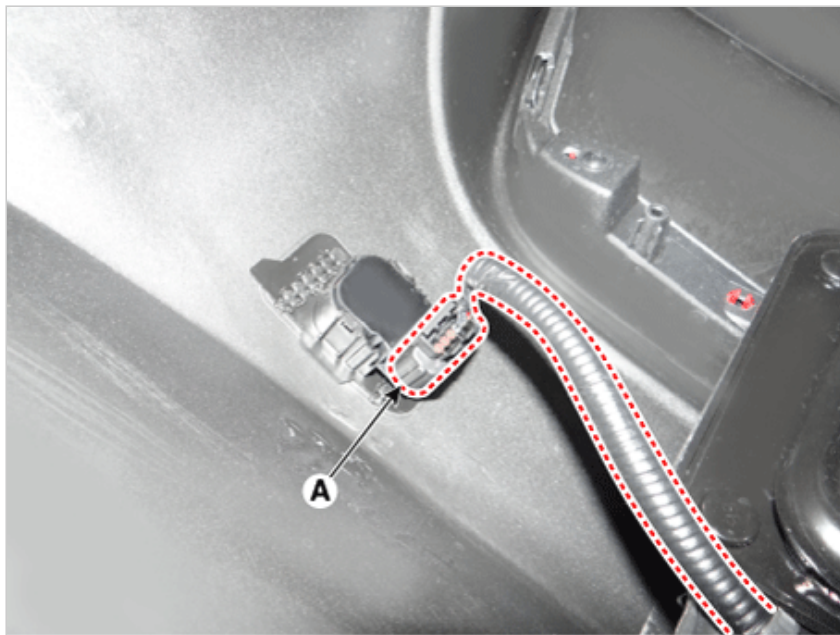


[B Type]

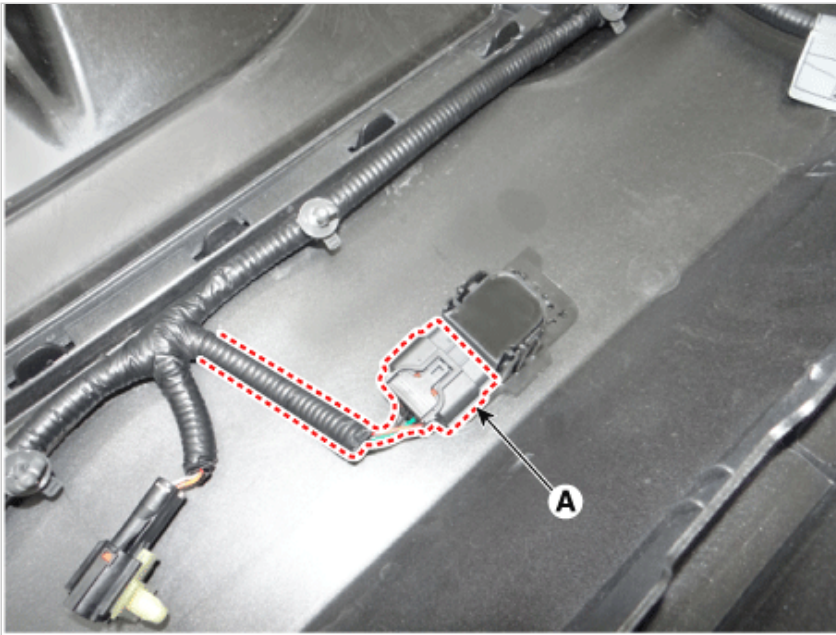

4. Pull out the PDW-R sensor (A) after opening the sensor holder (B).
[A Type]

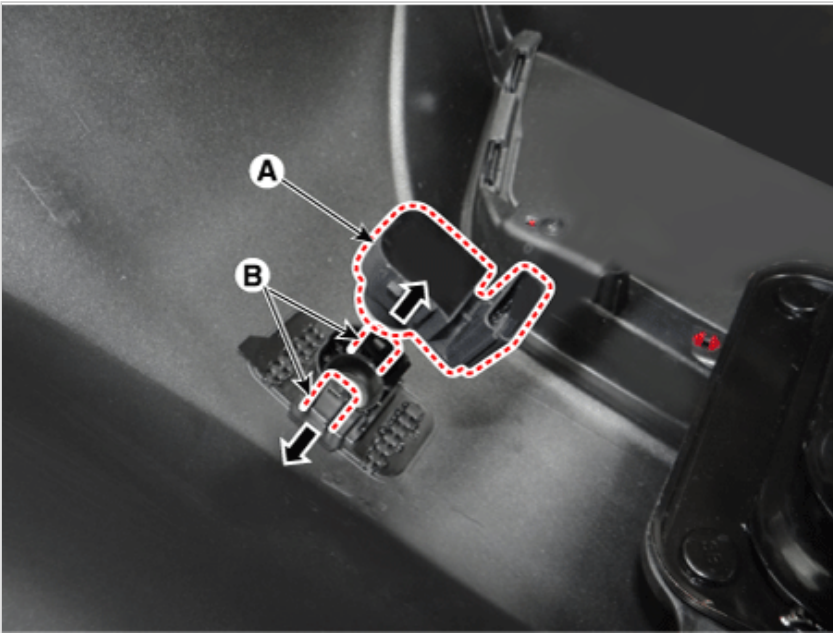

[B Type]

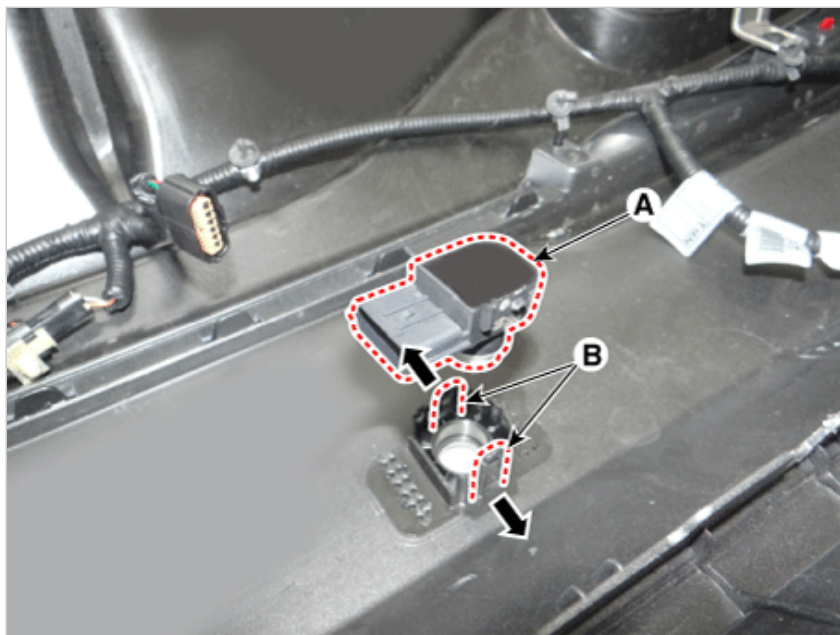

Installation

Parking Distance Warning-Forward (PDW-F) Sensor

1. Install the PDW-F sensor after connecting the connector.
2. Install the front bumper energy absorber.
3. Install the front bumper assembly.
4. Connect the negative (-) battery terminal.

Parking Distance Warning-Reverse (PDW-R) Sensor

1. Install the PDW-R sensor after connecting the connector.
2. Install the rear bumper beam assembly.
3. Connect the negative (-) battery terminal.