




Components

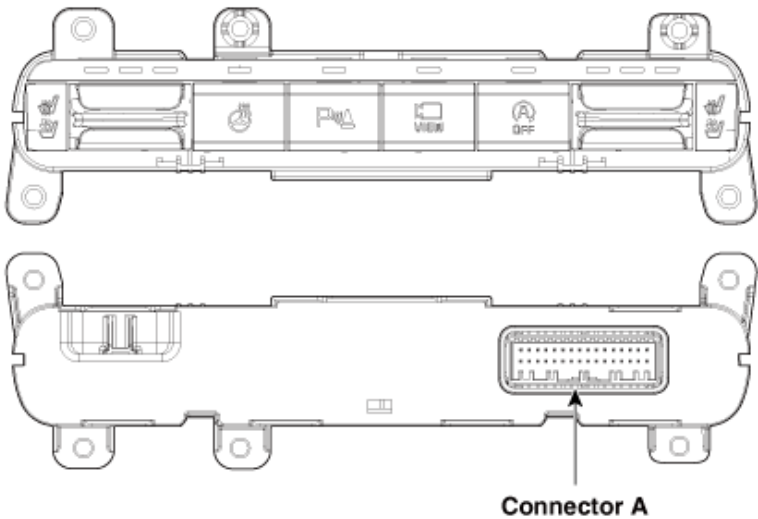

Connector A			
No.	Description	No.	Description
1	RH Heater mode signal	17	IGN
2	RH Ventilation mode signal	18	Illumination (+)
3	RH Heater indicator (Max)	19	-
4	RH Heater indicator (Mid)	20	Illumination (-)
5	RH Heater indicator (Min)	21	-
6	RH Ventilation indicator (Max)	22	Steering wheel heater switch indicator
7	RH Ventilation indicator (Mid)	23	PDW Switch indicator
8	RH Ventilation indicator (Min)	24	AVM Switch indicator
9	LH Ventilation indicator (Max)	25	Steering wheel heater switch signal
10	LH Ventilation indicator (Mid)	26	PDW Switch signal
11	LH Ventilation indicator (Min)	27	AVM Switch signal
12	LH Heater indicator (Max)	28	ISG Switch signal
13	LH Heater indicator (Mid)	29	ISG Switch indicator
14	LH Heater indicator (Min)	30	Detent
15	LH Ventilation mode signal	31	-
16	LH Heater mode signal	32	Ground