




Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the luggage side trim [LH].
(Refer to Body - "Luggage Side Trim")
3. Disconnect the fuel filler door release actuator connector (A).



4. Remove the fuel filler door housing.
(Refer to Body - "Fuel Filler Door")
5. Remove the fuel filler door release actuator (A) after loosening the mounting bolts.



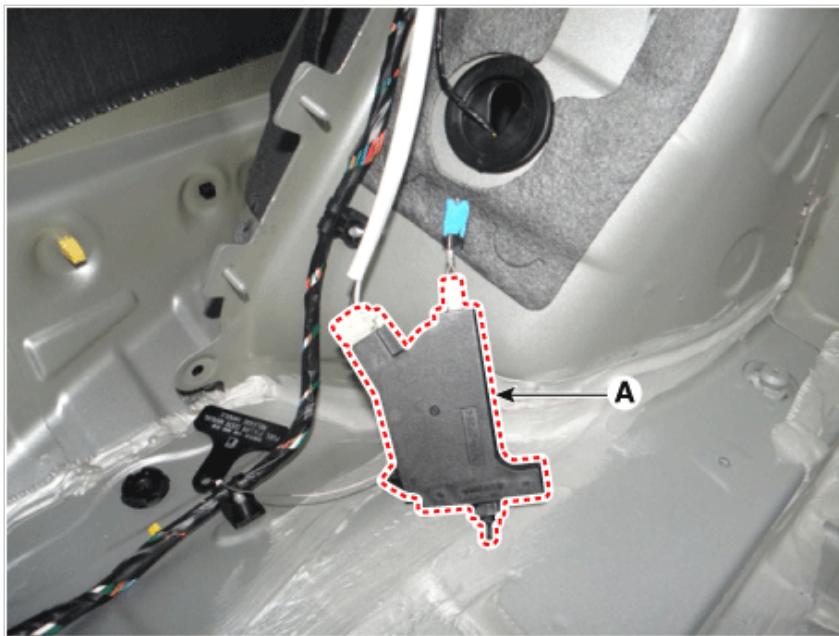

Installation

1. Install the fuel filler door release actuator.
2. Install the fuel filler door housing.
3. Connect the fuel filler door release actuator connector.
4. Install the luggage side trim [LH].
5. Connect the negative (-) battery terminal.

Inspection

1. Check for continuity between terminals No. 1 and No. 2. If there is no continuity, replace the fuel filler door release actuator.



Terminal Operation	1	2
Lock	⊖	⊕
Unlock	⊕	⊖