




Component Location

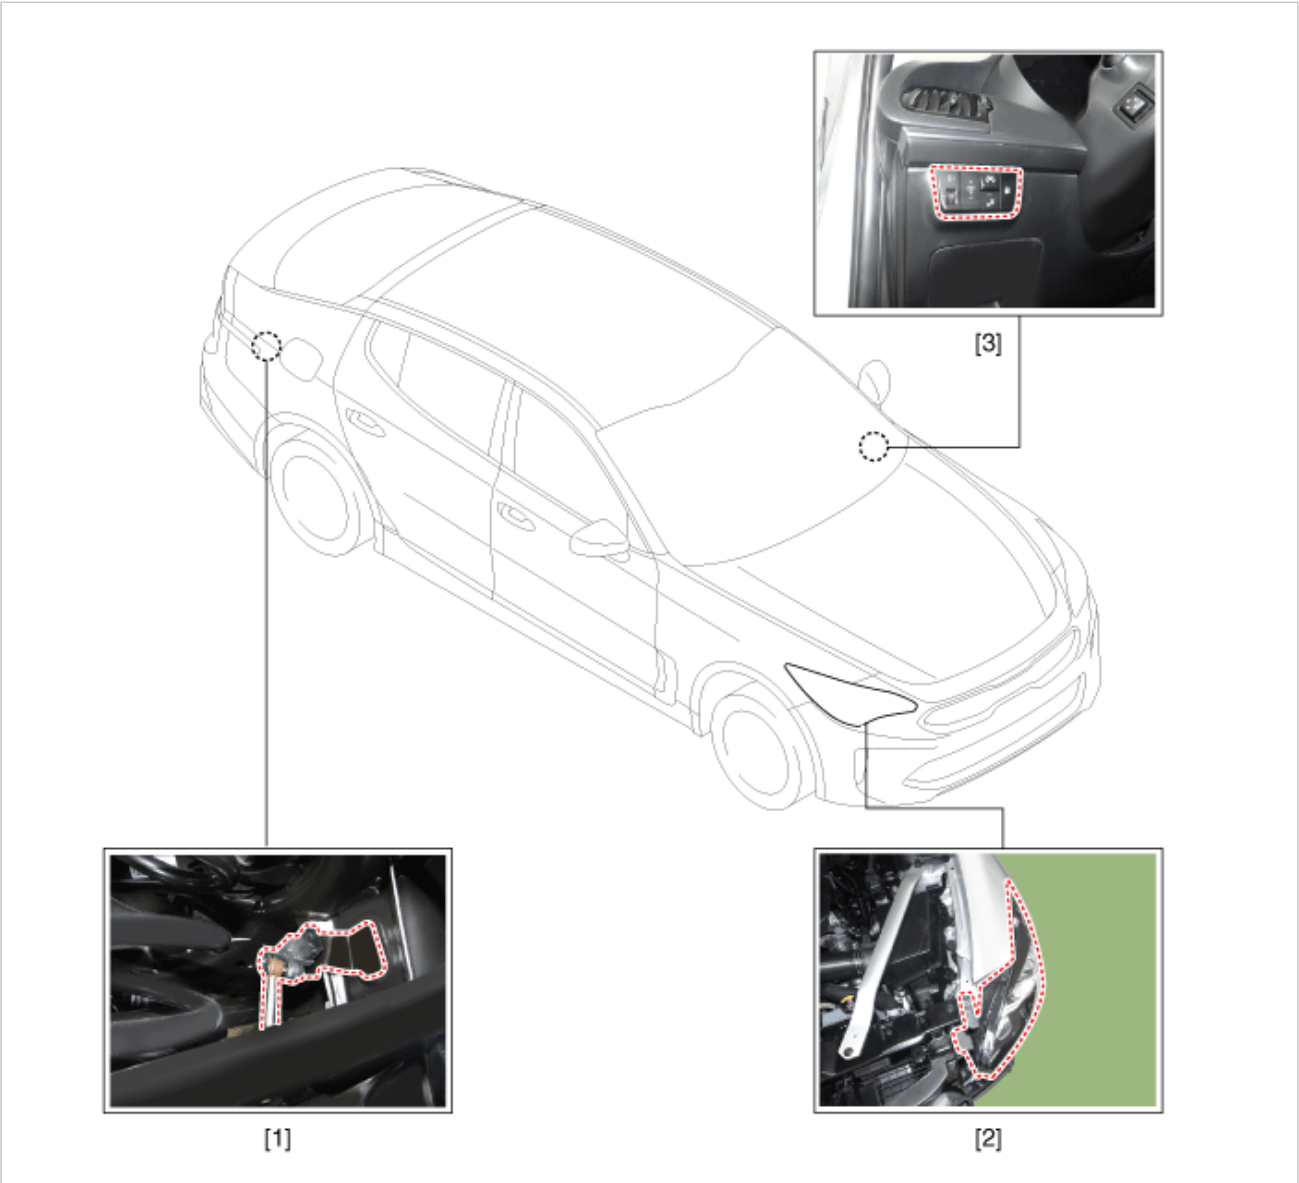

1. Headlamp leveling unit (Auto)
2. Headlamp leveling actuator (Built in leveling actuator)
3. Headlamp leveling switch (Manual)