



Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the headlamp assembly.
(Refer to Lighting System - "Headlamps")

Installation

1. Install the headlamp assembly.
2. Connect the negative (-) battery terminal.
3. Adjust the headlamp in accordance with the headlamp aiming instructions.