



## Inspection


1. Ignition "ON".
2. Turn on the headlamp switch.
3. Check for operation. The aim of the headlamps should change smoothly when the headlamp leveling switch is operated.
4. If the operation does not work well, inspect the connector and terminals to be sure they are all making good contact.  
If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.  
If the terminals look OK, go to step 5.
5. Substitute with a known-good headlamp assembly and check for proper operation.

## Removal

1. Disconnect the negative (-) battery terminal.
2. Disconnect the headlamp leveling unit connector (A).



3. Remove the headlamp leveling unit mounting link (A).

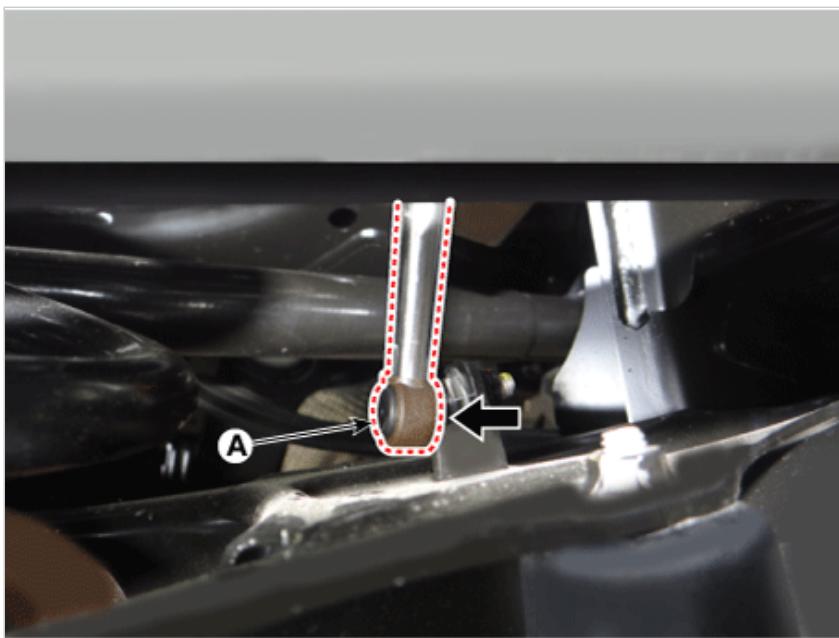

4. Remove the headlamp leveling unit (A) after loosening the mounting bolts.



## Installation

1. Install the headlamp leveling unit.

**Tightening torque :**

7 - 11 N·m (0.7 - 1.1 kgf·m, 5.1 - 8.1 lb·ft)

2. Install the headlamp leveling unit mounting link.
3. Connect the headlamp leveling unit connector.
4. Connect the negative (-) battery terminal.