





## Removal

1. Remove the front bumper assembly.  
**(Refer to Body - "Front Bumper Assembly")**
2. After loosening each mounting bolt of the low-pitch horn (A) and high-pitch horn (B), detach the connector (C) and remove the horn.  
**[Low - Pitch Horn]**

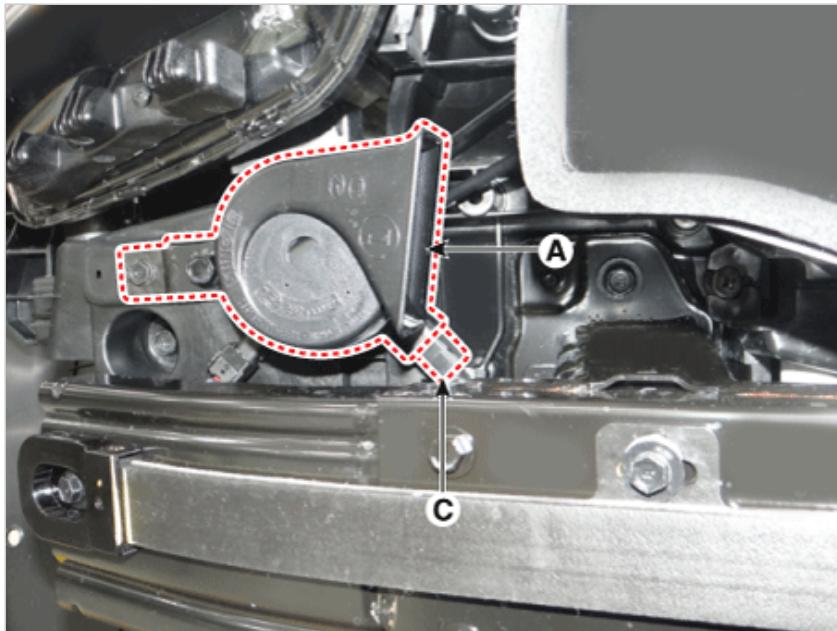

[High - Pitch Horn]

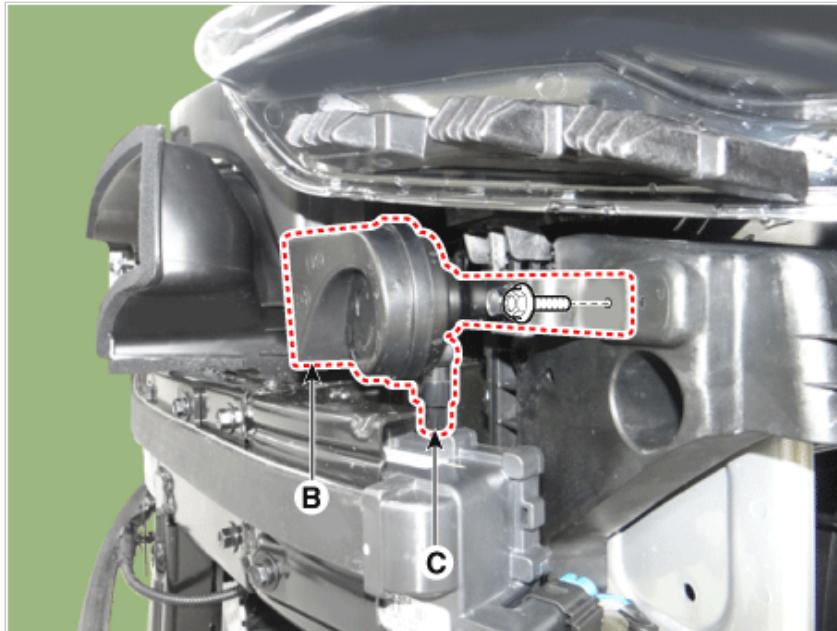

## Installation

1. After connecting the horn connectors, install both high-pitch and low-pitch horns.
2. Install the front bumper assembly.

## Inspection

1. The relay on the horn of this vehicle is implanted into the metal core block PCB of the engine room relay block.

### Information

The semi-conductor type relay inserted in the PCB is impossible to replace. If the relay needs to be replaced, replace the metal core box and conduct a test on it.

