



Removal

1. Before removing the driver side seat assembly, pull it upward to the maximum by pushing the front seat height adjusting switch (A).




2. Disconnect the negative (-) battery terminal
3. Remove the driver front seat assembly.
(Refer to Body - "Front Seat Assembly")


4. Disconnect the integrated memory seat unit connectors (A).





5. Remove the integrated memory seat unit (A) after loosening the mounting screws.

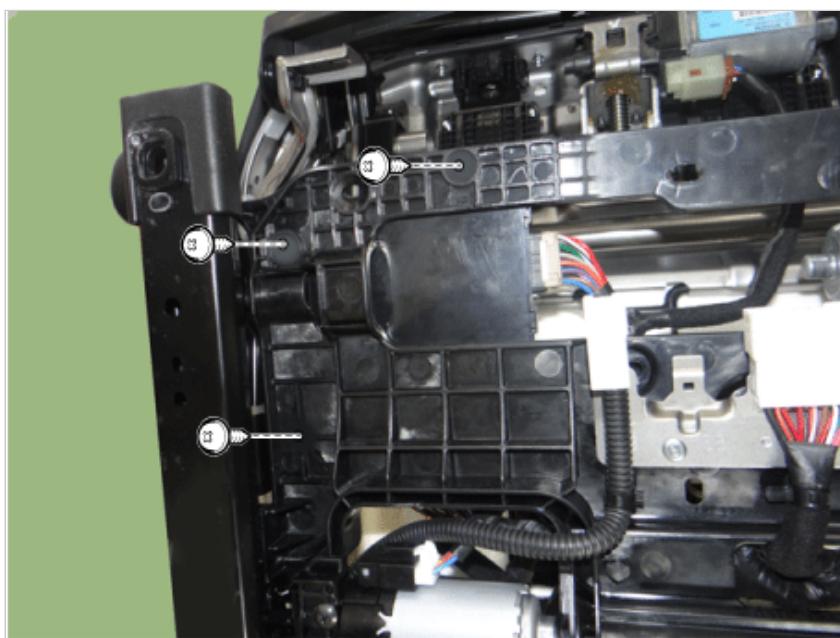

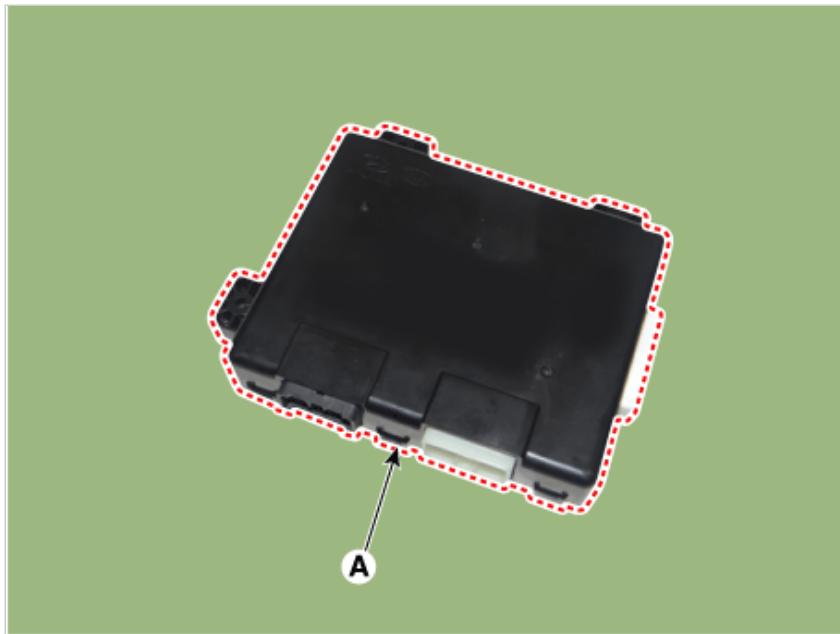

Installation

1. Install the integrated memory seat unit.
2. Connect the integrated memory seat unit connectors.
3. Install the driver front seat assembly.
4. Connect the negative (-) battery terminal.
5. Perform the seat limit position setting using the KDS.

S/W Management

Systems **Components** **Unfold All**

- Amplifier
- Cluster Module
- Driver Door Module
- Head Up Display
- IBU-BCM
- IBU-SMK
- IBU-TPMS
- Power Seat Module
 - System Identification
 - Seat Limit Position Setting
 - User Option
- Power Tailgate Module
- Steering Column Module
- Wireless Power Charger Module
- ICU (CGW)-Gasoline
- ICU (CGW)-Diesel

! Do not touch any system buttons while performing this function.