




Removal


Door Mirror Turn Signal Lamp

1. Disconnect the negative (-) battery terminal.
2. Remove the outside rear view mirror.
(Refer to Body - "Outside Rear View Mirror")
3. Remove mirror (A) to the direction as shown in the picture using (-) screw driver.

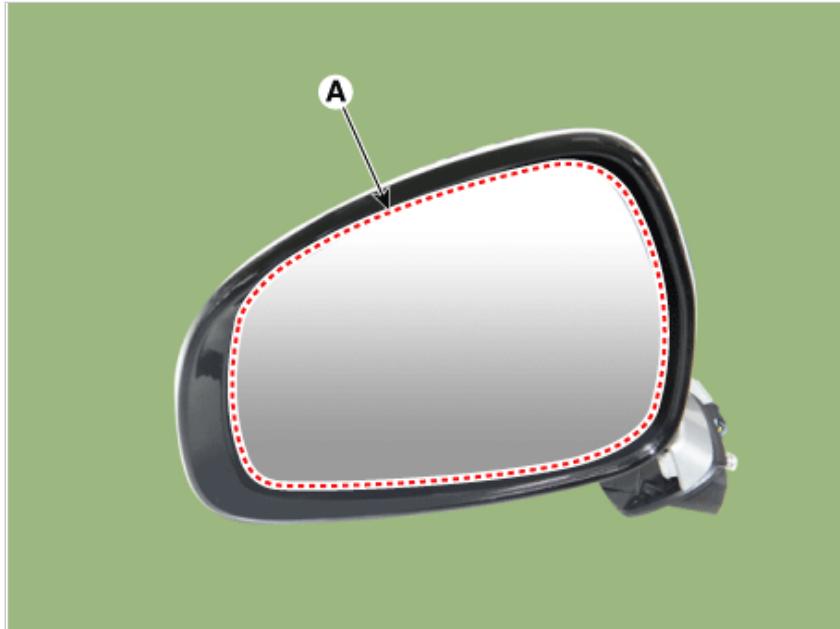


CAUTION

- Protect mirror from removing tool with cloth (B) wrapped.
- Be careful not to damage mirror and mirror housing during removing process.
- Apply force around the center of mirror because to apply force the end of mirror will break it.

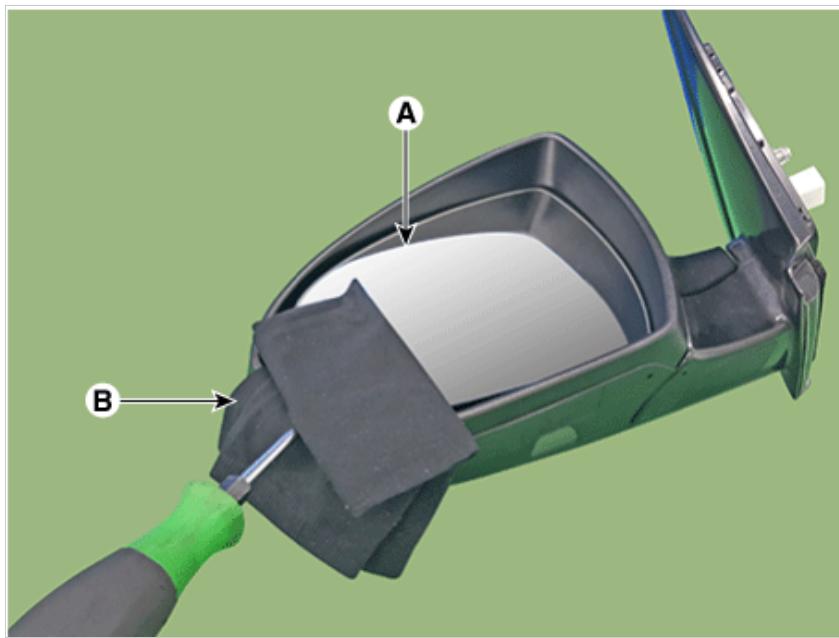

NOTICE


Be careful not to damage the fixing clips (A).

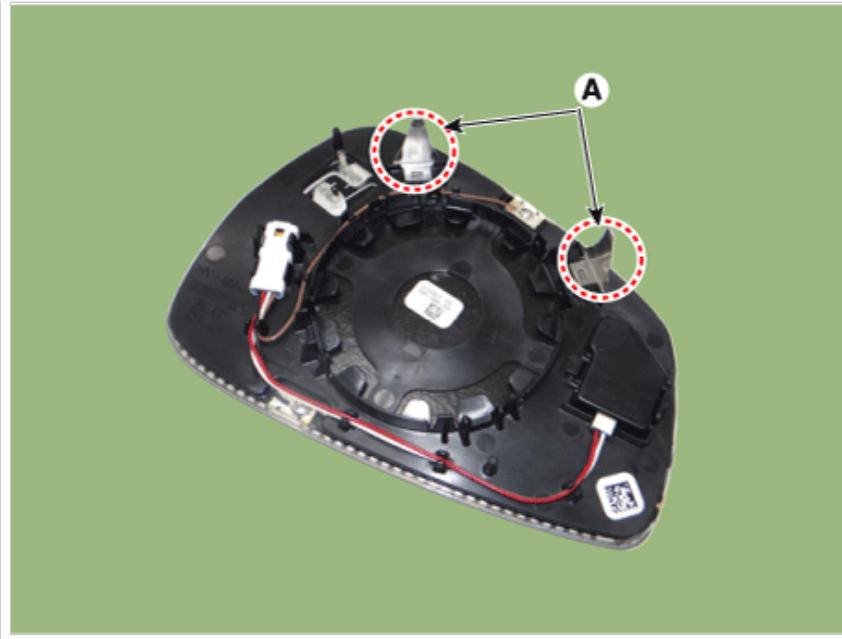


4. Disconnect the heater connectors (B) and BCW indicator connector (A) from the mirror.




5. Remove the door mirror housing (A) after loosening the mounting screws.

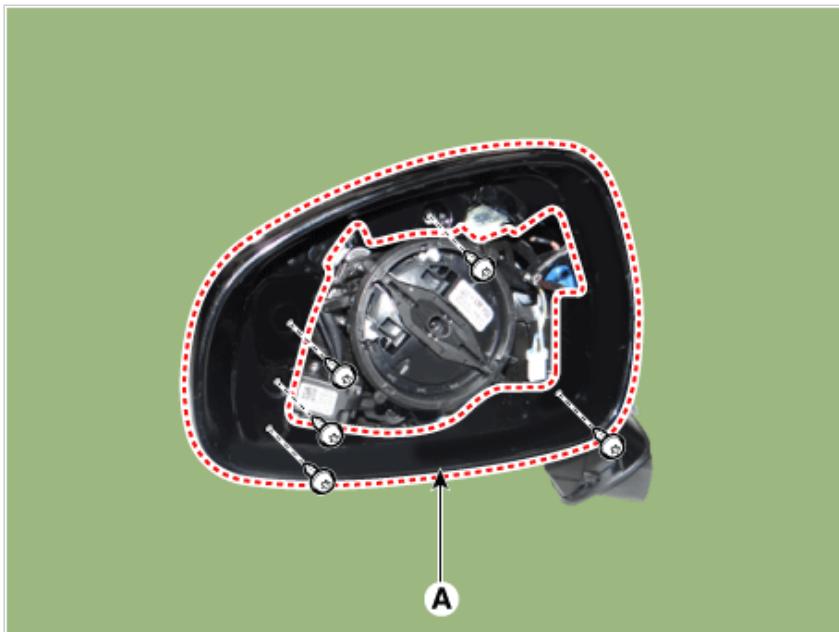

6. Remove the door mirror back cover (A).

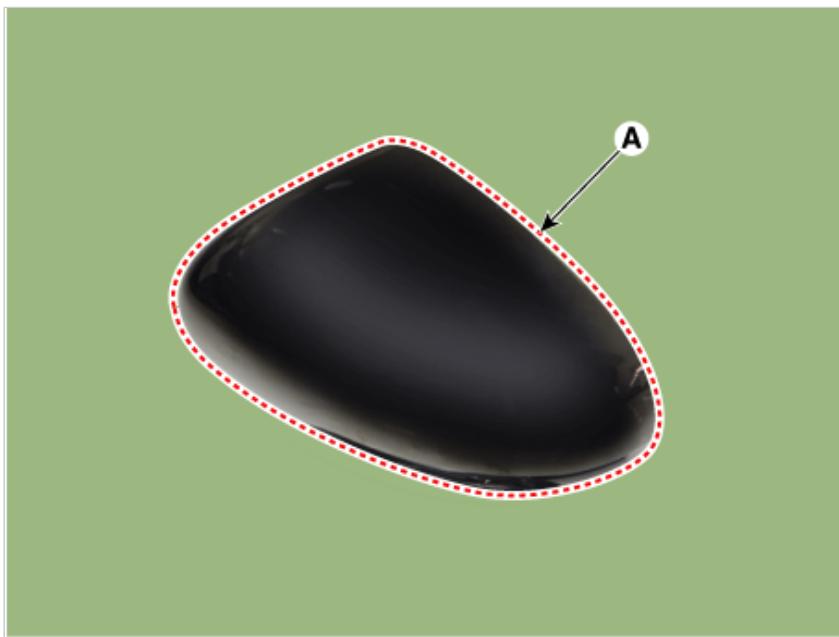

7. Remove the door mirror turn signal lamp (A).

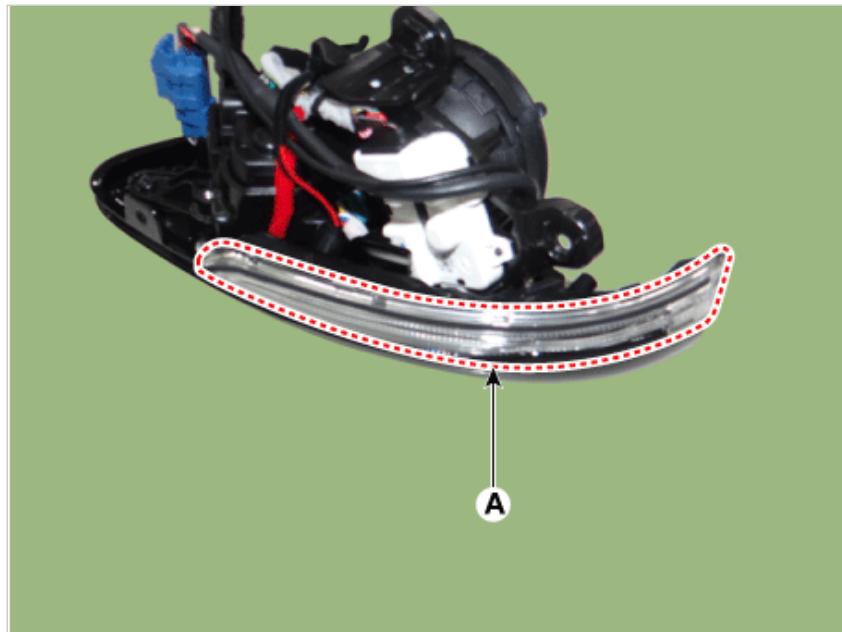

8. Disconnect the connector (A) from the door mirror turn signal lamp.



Installation

Door Mirror Turn Signal Lamp

1. Install the door mirror turn signal lamp after connecting the connector.
2. Install the door mirror back cover.
3. Install the door mirror housings.
4. Connect the heating connectors and BCW indicator connector.
5. Install the mirror.
6. Install the outside rear view mirror.
7. Connect the negative (-) battery terminal.