



Removal

1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, separate the luggage room lamp (A).



3. Disconnect the luggage room lamp connector (A).



Installation

1. Connect the luggage room lamp connector.
2. Install the luggage room lamp.
3. Connect the negative (-) battery terminal.