


Inspection


1. Remove the overhead console lamp assembly then check for continuity between terminals. If the continuity is not as specified, replace the map lamp switch.

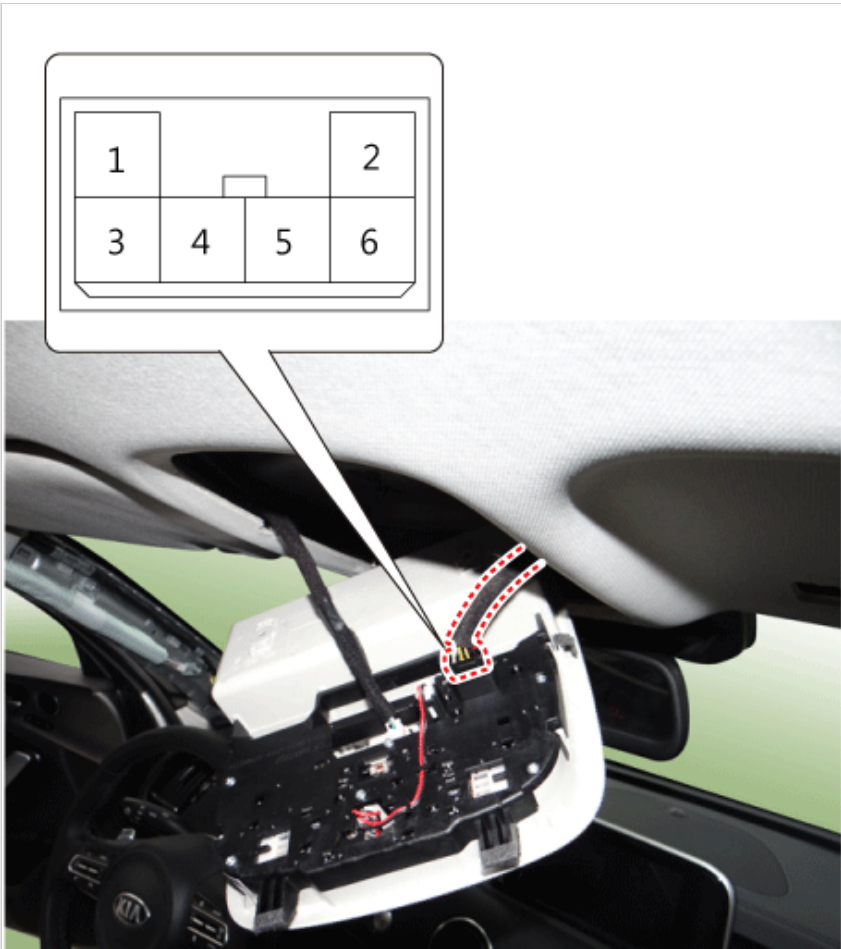

| Item<br>Position<br>Terminal |  | Map lamp switch                                                                     |     |                                                                                     |     |
|------------------------------|--|-------------------------------------------------------------------------------------|-----|-------------------------------------------------------------------------------------|-----|
|                              |  | Left                                                                                |     | Right                                                                               |     |
|                              |  | ON                                                                                  | OFF | ON                                                                                  | OFF |
| 4                            |  |  |     |  |     |
| 6                            |  |  |     |  |     |

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the two mounting screws.  
And then remove the overhead console lamp (A).

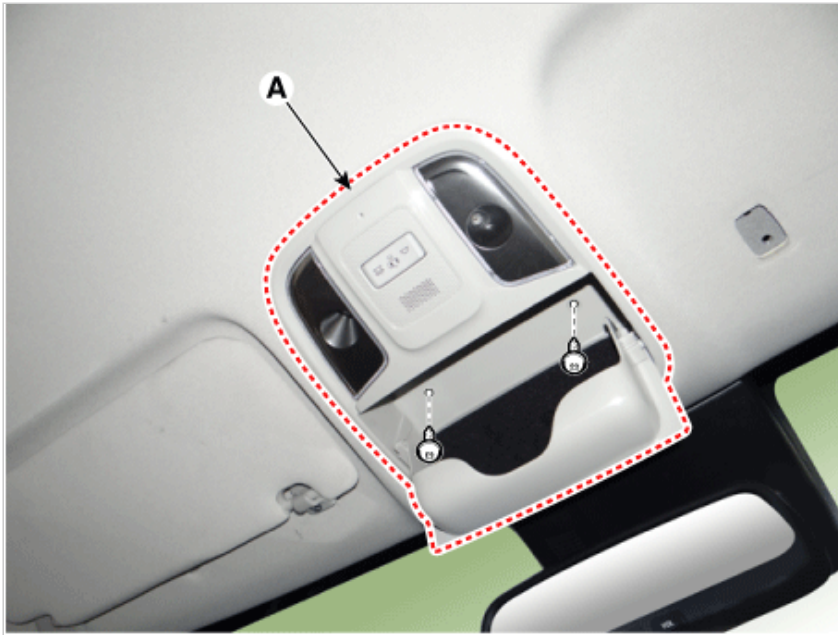

3. Remove the overhead console lamp after disconnecting the connectors (A).



### Installation

1. Connect the overhead console lamp connector.
2. Install the overhead console lamp.
3. Connect the negative (-) battery terminal.