




## Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel.  
**(Refer to Body - "Crash Pad Lower Panel")**
3. Remove the crash pad garnish [LH] (A) after loosening the mounting screw.

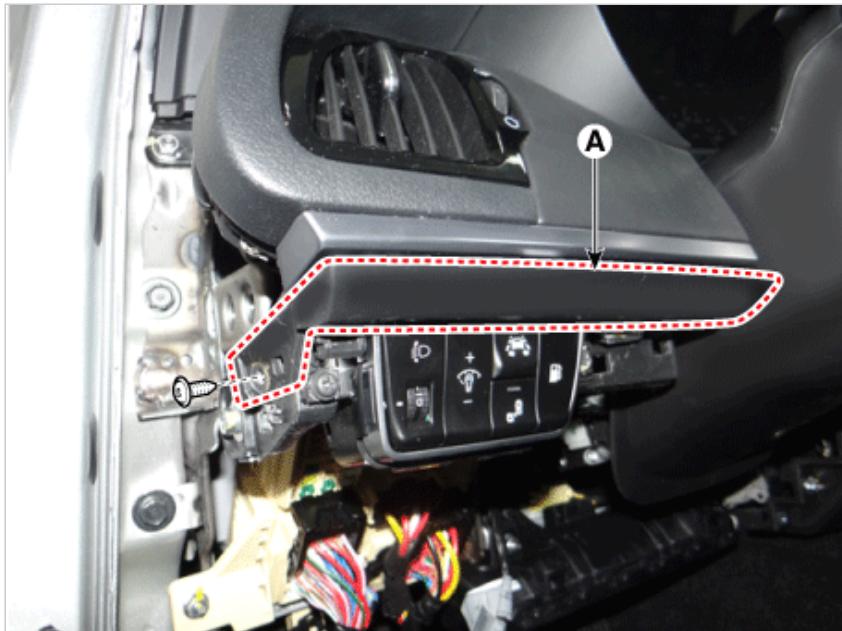

4. Remove the side crash pad switch (A) after loosening the mounting screws.



5. Disconnect the side crash pad switch connector (A).




## Installation

1. Connect the side crash pad switch connector.
2. Install the side crash pad switch.
3. Install the crash pad garnish [LH].
4. Install the crash pad lower panel.
5. Connect the negative (-) battery terminal.

## Inspection

1. Check for intensity of new rheostat switch. If the light intensity of the lamps changes smoothly without any flickering when the rheostat is turned, it can be assumed that the rheostat is normal.

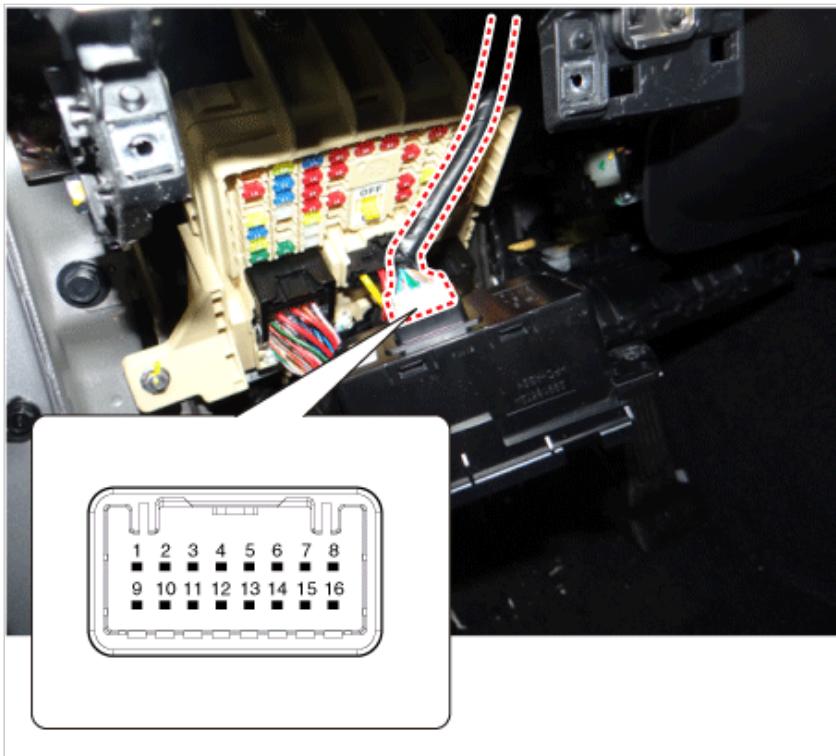

Position Terminal	UP (+)	DOWN (-)	Description
6			Down
20			GND
5			Up
15			Illumination (-)
13			Illumination (+)