





Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the liftgate back panel.
(Refer to Body - "Liftgate Back Panel")
3. Disconnect the license lamp connectors (A).

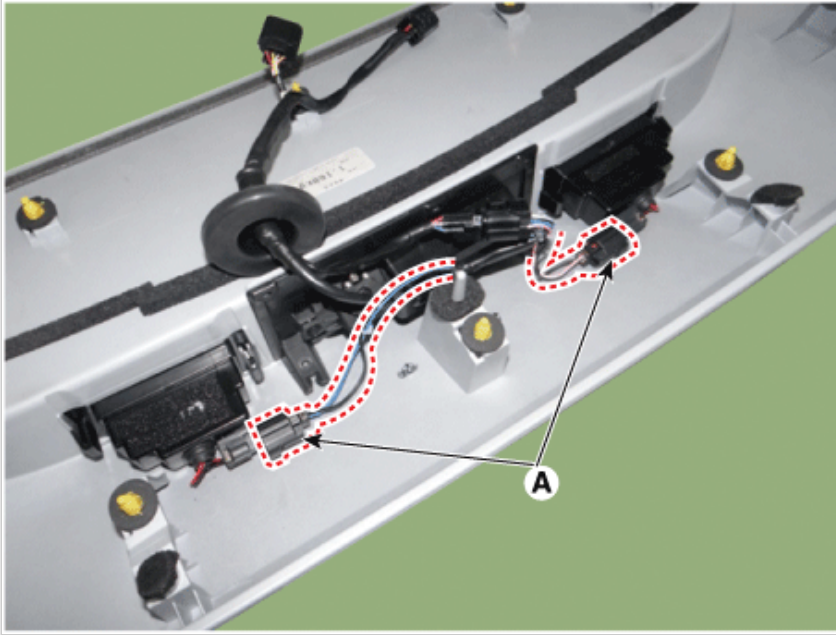

4. Remove the license lamp (A) after pressing the locking pin.

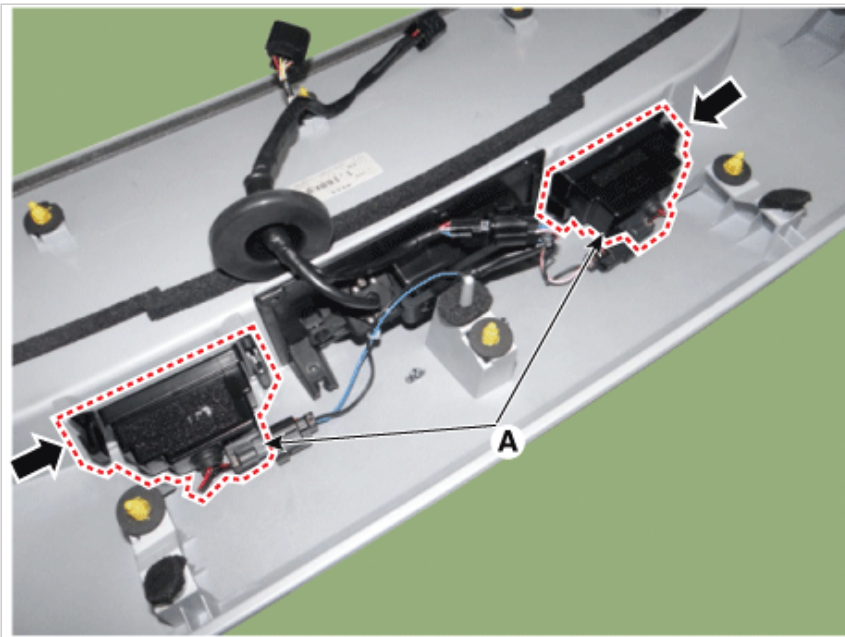

Installation

1. Install the license lamp.
2. Connect the license lamp connector.
3. Install the liftgate back panel.
4. Connect the negative (-) battery terminal.