




Removal

Rear Combination Lamp (Outside)


1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, remove the rear combination lamp cover (A).



3. Remove the rear combination lamp (A) after loosening the mounting screw and nut.

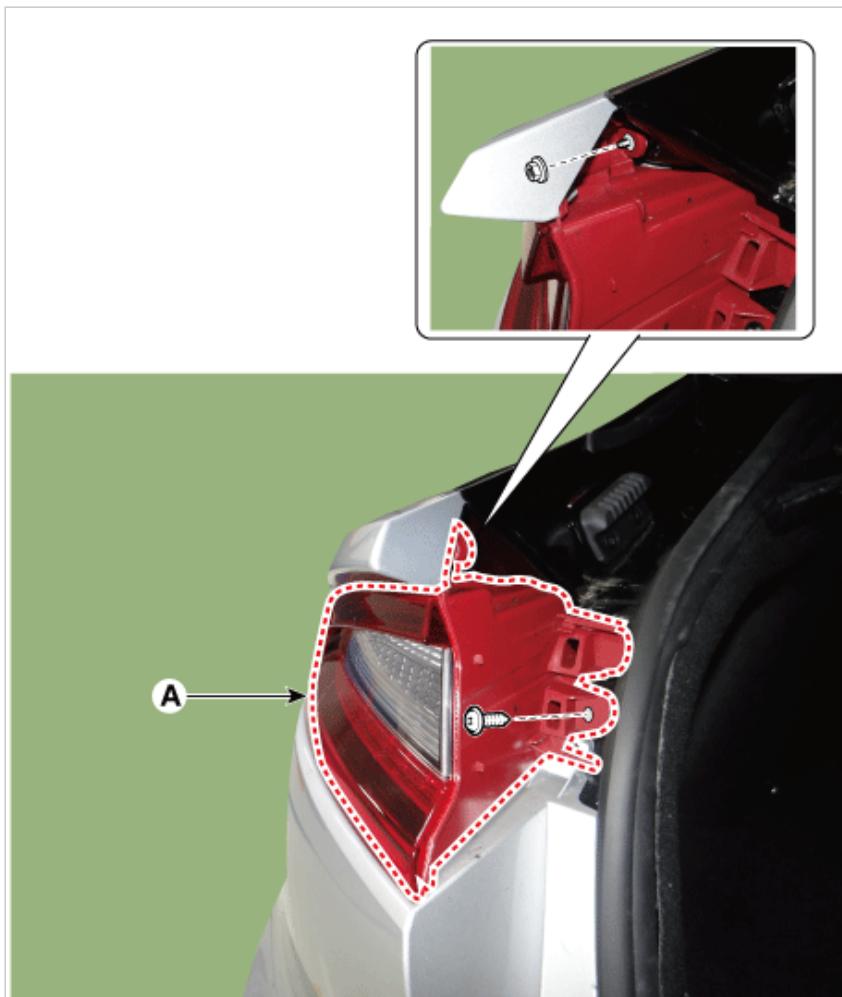


4. Disconnect the rear combination lamp connector (A).

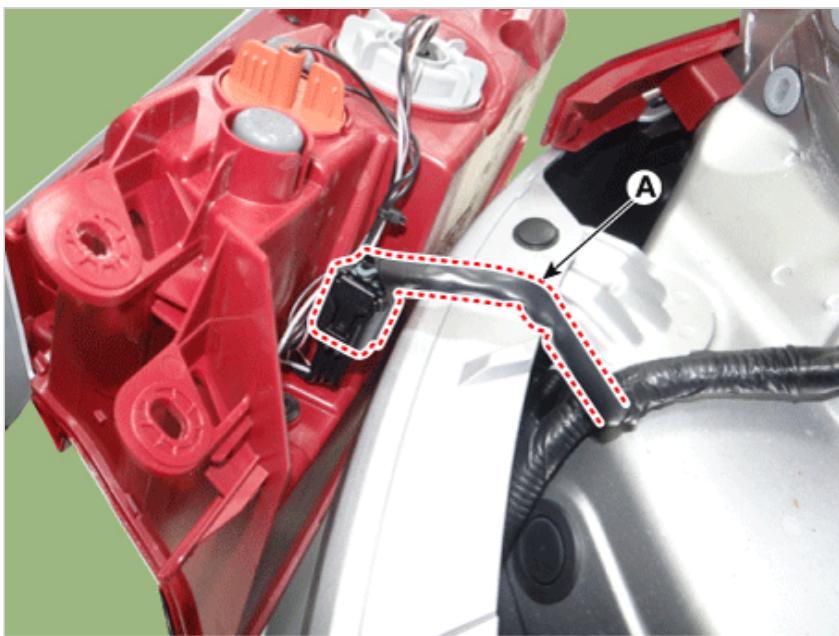

Bulb Replacement


Turn signal lamp

1. Turn the headlamp switch off.
2. Remove the rear combination lamp (outside).
3. Remove the turn signal lamp bulb (B) by turning the socket (A) counterclockwise.

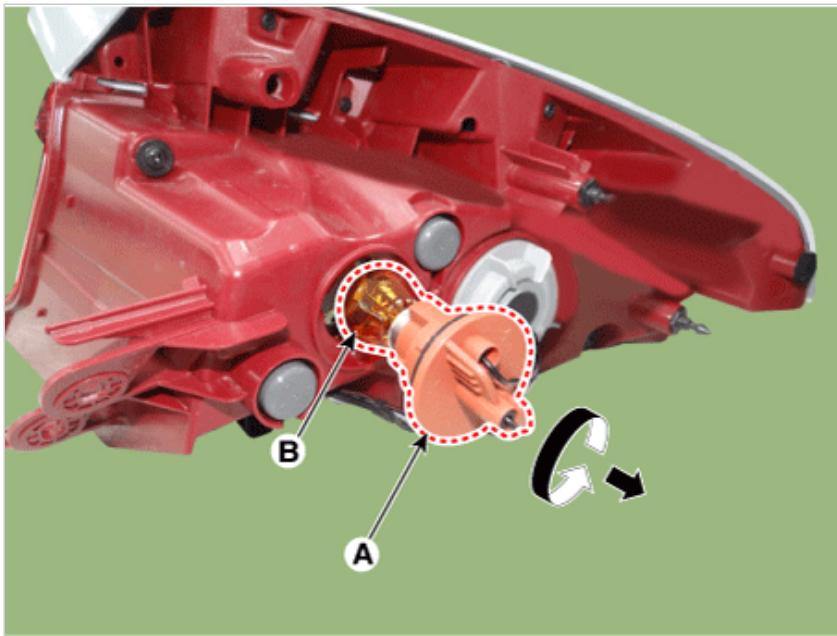


Rear Combination Lamp (Inside)

1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, remove the rear combination lamp cover (A).

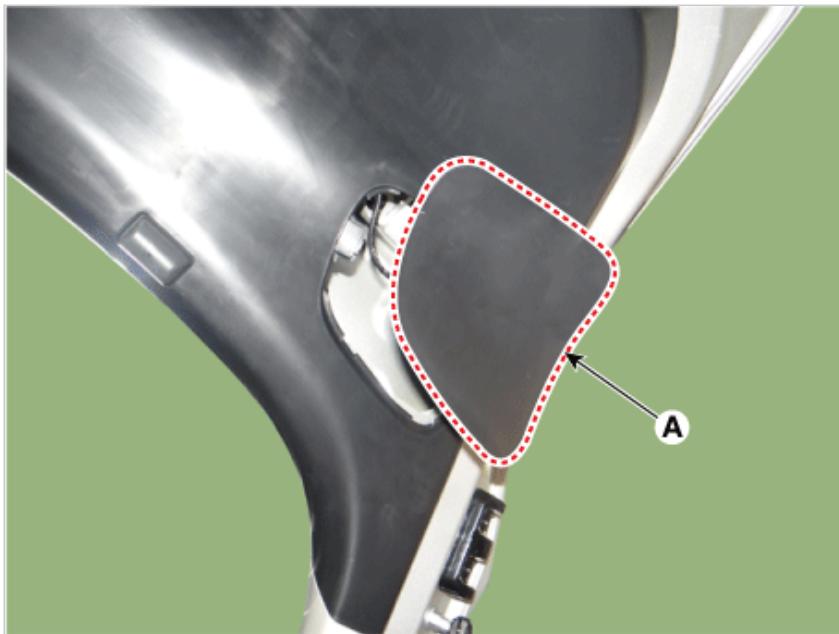

3. Disconnect the connector (B) and then remove the rear combination lamp (A) after loosening the nuts.

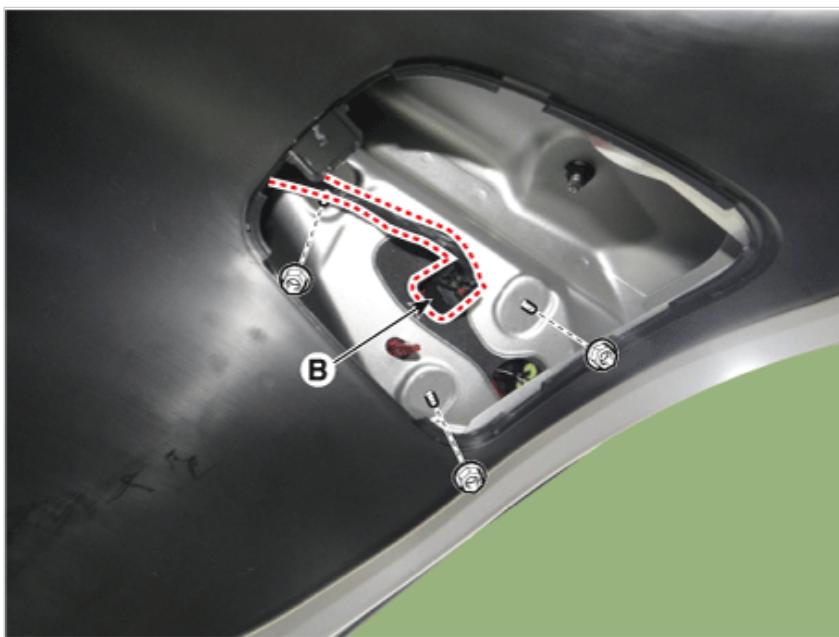




Bulb Replacement

Back up lamp

1. Remove the rear combination lamp. (Inside)
2. Remove the back up lamp bulb (B) by turning the socket (A) counterclockwise.

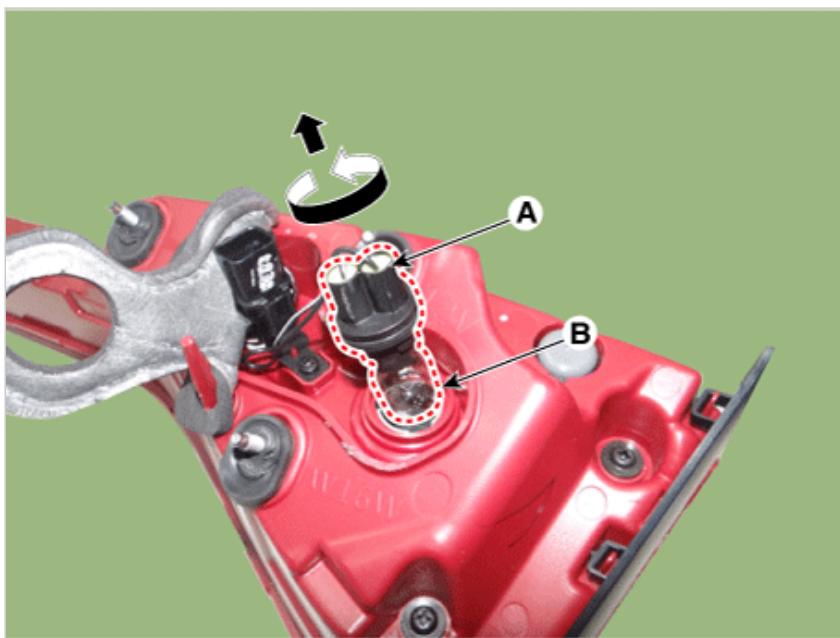

Installation

Rear Combination Lamp (Outside)

1. Connect the rear combination lamp connector.
2. Install the rear combination lamp.
3. Install the rear combination lamp cover.
4. Connect the negative (-) battery terminal.

Rear Combination Lamp (Inside)

1. Install the rear combination lamp.
2. Connect the rear combination lamp connector.

3. Install the rear combination lamp cover.
4. Connect the negative (-) battery terminal.