


Please rate this document after reviewing at the bottom of this page.

COMPONENTS

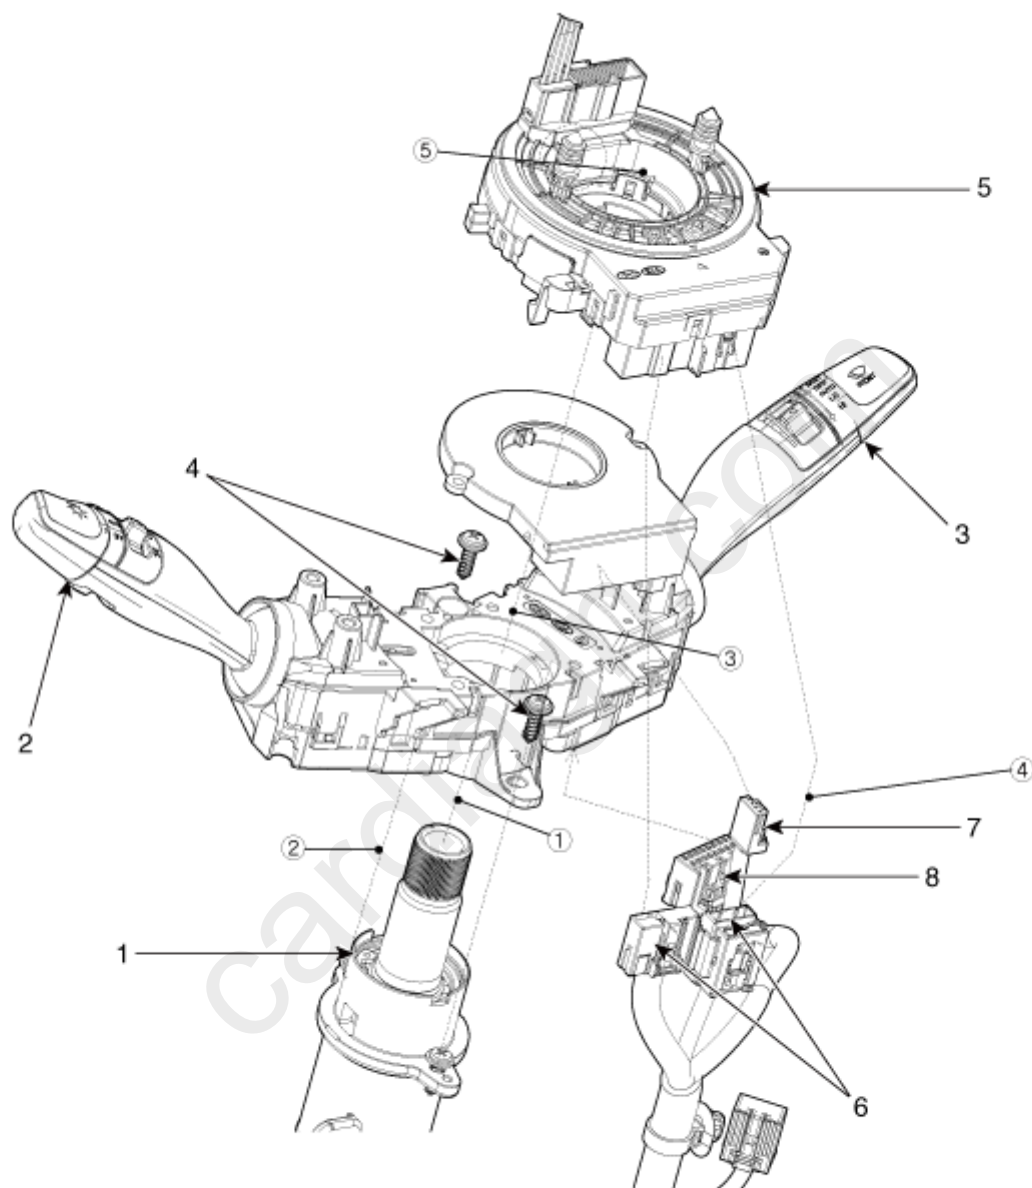



*** Assembly sequence :**

① → ② → ③ → ④ → ⑤


- 1 . Steering column shaft
- 2 . Lighting switch
- 3 . Wiper/Washer switch
- 4 . Screws

- 5 . Clock spring
- 6 . Clock spring connectors
- 7 . Steering angle sensor connector
- 8 . Multifunction connector


[LHD]

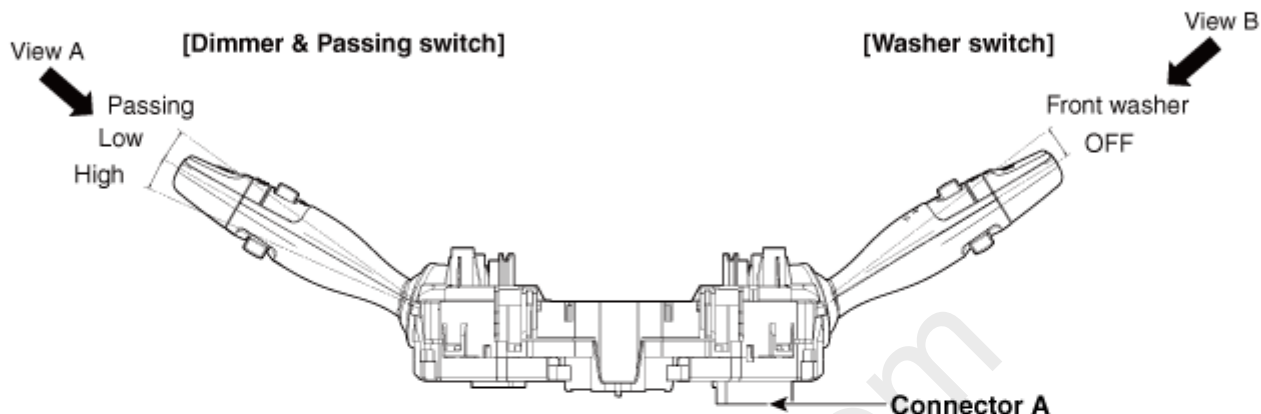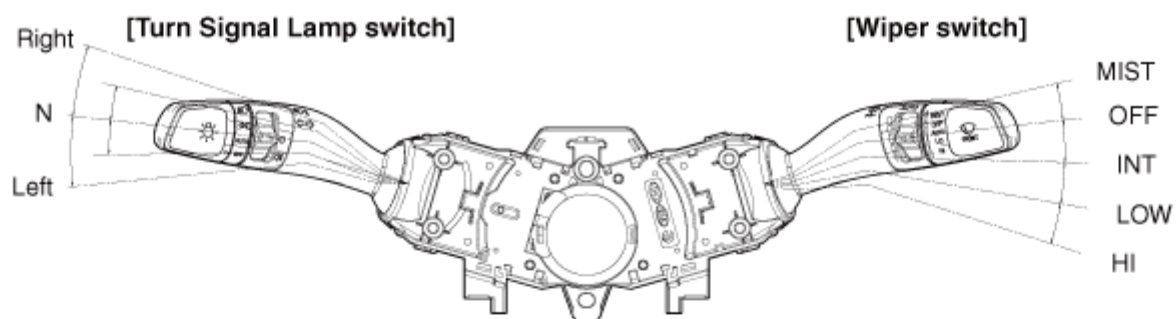

[View A]

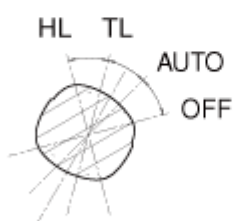


[Auto Lighting Switch]

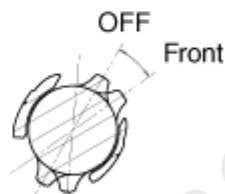

[Fog Lamp Switch]


[View B]

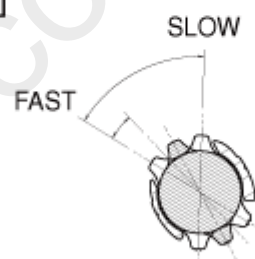


[Intermittent Volume Switch]

Connector A	No.	Description	No.	Description
	1	Front wiper switch	9	Ground
	2	Front wiper low backup switch	10	Fog lamp switch
	3	-	11	Ground
	4	-	12	Turn signal lamp switch
	5	-	13	Dimmer & passing switch
	6	Front washer motor switch	14	Light switch
	7	Front wiper intermittent volume switch	15	Headlamp low backup switch
	8	IGN2	16	-

[RHD]

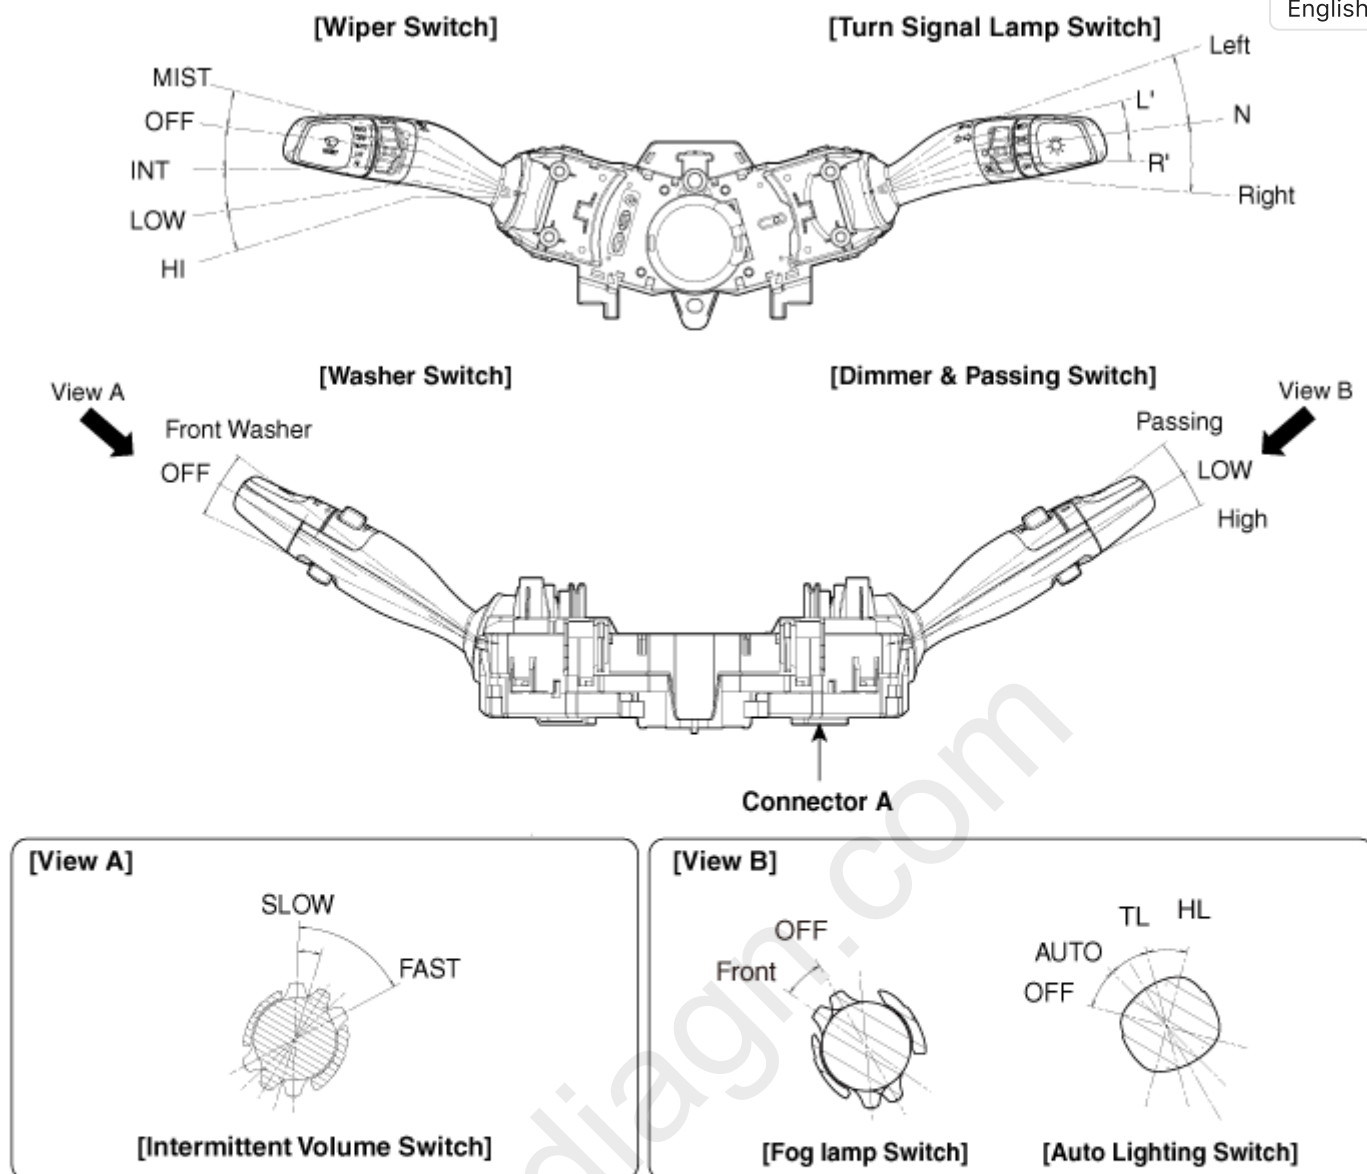

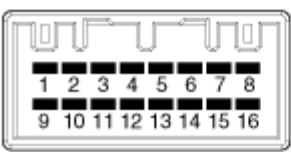Connector A	No.	Description	No.	Description
	1	Front washer motor switch	9	-
	2	Front wiper intermittent volume switch	10	Headlamp low backup switch
	3	Front wiper switch	11	Light switch
	4	-	12	Dimmer & passing switch
	5	-	13	Turn signal lamp switch
	6	Front wiper low backup switch	14	Fog lamp switch
	7	IGN2	15	Ground
	8	-	16	Ground

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.