


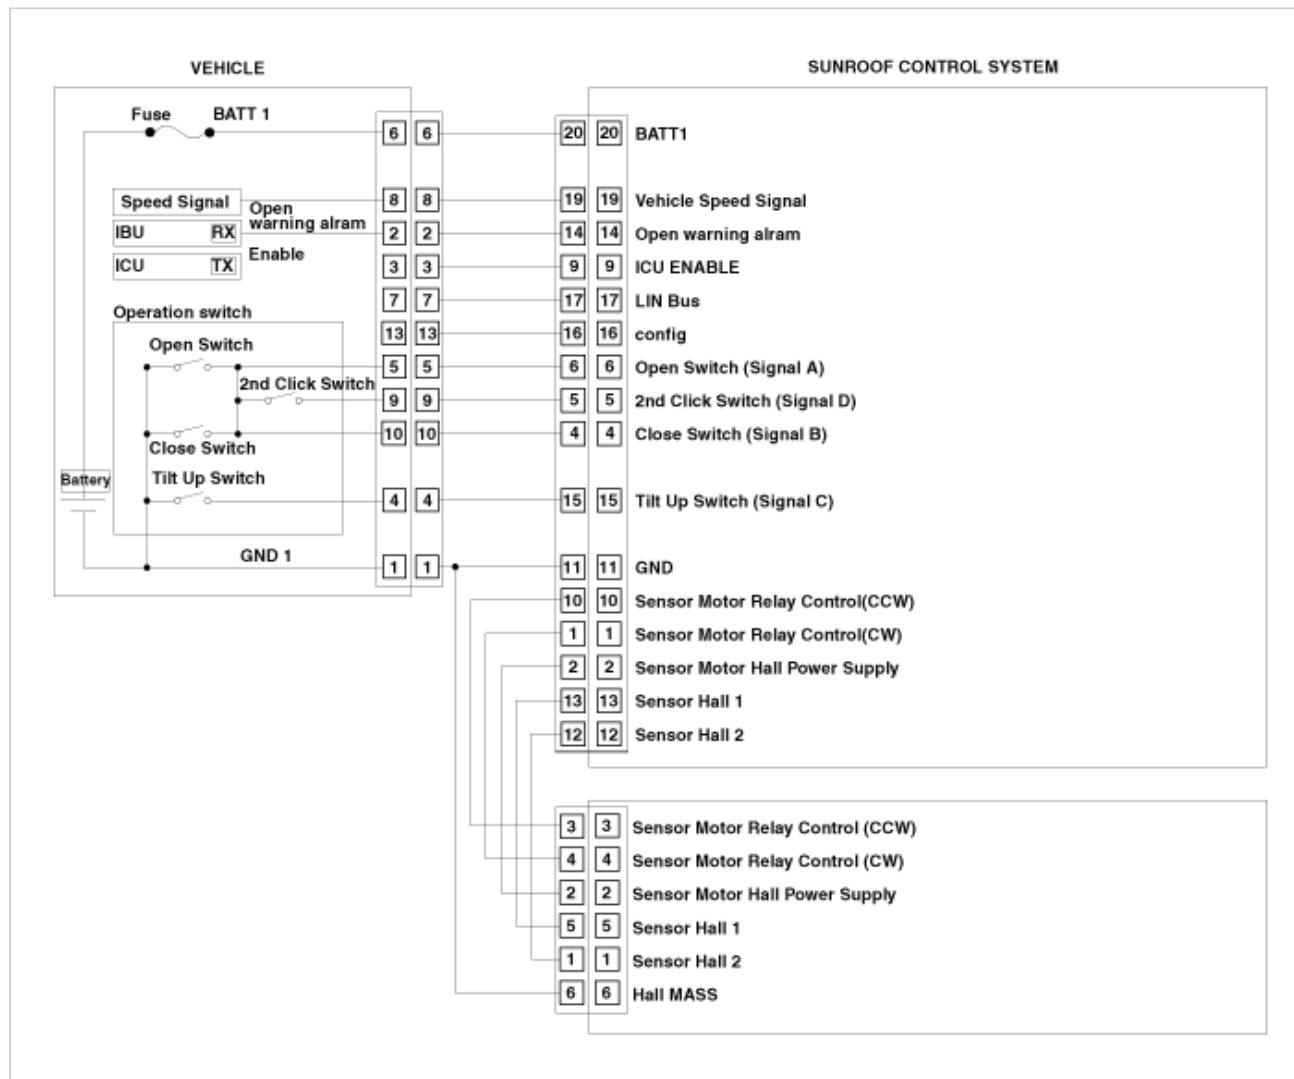

Circuit Diagram



| No. | Sunroof wiring connector (Vehicle side) | Glass motor (Master) | Blind motor (Slave) |
|-----|--|----------------------------------|----------------------------------|
| | | | |
| 1 | Ground 1 | Sensor motor relay control (CCW) | Sensor motor relay control (CCW) |
| 2 | Open warning alram | ICU Enable | Sensor motor relay control (CW) |
| 3 | ICU Enable | - | Sensor hall 1 |
| 4 | Tilt up switch | - | Sensor mass |
| 5 | Open swtich | Open switch | Sensor hall 2 |
| 6 | Battery 1 | 2nd click switch | Sensor motor hall power supply |
| 7 | - | Close switch | |
| 8 | Vehicle speed signal | - | |
| 9 | 2nd click switch | Sensor motor hall power supply | |
| 10 | Close click switch | Sensor motor relay control (CW) | |

| | | |
|----|---|----------------------|
| 11 | - | Battery |
| 12 | - | Vehicle speed signal |
| 13 | - | - |
| 14 | - | LIN Bus |
| 15 | | Config |
| 16 | | Tilt up switch |
| 17 | | Open warning alram |
| 18 | | Sensor hall 1 |
| 19 | | Sensor hall 2 |
| 20 | | Ground |