



Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the overhead console lamp (A) after loosening the mounting screws.



3. Disconnect the overhead console lamp connectors (A).



4. Check for continuity between the terminals. If the continuity is not shown as specified, replace the wide sunroof switch.



Operation Terminal	1	2	3	4	5	6
Manual open	<input type="radio"/>	<input type="radio"/>				
Auto open	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>		
Manual close	<input type="radio"/>		<input type="radio"/>			
Auto close	<input type="radio"/>		<input type="radio"/>		<input type="radio"/>	
Tilt up	<input type="radio"/>		<input type="radio"/>			

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the overhead console lamp (A) after loosening the mounting screws.



3. Disconnect the overhead console lamp connectors (A).




4. Remove the wide sunroof switch knob (A).



5. Disconnect the overhead console lamp connector (A).



6. Remove the overhead console lamp cover (A) after loosening the mounting screws.

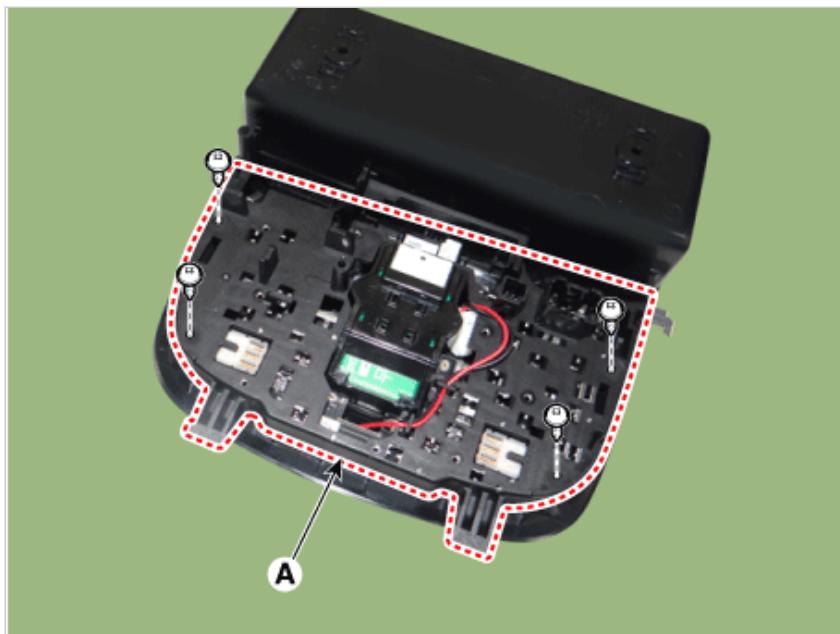

7. Remove the wide sunroof switch (A) after loosening the mounting screws.



Installation

1. Install the wide sunroof switch.
2. Install the overhead console lamp cover.
3. Connect the overhead console lamp connector.
4. Install the wide sunroof switch knob.
5. Connect the overhead console lamp connectors.
6. Install the overhead console lamp.
7. Connect the negative (-) battery terminal.