
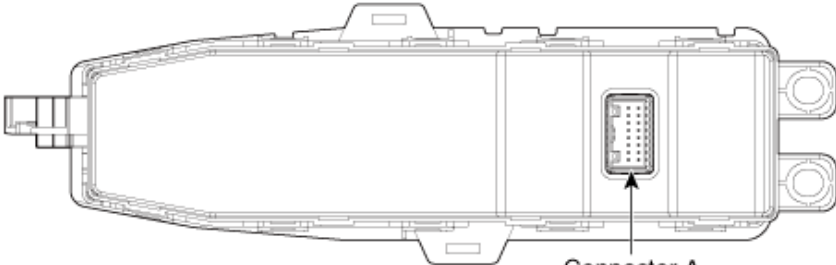
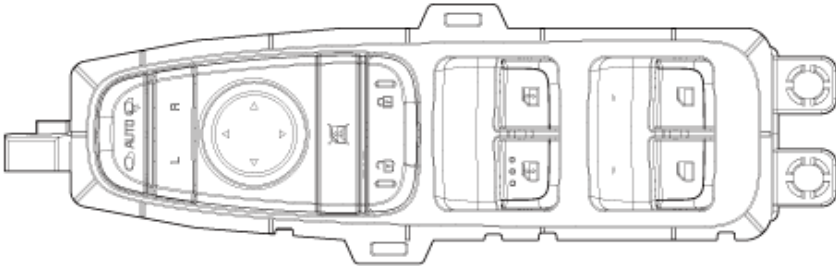


Components


Driver Power Window Switch

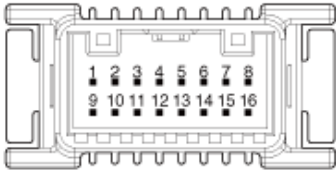

Connector A

Connector A	No.	Front Safety + IMS	Front Safety + Non-IMS
	1	Driver door unlock switch_input	Driver door unlock switch_input
	2	B-CAN (Low)	B-CAN (Low)
	3	B-CAN (High)	B-CAN (High)
	4	Ground	Ground
	5	LIN CAN	-
	6	-	-
	7	Assist safety power window motor	Assist safety power window motor
	8	Battery (+)	Battery (+)
	9	Ground	Ground
	10	-	Door mirror folding motor
	11	-	Door mirror unfolding motor
	12	IMS Switch_input	-
	13	-	Door mirror switch (LH/RH)
	14	-	Door mirror switch (Up/Down)
	15	Driver safety power window motor	Driver safety power window motor
	16	IGN 1	IGN 1


Assist Power Window Switch

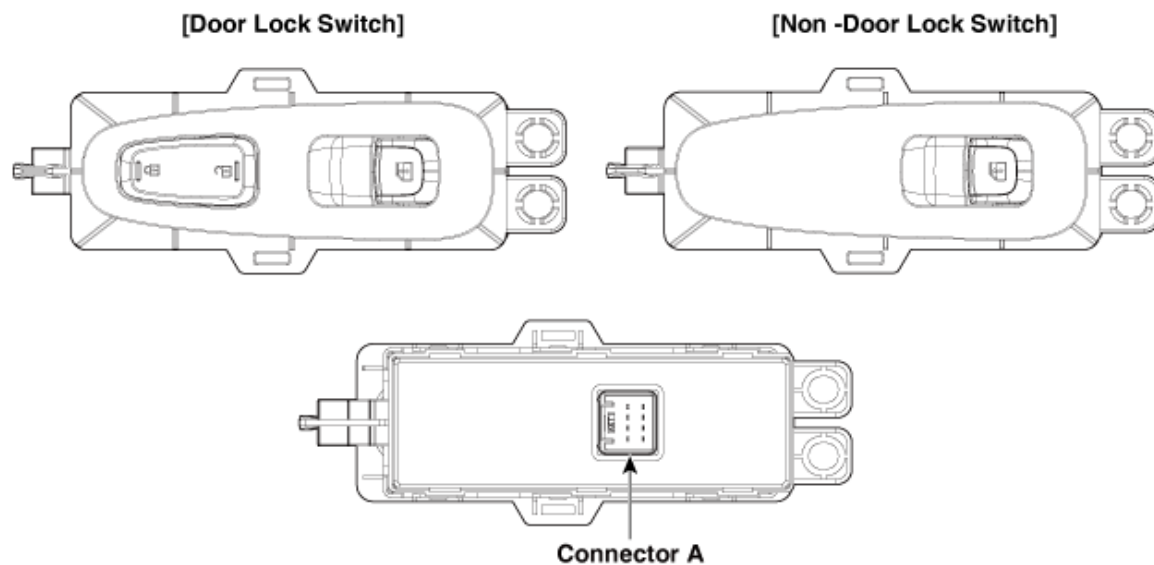



Connector A	No.	Door Lock Switch	Non-Door Lock Switch
	1	Illumination (-)	Illumination (-)
	2	Door lock switch	-
	3	Door unlock switch	-
	4	Illumination (+)	Illumination (+)
	5	Ground	Ground
	6	-	-
	7	Assist safety power window motor	Assist safety power window motor
	8	-	-

Rear Power Window Switch


[Seat Warmer Switch]

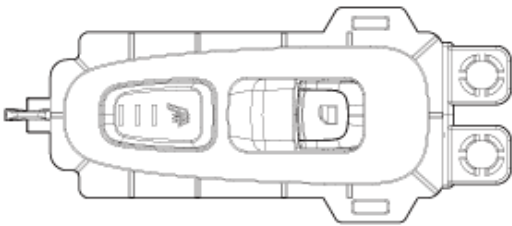

[Non-Seat Warmer Switch]

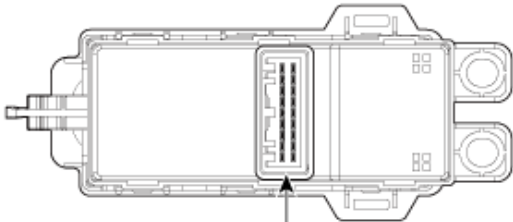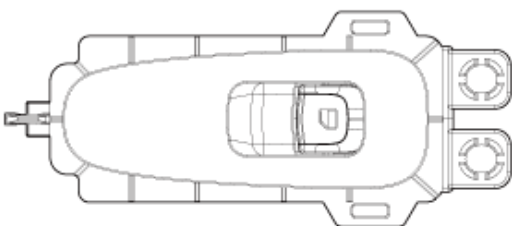

Connector A

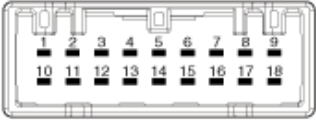Connector A	No.	Seat Warmer Switch	Non-Seat Warmer Switch
	1	-	-
	2	Seat warmer indicator (High)	-
	3	Seat warmer indicator (Mid)	-
	4	Seat warmer indicator (Low)	-
	5	Seat warmer switch	-
	6	Illumination (+)	Illumination (+)
	7	-	-
	8	Illumination (-)	Illumination (-)
	9	-	-
	10	Battery (+)	Battery (+)
	11	Enable	Enable
	12	Driver power window (Up)	Driver power window (Up)
	13	Power window motor (Up)	Power window motor (Up)
	14	-	-
	15	Power window motor (Down)	Power window motor (Down)
	16	Driver power window (Down)	Driver power window (Down)
	17	-	-
	18	Ground	Ground