



Circuit Diagram

Front Seat Heater Switch

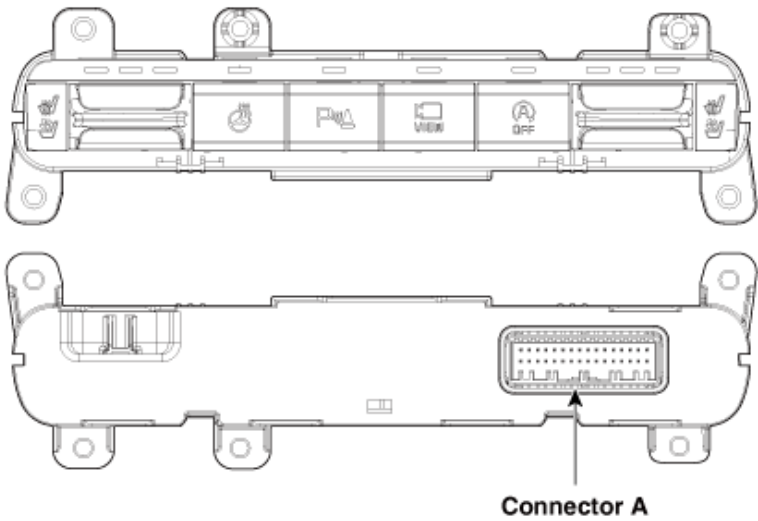

Connector A			
No.	Description	No.	Description
1	RH seat heater mode signal	17	IGN
2	RH seat ventilation mode signal	18	Illumination (+)
3	RH seat heater indicator (Max)	19	-
4	RH seat heater indicator (Mid)	20	Illumination (-)
5	RH seat heater indicator (Min)	21	-
6	RH seat ventilation indicator (Max)	22	Steering wheel heater indicator
7	RH seat ventilation indicator (Mid)	23	PDW Indicator
8	RH seat ventilation indicator (Min)	24	AVM Indicator
9	LH seat ventilation indicator (Max)	25	Steering wheel heater signal
10	LH seat ventilation indicator (Mid)	26	PDW Signal
11	LH seat ventilation indicator (Min)	27	AVM Signal
12	LH seat heater indicator (Max)	28	ISG Signal
13	LH seat heater indicator (Mid)	29	ISG Indicator
14	LH seat heater indicator (Min)	30	Detent
15	LH seat ventilation mode signal	31	-
16	LH seat heater mode signal	32	Ground

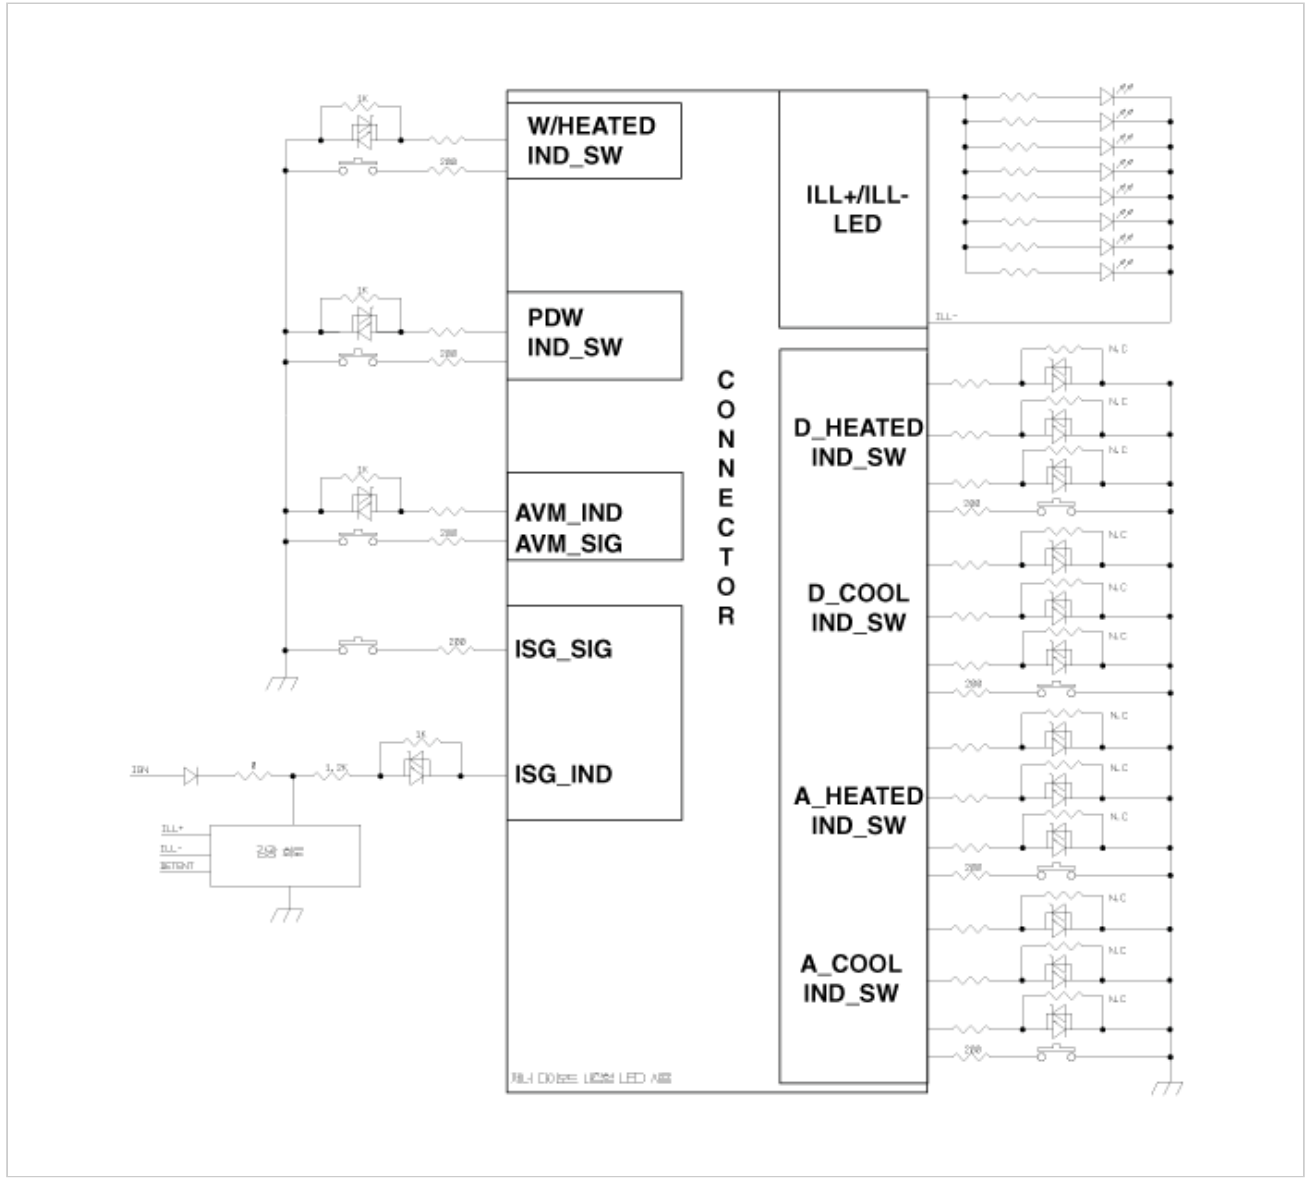

Rear Seat Heater Switch

