




Component Location

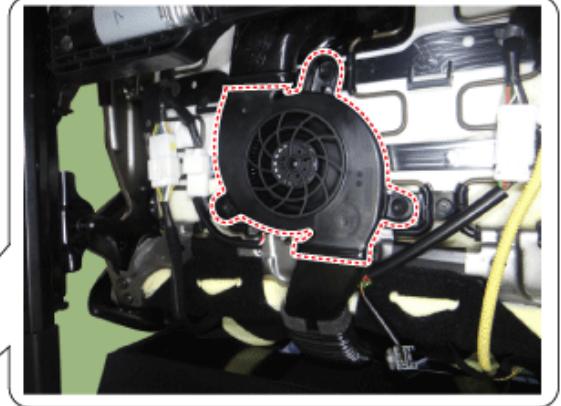

[1]



[2]

1. Seat ventilation blower

2. Seat ventilation unit (Assist seat only)