


Please rate this document after reviewing at the bottom of this page.

## REMOVAL


1. Disconnect the negative (-) battery terminal.
2. Remove the overhead console lamp.  
**(Refer to Lighting System - "Overhead Console Lamp")**
3. Disconnect the overhead console lamp connector (A).



4. Remove the overhead console lamp cover (A) after loosening the mounting screws.

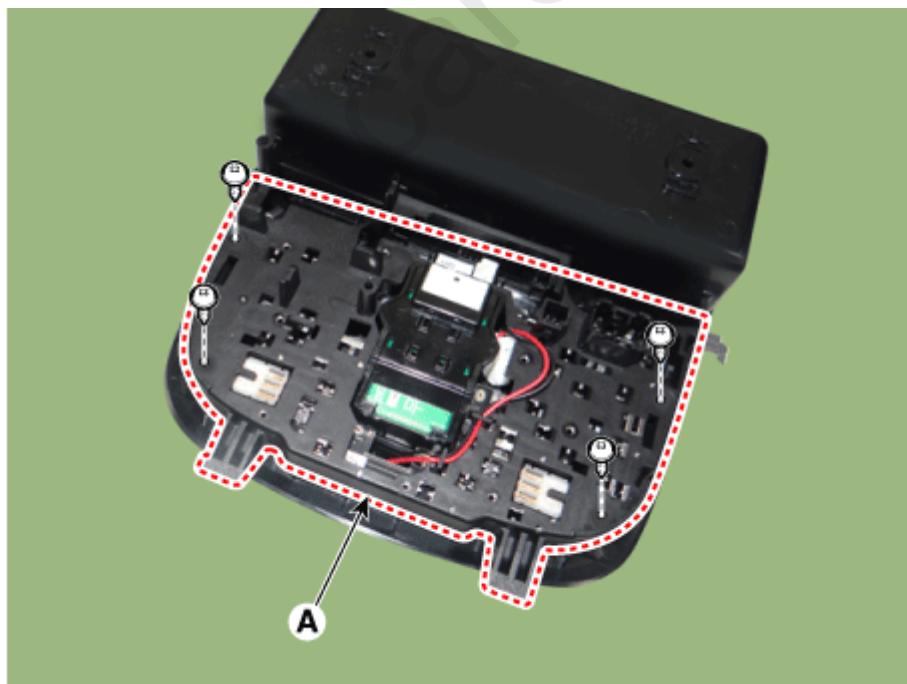

5. Remove the eCall button (A) after loosening the mounting screws.

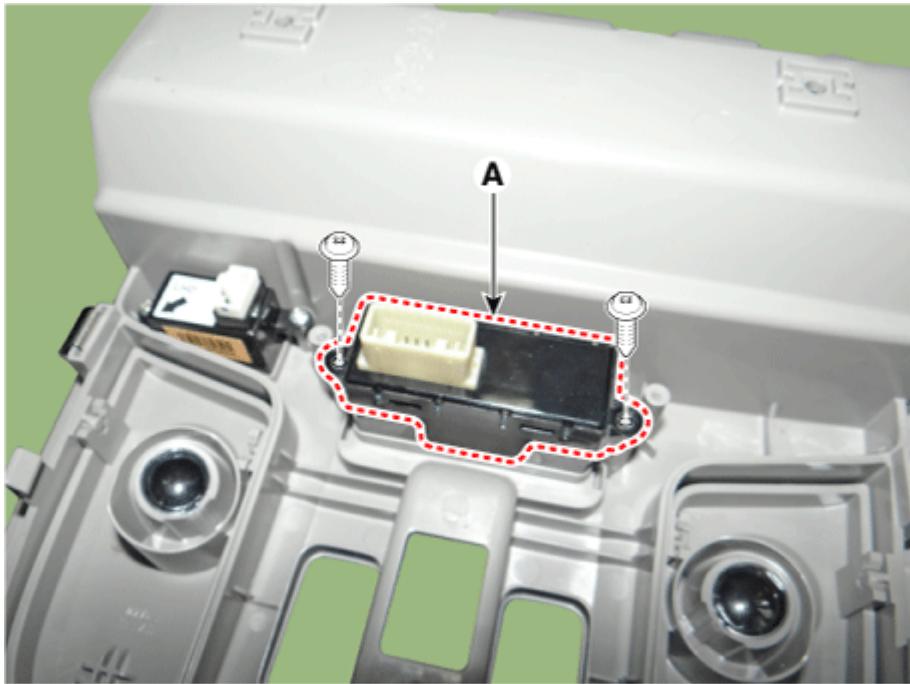

## INSTALLATION

1. Install the eCall button.
2. Install the overhead console lamp cover.
3. Connect the overhead console lamp connector.
4. Install the overhead console lamp after connecting the connector.
5. Connect the negative (-) battery terminal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**