




Components Location

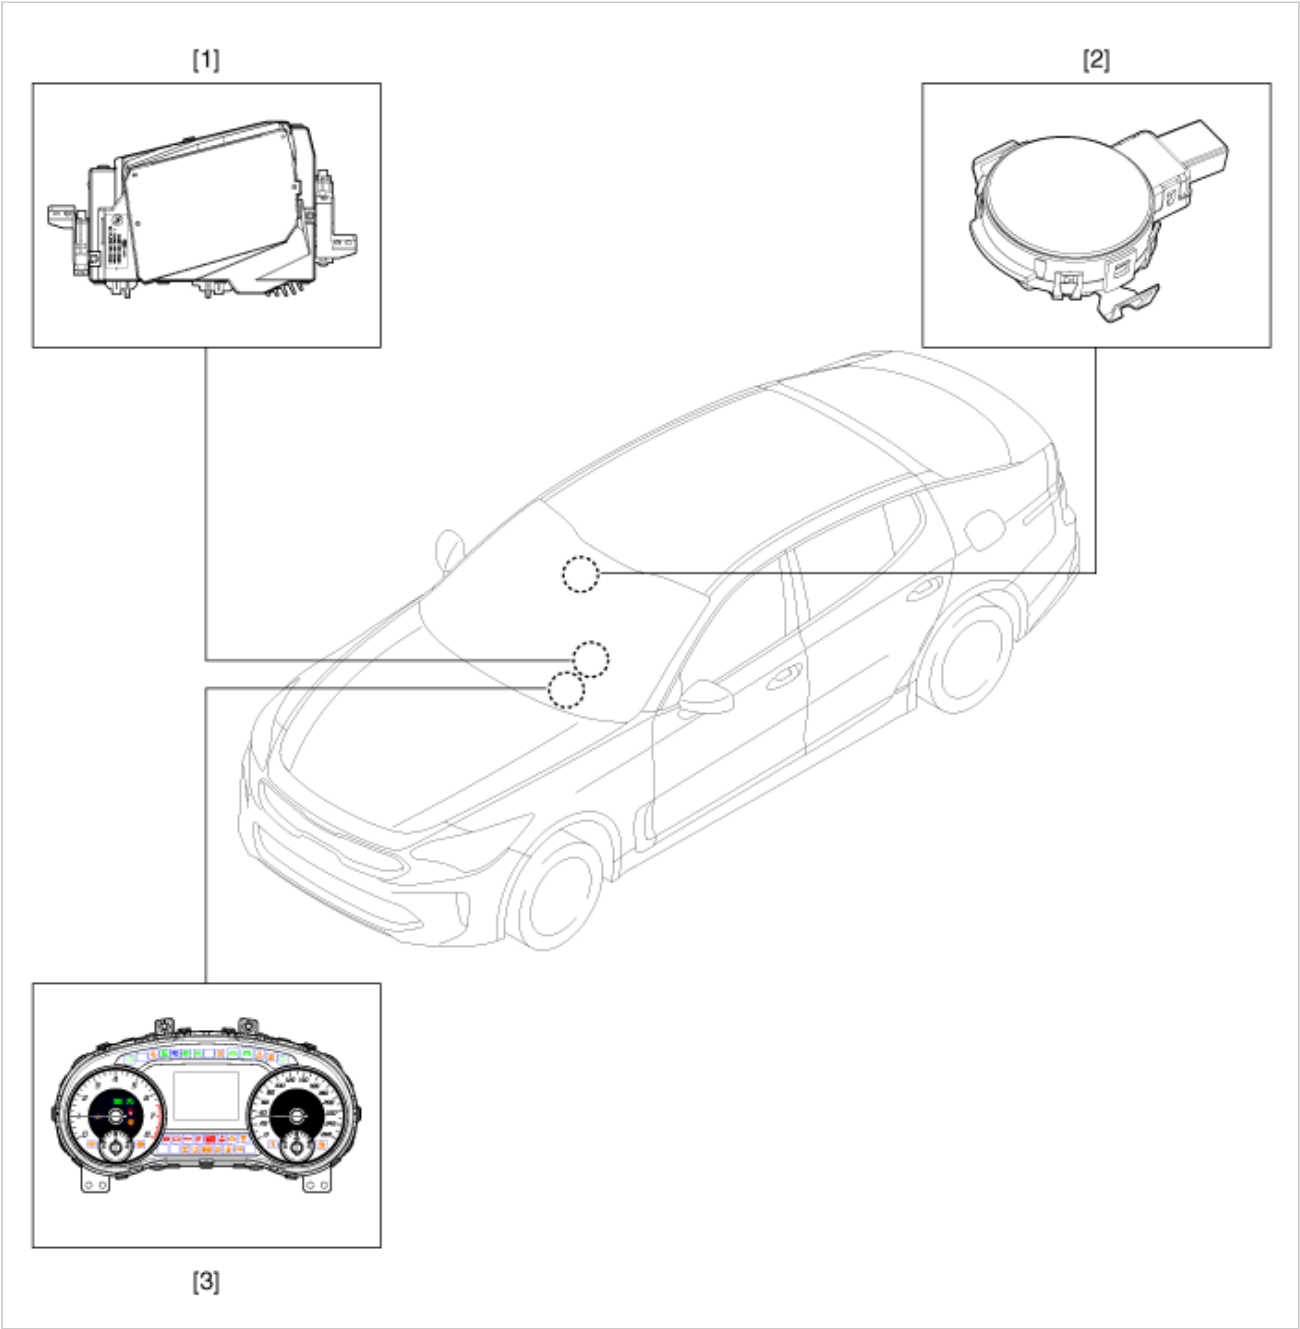

1. Head Up Display (HUD)
2. Ambient light sensor
3. Cluster (User setting menu ON/OFF, Display brightness)