




Component Location Index

[Engine Room]

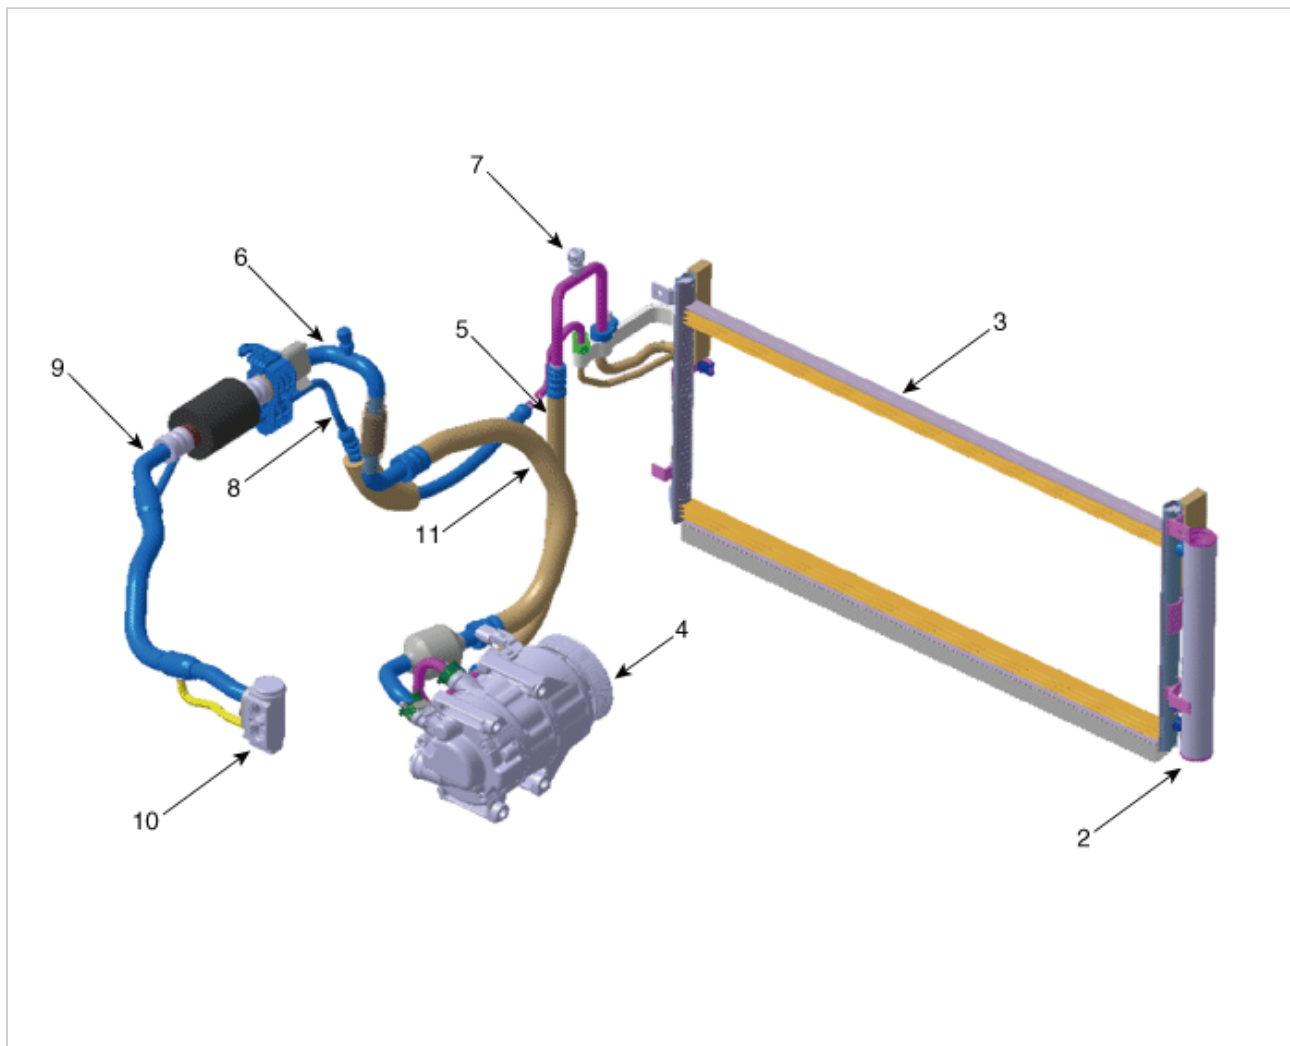

1. Ambient sensor
2. Receiver drier
3. Condenser
4. Compressor
5. Discharge hose
6. Service port (Low pressure)

7. Service port (High pressure)
8. A/C Pressure Transducer (APT)
9. Suction & Liquid tube assembly
10. Expansion valve
11. Suction hose

Interior



- 1. Auto Defogging Sensor
- 2. Photo Sensor
- 3. Heater & Blower Unit

- 4. Evaporator Temperature Sensor
- 5. Heater & A/C Control Unit (DATC)