




Inspection


1. Turn the ignition switch ON.
2. Connect the KDS/GDS.
3. Flash an intensive light onto the photo sensor using a lamp, and check the change in output voltage.
4. The voltage will increase with higher light intensity and decrease with lower light intensity.

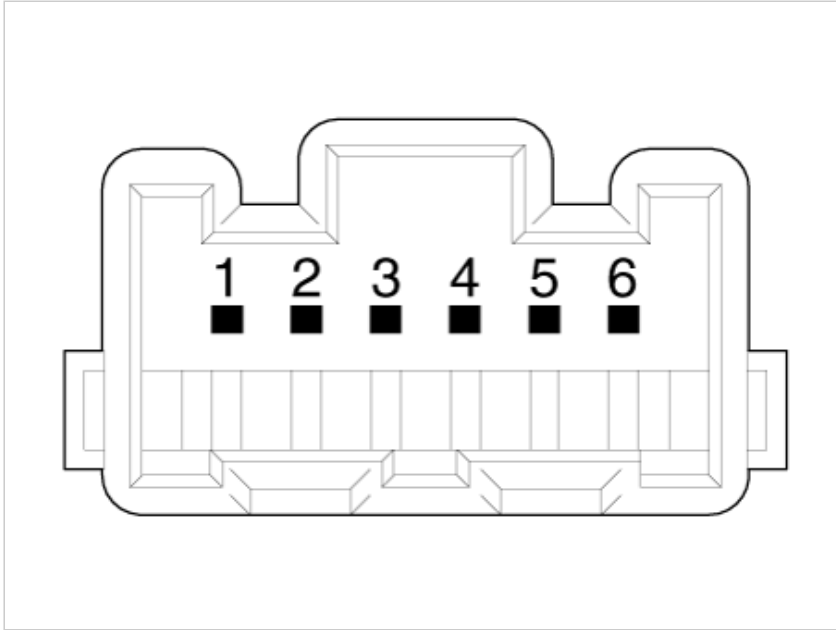


- | | |
|--------------------------|----------------------|
| 1. Auto light ground | 4. Photo signal (RH) |
| 2. Auto light power (5V) | 5. Photo power |
| 3. Auto light signal | 6. Photo signal (LH) |

Replacement


1. Disconnect the negative (-) battery terminal.
2. Using a scraper or remover, remove the crash pad center speaker grille (A).

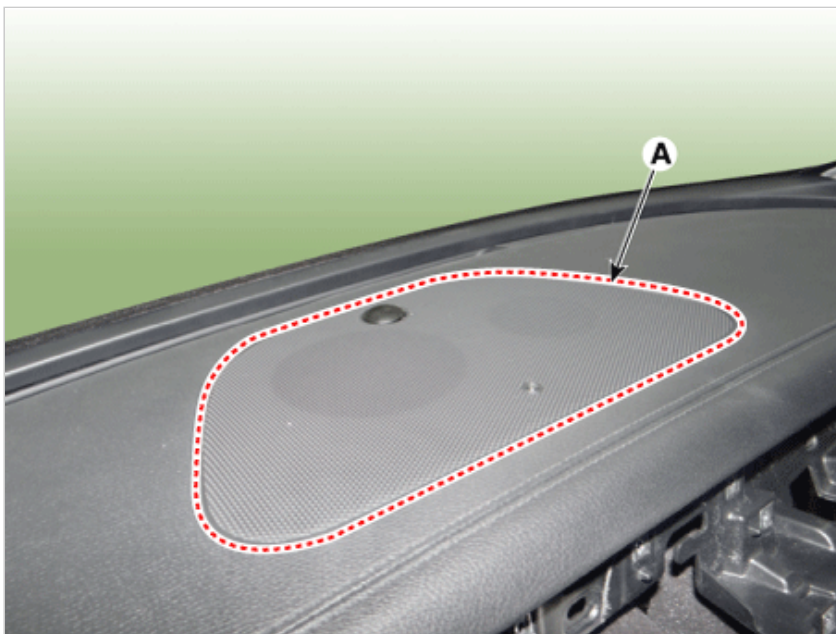

3. Disconnect the security connector (A) and auto light & Photo sensor connector (B).

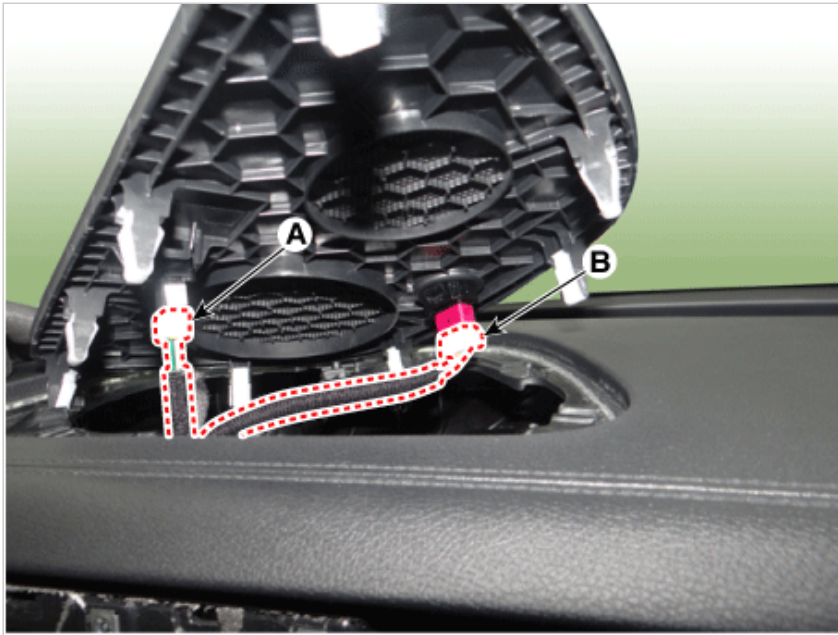

4. Remove the auto light sensor (A) after releasing the fixed hooks.

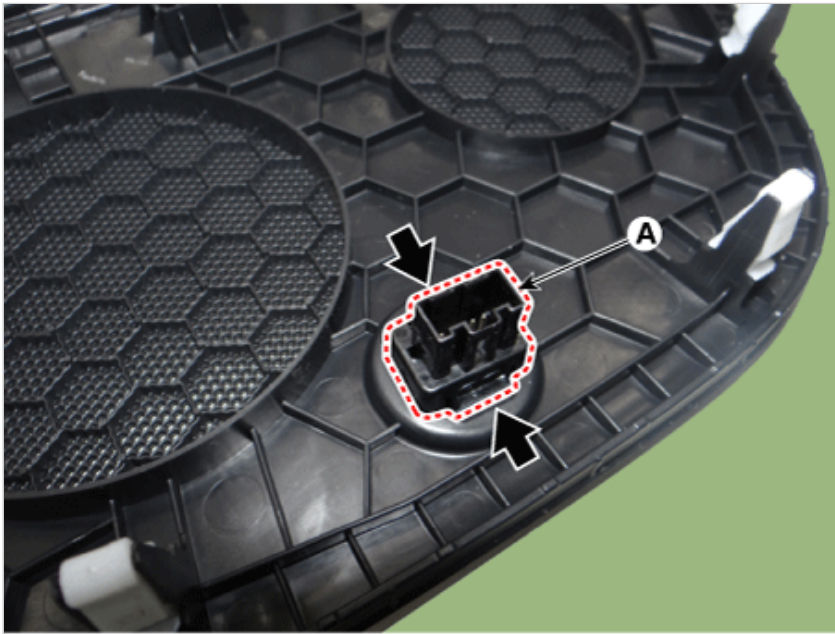

5. Install in the reverse order of removal.