



Components Location

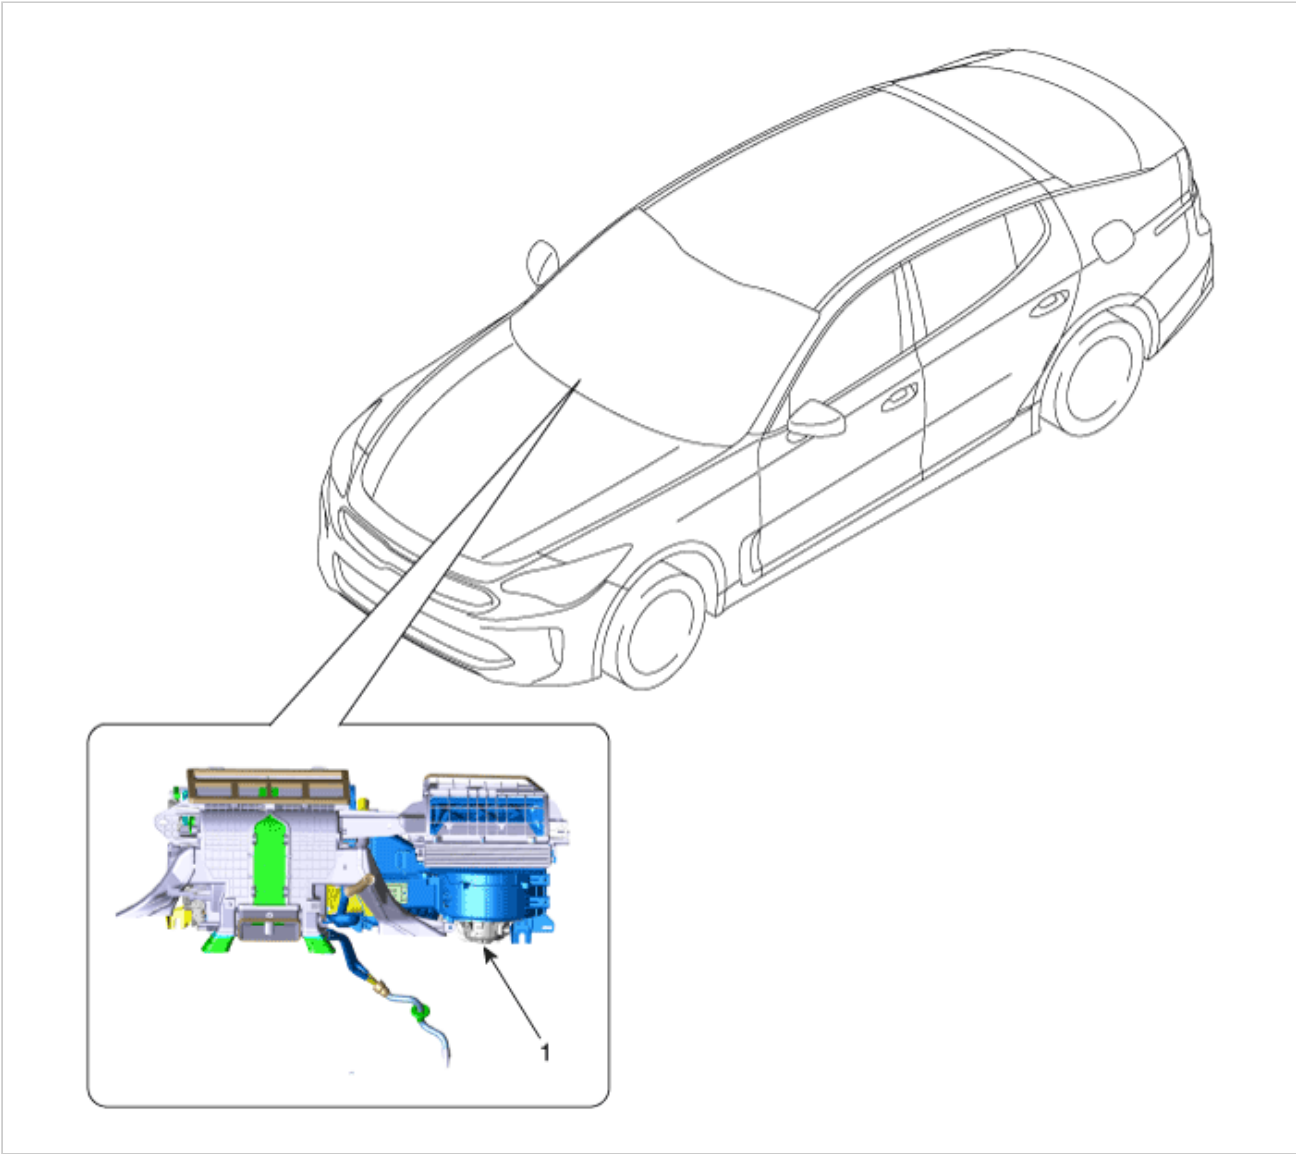

1. Blower Unit

Components

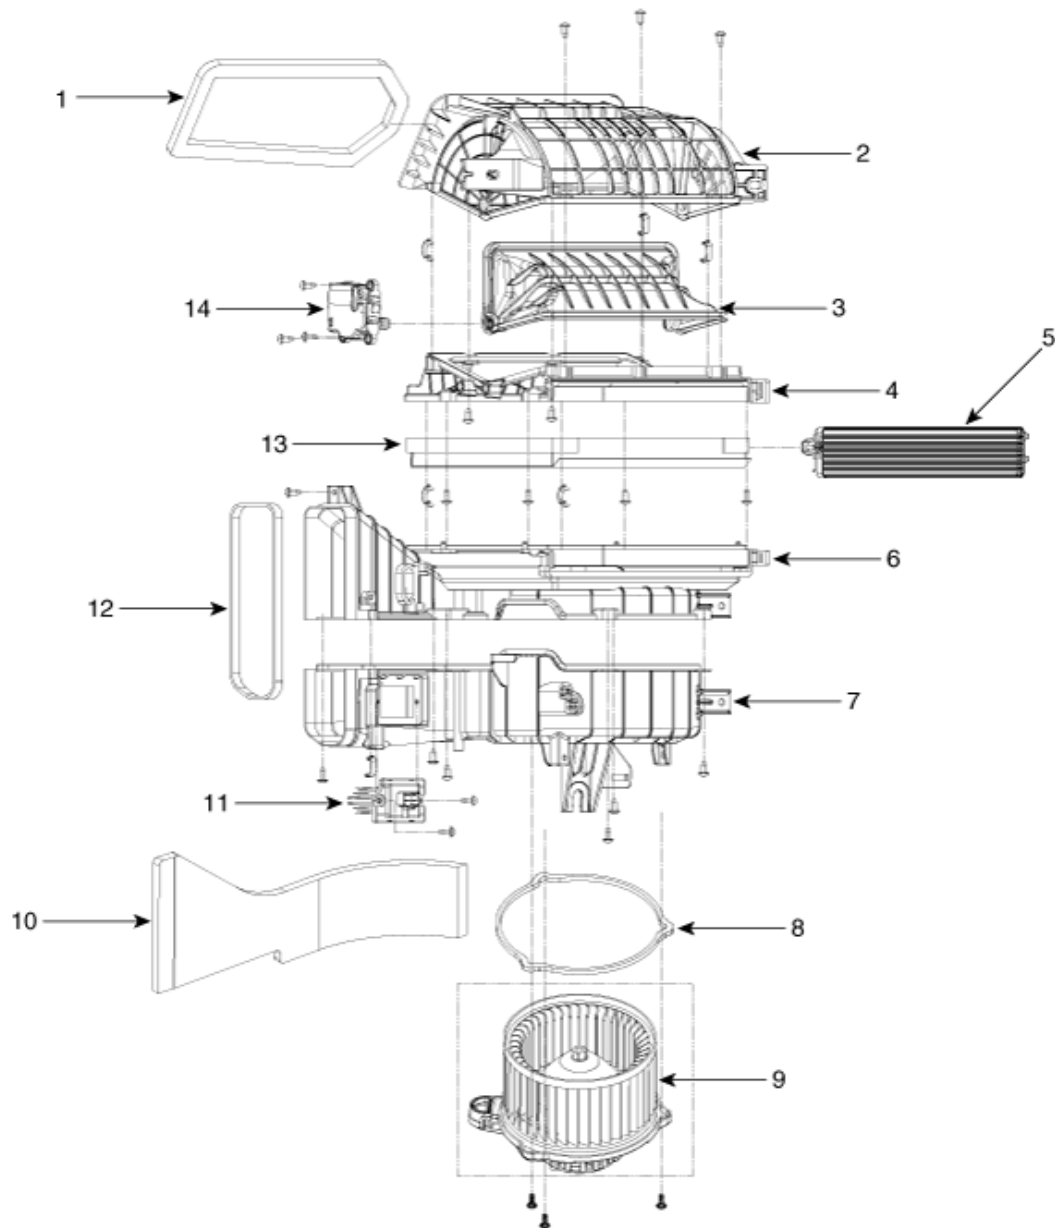

1. Inlet seal
2. Inlet duct case [Upper]
3. Inlet door assembly
4. Inlet case [Lower]
5. Air filter cover
6. Blower case [Upper]
7. Blower case [Lower]

8. Blower motor seal
9. Blower motor assembly
10. Anti noise pad
11. FET
12. Blower evaporator seal
13. Air filter
14. Intake actuator