



Description

Located in the blower unit, the intake actuator regulates the intake door by a signal from the control unit. Pressing the intake selection switch will shift between recirculation and fresh air modes.