




Inspection

Check the brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir.

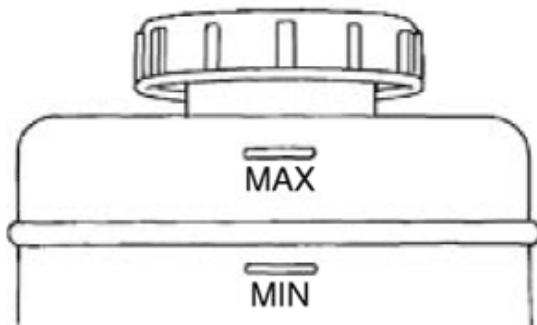

Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification.

Check the brake system for any leakage if the fluid level is extremely low (lower than MIN).