



Inspection

1. Check the drive shaft boots for loose clamps, cracks, grease leaks, kinks or damage.

