



Inspection

[Theta-II 2.0 T-GDI / Lambda-II 3.3 T-GDI]

Check the valve clearance.

If necessary, adjust the valve clearance by replacing the tappets.