



Description

The cooling fan operates in 2 stages (HIGH/LOW). The ECM controls the cooling fan according to the coolant temperature, vehicle speed and A/C operation.