




Removal and Installation


1. Remove the engine and transmission assembly.
(Refer to Engine and Transmission Assembly - "Engine and Transmission Assembly")
2. Remove the automatic transmission.
(Refer to Automatic Transmission System - "Automatic Transmission")
3. Remove the adapter plate (A) and the drive plate (B).

Tightening torque :

71.6 - 75.5 N·m (7.3 - 7.7 kgf·m, 52.8 - 55.7 lb·ft)

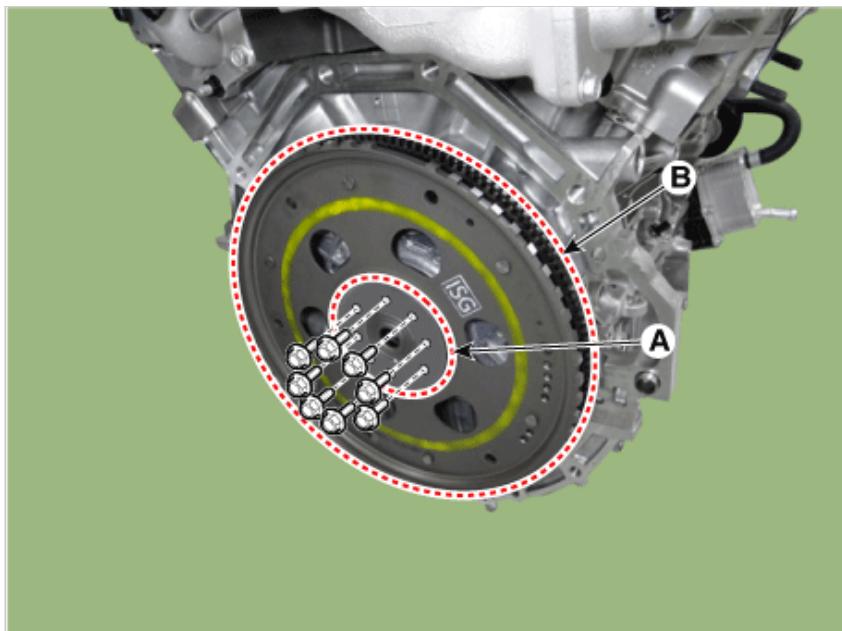

4. Remove the crankshaft adapter (A).

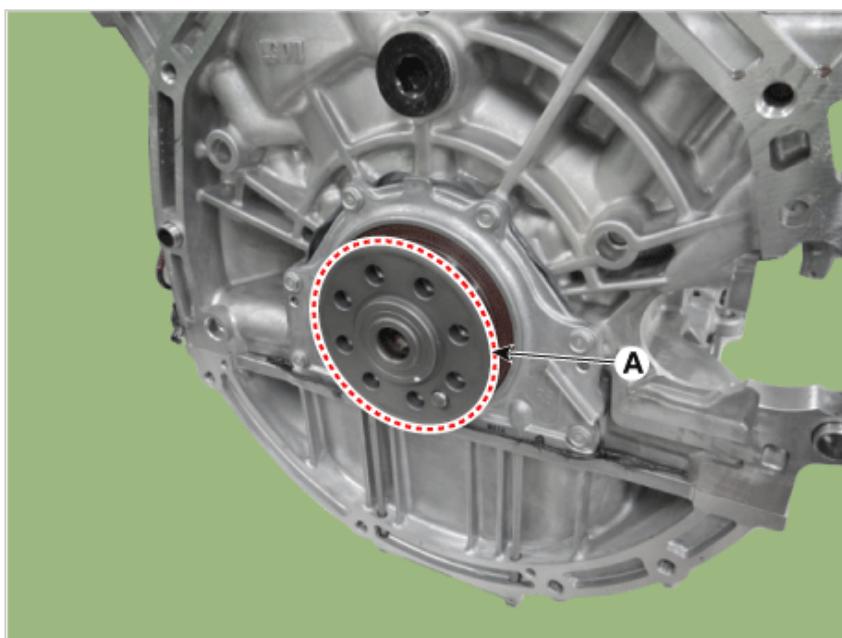

5. Install in the reverse order of removal.