




## Components

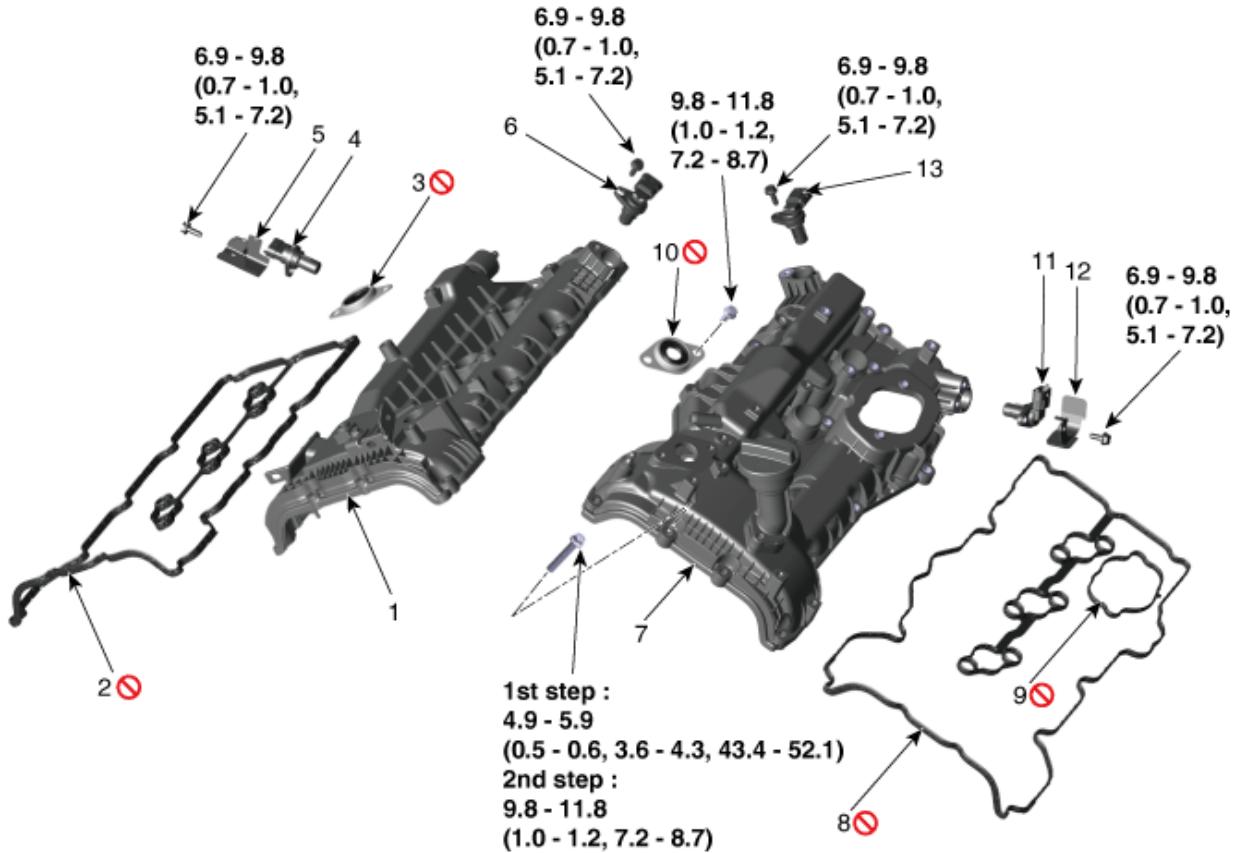

### Torque : N·m (kgf·m, lb·ft, lb·in)

- |   |  |
|---|--|
| 1. RH Cylinder head cover                           | 7. LH Cylinder head cover                            |
| 2. RH Cylinder head cover gasket                    | 8. LH Cylinder head cover gasket                     |
| 3. RH Oil control valve (OCV) cap                   | 9. High pressure fuel pump gasket                    |
| 4. RH Exhaust camshaft position sensor (CMPS)       | 10. LH Oil control valve (OCV) cap                   |
| 5. RH Exhaust camshaft position sensor (CMPS) cover | 11. LH Exhaust camshaft position sensor (CMPS)       |
| 6. RH Intake camshaft position sensor (CMPS)        | 12. LH Exhaust camshaft position sensor (CMPS) cover |
|   | 13. LH Intake camshaft position sensor (CMPS)        |