


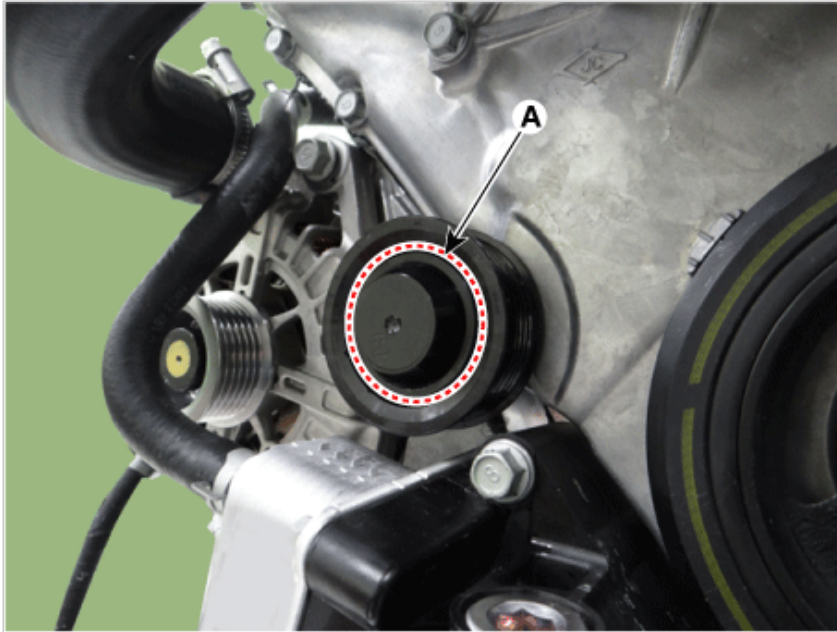

Removal and Installation


1. Disconnect the negative battery terminal.
2. Remove the engine room front under cover.
(Refer to Engine and Transmission Assembly - "Engine Room Under Cover")
3. Separate the drive belt.
(Refer to Drive Belt System - Drive Belt")
4. Remove the idler cap cover (A).



5. Remove the idler (A).

Tightening torque :

53.9 - 55.9 N·m (5.5 - 5.7 kgf·m, 39.8 - 41.2 lb·ft)

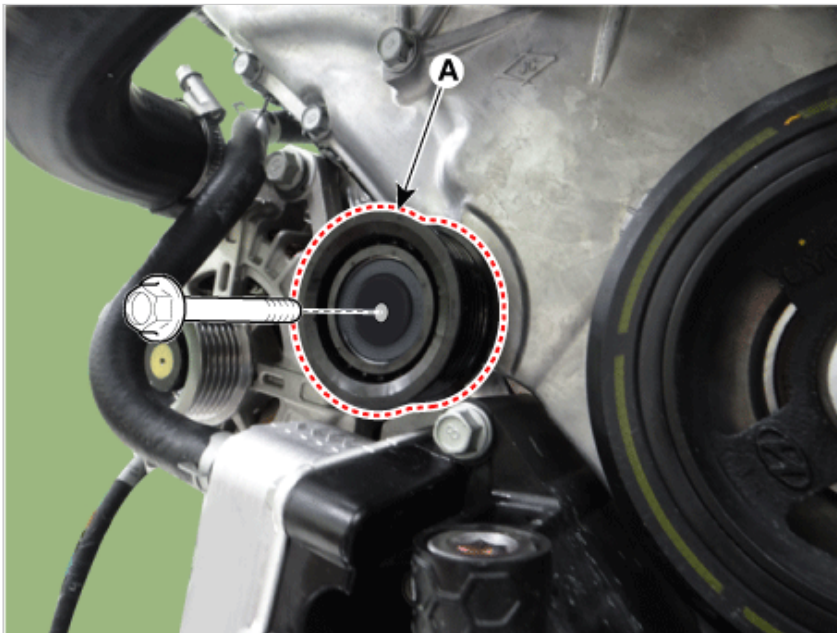

6. Install in the reverse order of removal.

Inspection

Check the idler for excessive oil leakage, abnormal rotation or vibration. Replace if necessary.