



Removal and Installation

1. Disconnect the negative battery terminal.
2. Remove the engine room front under cover.
(Refer to Engine and Transmission Assembly - "Engine Room Under Cover")
3. Separate the drive belt.
(Refer to Drive Belt System - Drive Belt")
4. Remove the drive belt auto tensioner (A).


Tightening torque

Bolt (B) :

81.4 - 85.3 N·m (8.3 - 8.7 kgf·m, 60.0 - 62.9 lb·ft)

Bolt (C) :

17.7 - 21.6 N·m (1.8 - 2.2 kgf·m, 13.0 - 15.9 lb·ft)

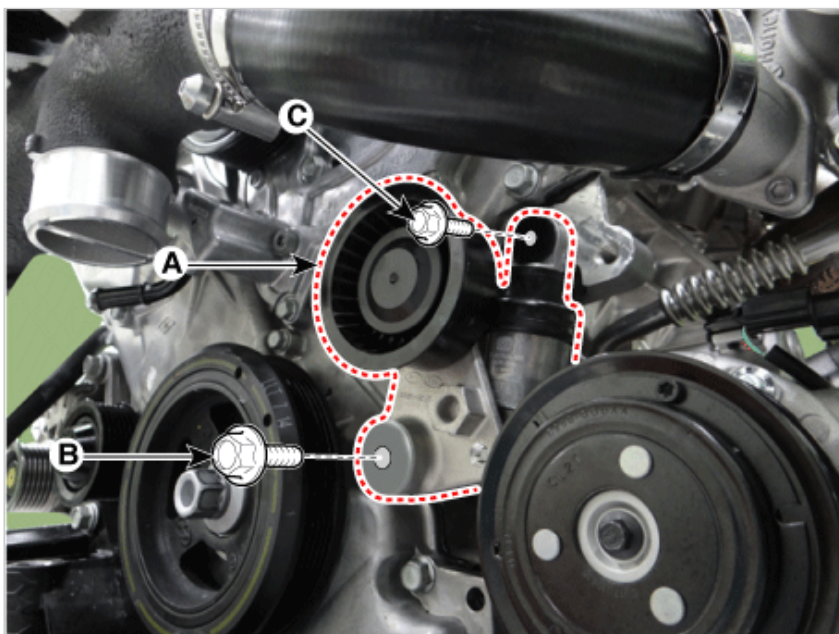

5. Install in the reverse order of removal.

Inspection

Check the belt tensioner for excessive dust, crack, and damage. Replace if necessary.