




Components

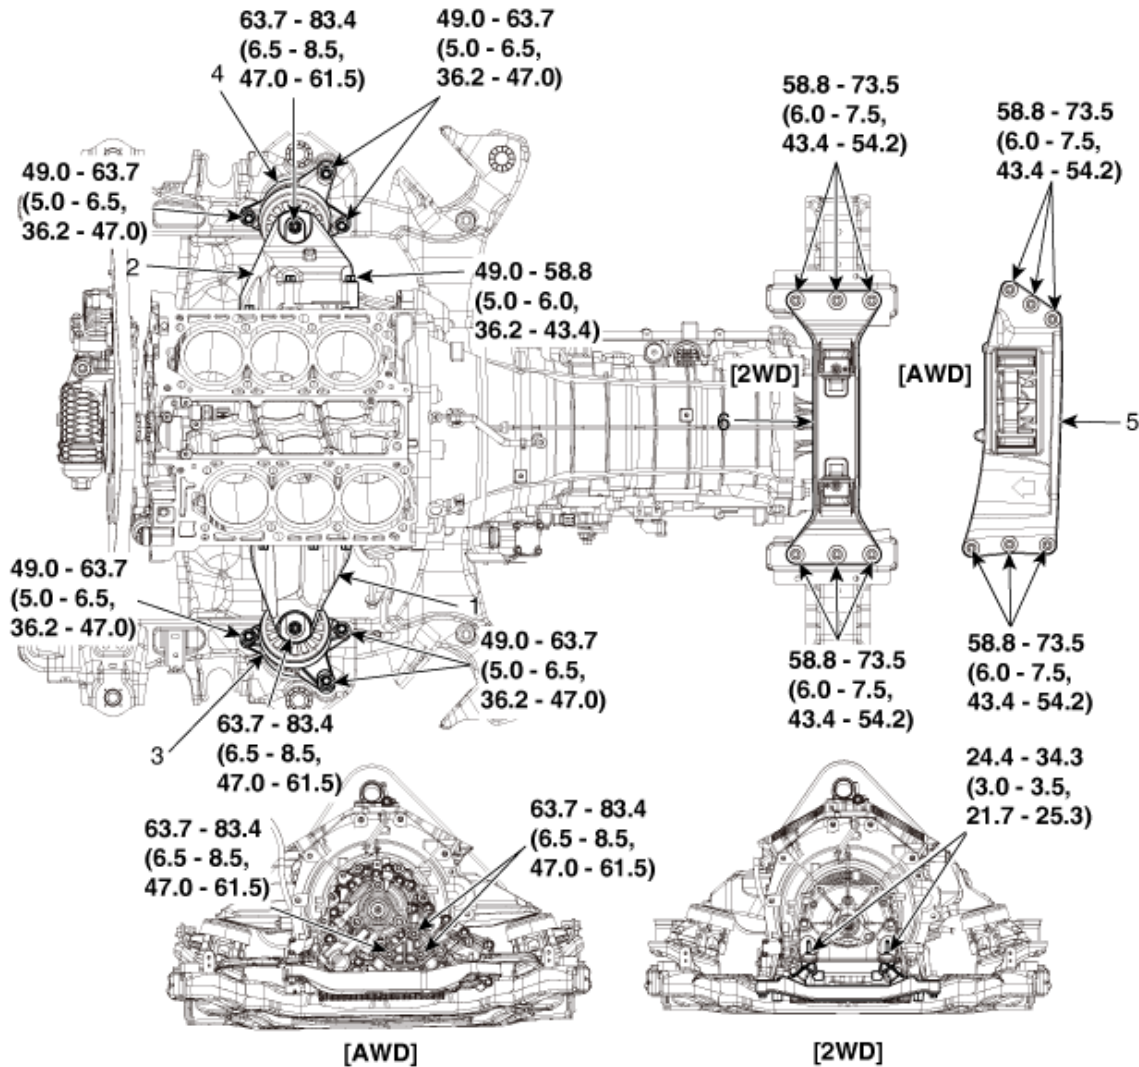

Torque : N·m (kgf-m, lb-ft)

1. Engine mounting support bracket (LH)
2. Engine mounting support bracket (RH)
3. Engine mounting bracket (LH)

4. Engine mounting bracket (RH)
5. Transmission mounting bracket (AWD)
6. Transmission mounting bracket (2WD)