




Removal and Installation

Engine room front under cover.

1. Remove the engine room front under cover (A).

Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

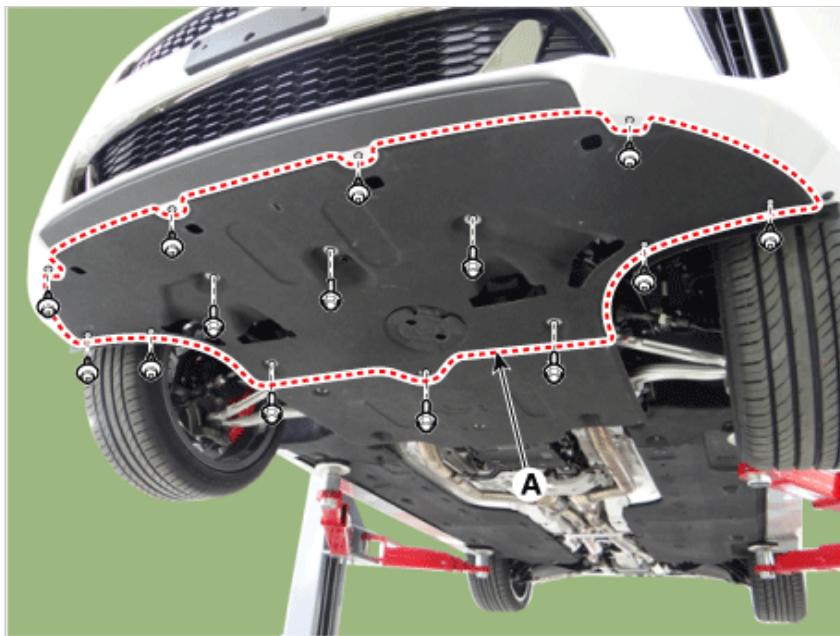


2. Install in the reverse order of removal.

Engine room rear under cover.

1. Remove the engine room rear under cover (A).

Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

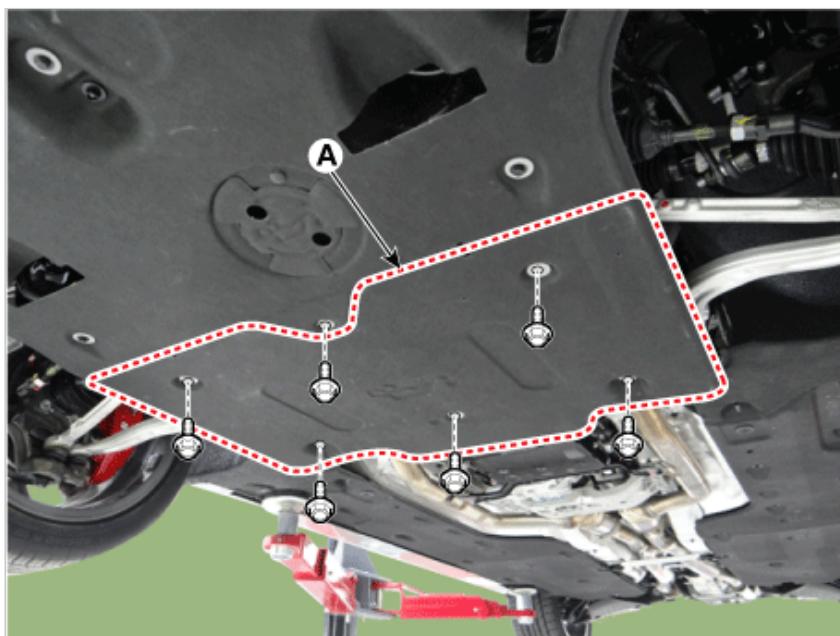

2. Install in the reverse order of removal.

Engine Room Side Cover [AWD]

1. Remove the engine room front under cover.

2. Remove the engine room front side cover (A).

Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

[RH]



[LH]



3. Remove the engine room rear side cover (A).


Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

[RH]



[LH]

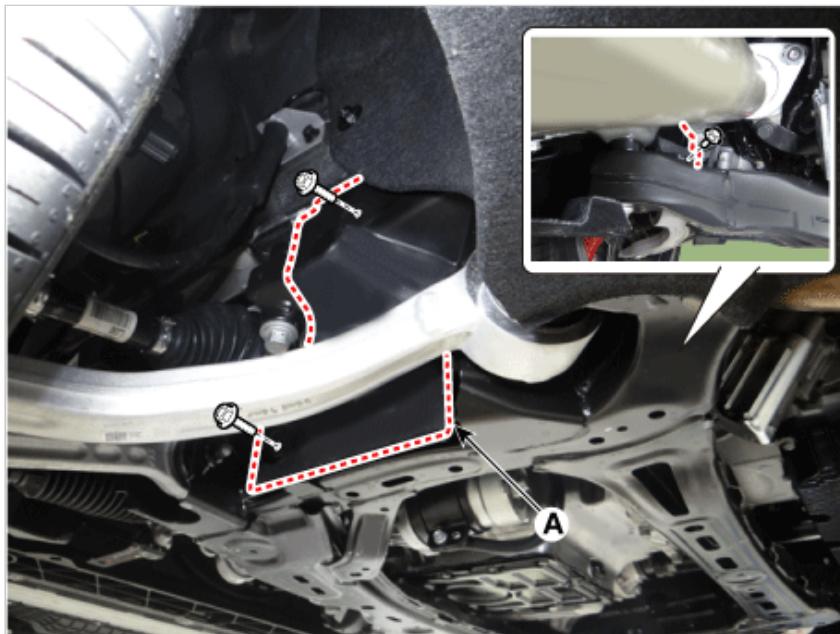

4. Install in the reverse order of removal.


Engine Room Side Cover [2WD]

1. Remove the engine room front under cover.
2. Remove the front stabilizer bar from the sub frame.
(Refer to Suspension System - "Front Stabilizer Bar")
3. Remove the engine room side cover (A).


Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

[RH]

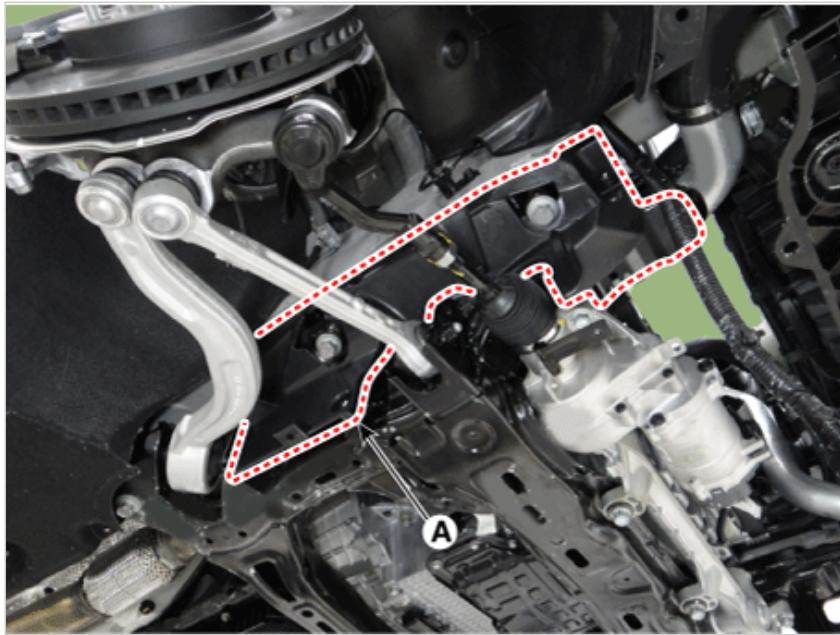

[LH]

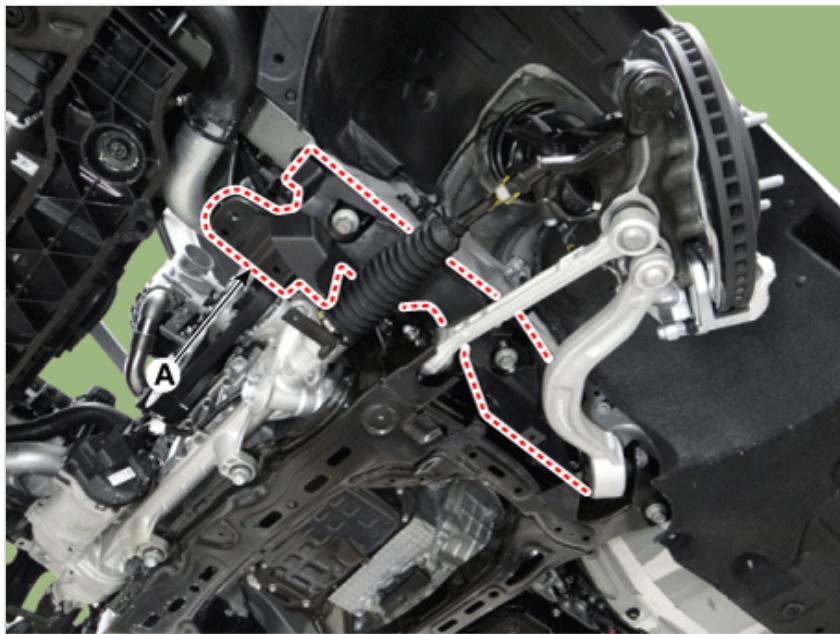

4. Install in the reverse order of removal.