




Components

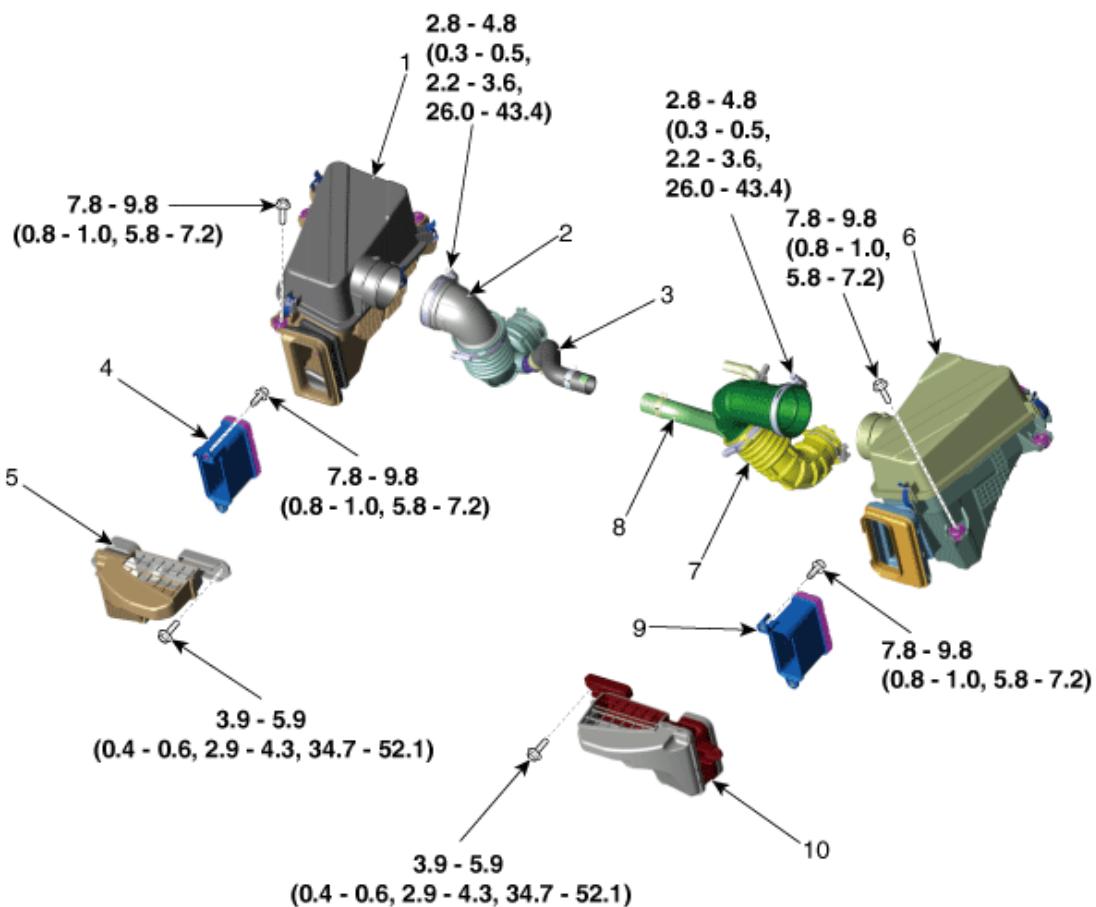

Torque : N·m (kgf·m, lb·ft, lb·in)

- | | |
|------------------------------|------------------------------|
| 1. Air cleaner assembly (RH) | 6. Air cleaner assembly (LH) |
| 2. Air intake hose (RH) | 7. Air intake hose (LH) |
| 3. RCV hose (RH) | 8. RCV hose (LH) |
| 4. Air cleaner adapter (RH) | 9. Air cleaner adapter (LH) |
| 5. Air duct (RH) | 10. Air duct (LH). |