




## Components

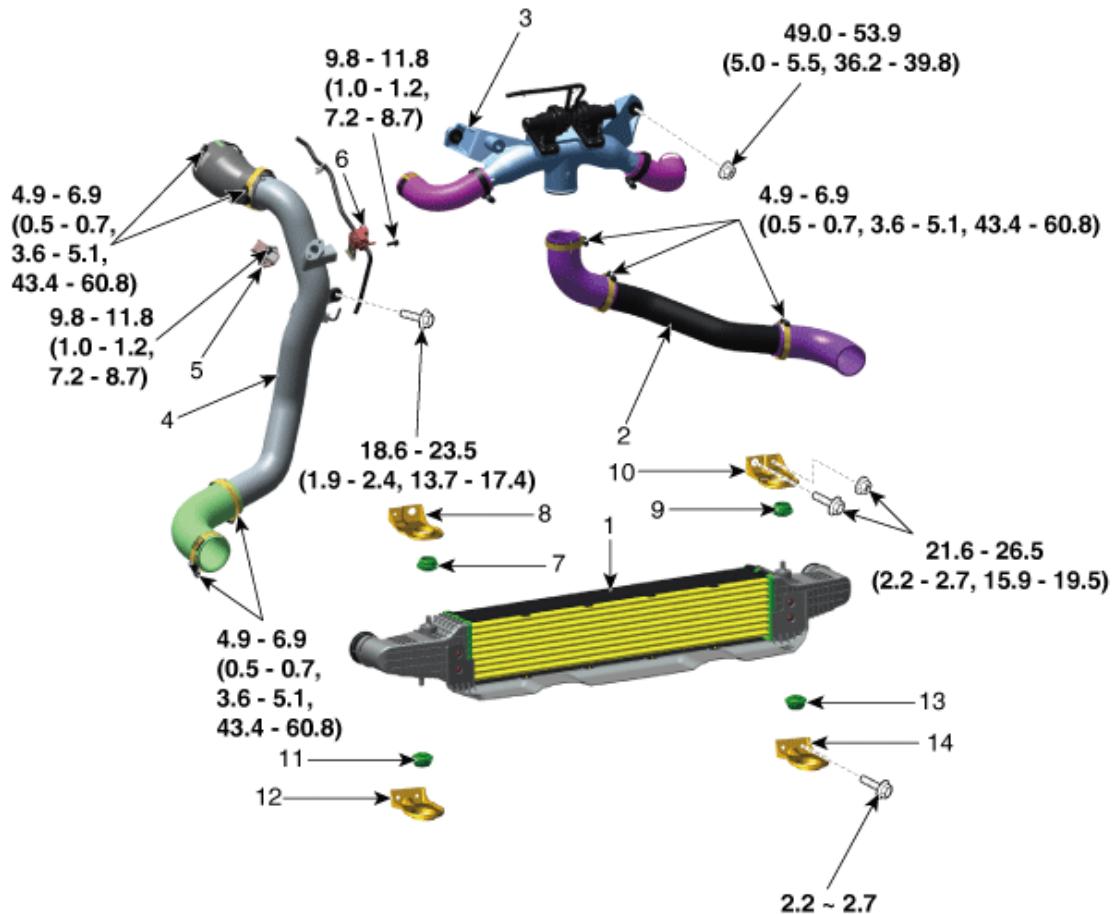

### Torque : N·m (kgf·m, lb·ft, lb·in)

- |  |   |
|--|---|
| 1. Intercooler                               | 8. Intercooler upper mounting bracket (RH)    |
| 2. Intercooler inlet hose & pipe             | 9. Intercooler upper mounting insulator (LH)  |
| 3. Intercooler inlet joint                   | 10. Intercooler upper mounting bracket (LH)   |
| 4. Intercooler outlet hose & pipe            | 11. Intercooler lower mounting insulator (RH) |
| 5. Booster pressure sensor (BPS)             | 12. Intercooler lower mounting bracket (RH)   |
| 6. RCV solenoid valve                        | 13. Intercooler lower mounting insulator (LH) |
| 7. Intercooler upper mounting insulator (RH) | 14. Intercooler lower mounting bracket (LH)   |