




Components

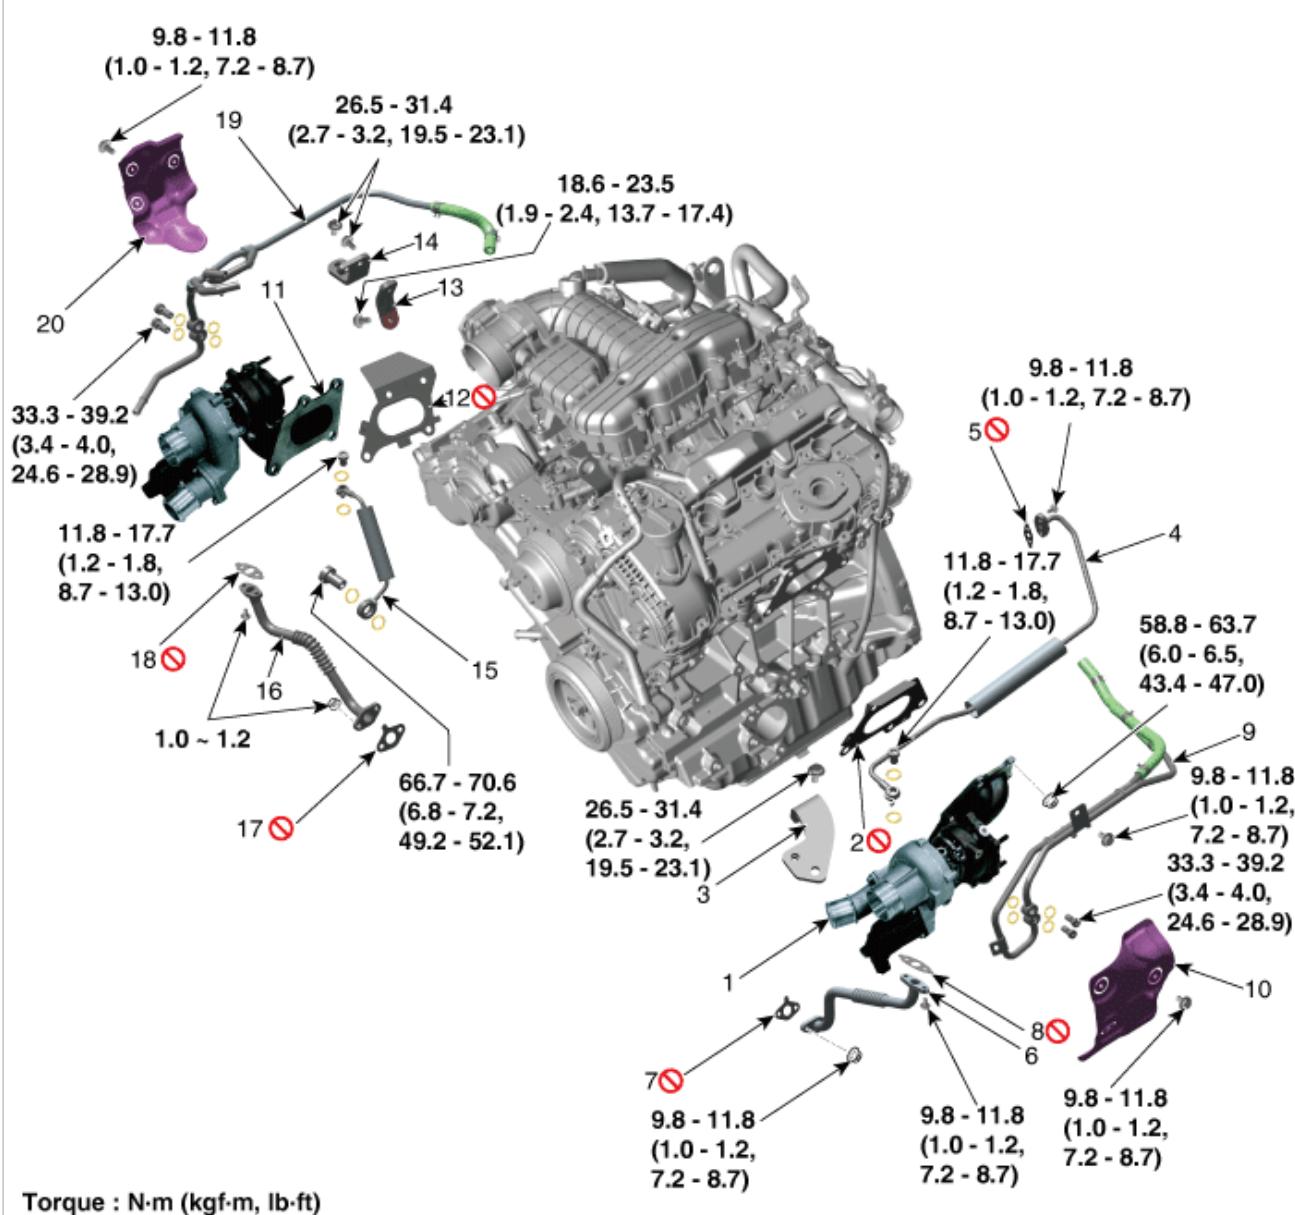

1. LH Turbo manifold module
2. LH Turbo manifold module gasket
3. LH Turbo manifold module stay
4. LH Turbo charger oil feed pipe
5. LH Turbo charger oil feed pipe gasket
6. LH Turbo charger oil drain pipe
7. LH Turbo charger oil drain pipe gasket A
8. LH Turbo charger oil drain pipe gasket
9. LH Turbo charger water hose & pipe
10. LH Turbo manifold module heat protector

11. RH Turbo manifold module
12. RH Turbo manifold module gasket
13. RH Turbo manifold module stay A
14. RH Turbo manifold module stay
15. RH Turbo charger oil feed pipe
16. RH Turbo charger oil drain pipe
17. RH Turbo charger oil drain pipe gasket A
18. RH Turbo charger oil drain pipe gasket
19. RH Turbo charger water hose & pipe
20. RH Turbo manifold module heat protector