





## Replacement

1. Remove the crankshaft damper pulley.  
**(Refer to Drive Belt System - "Crankshaft Damper Pulley")**
2. Remove the front oil seal (A).

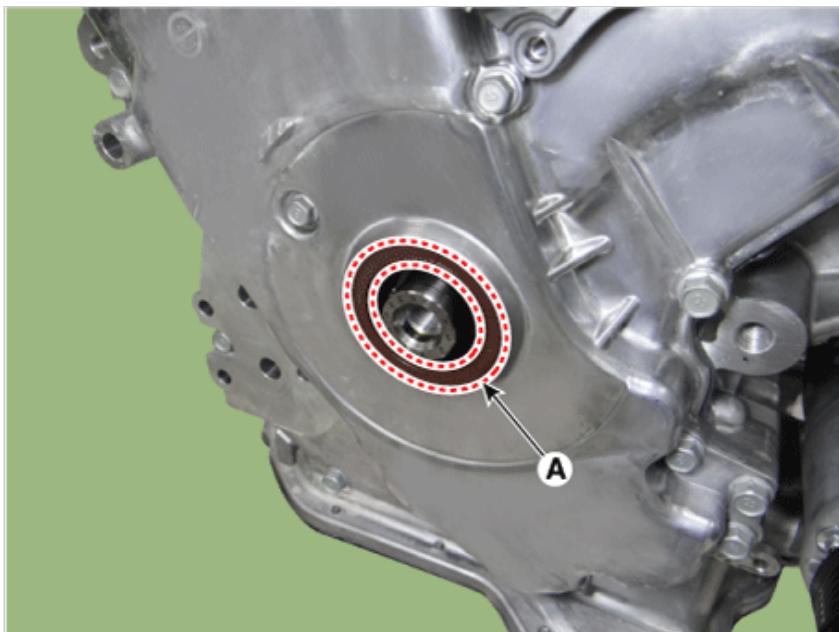

3. Using SST (09231-3C100), install a new front oil seal.

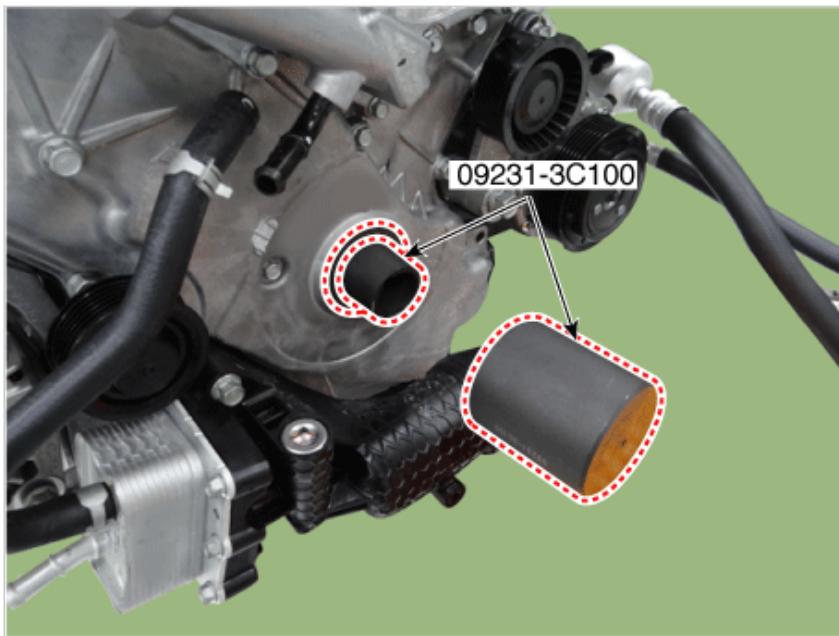

### NOTICE

Always use a new front oil seal.