




Components

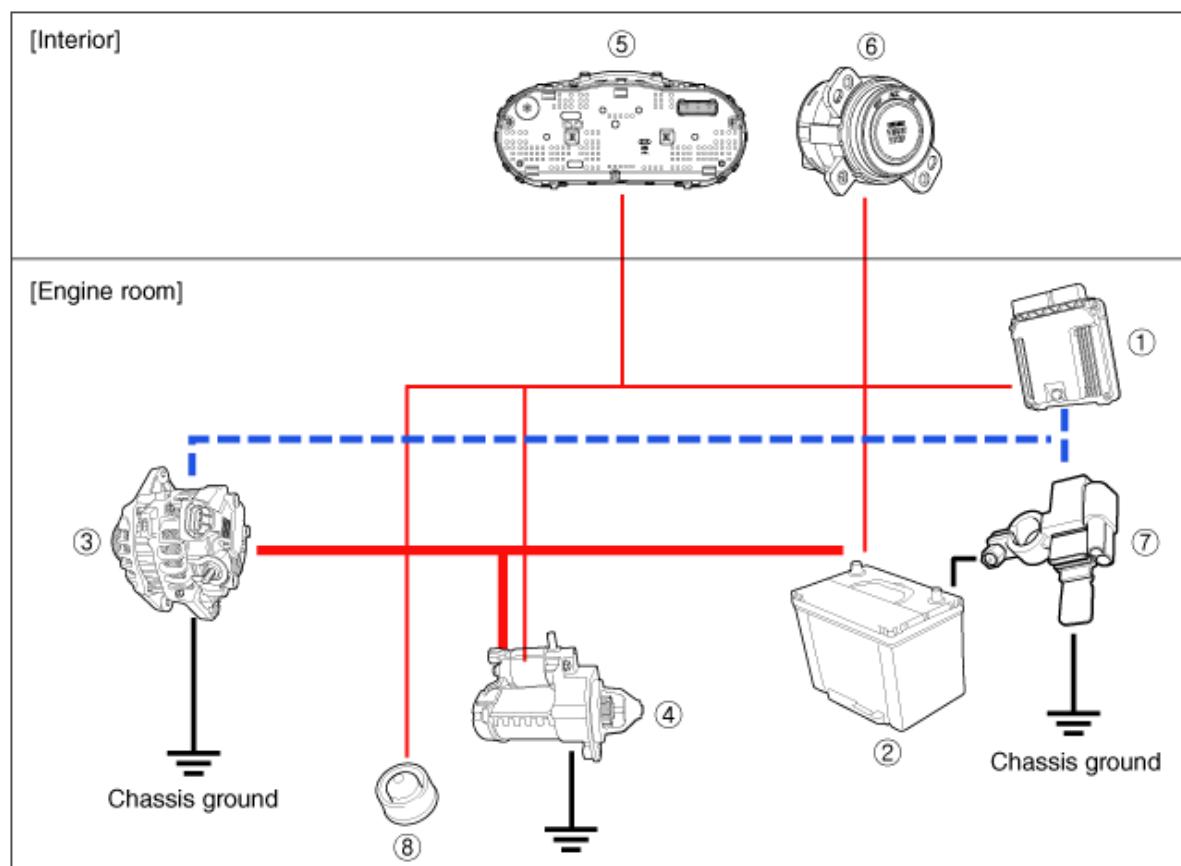

- ① ECM
 - ② Battery
 - ③ Alternator
 - ④ Starter
 - ⑤ Instrument Cluster
 - ⑥ Ignition switch or start/stop button
 - ⑦ Battery sensor
 - ⑧ Hood switch

- Battery positive (+) cable
- Wiring harness
- - - Communication Line
- Chassis ground