




System Block Diagram

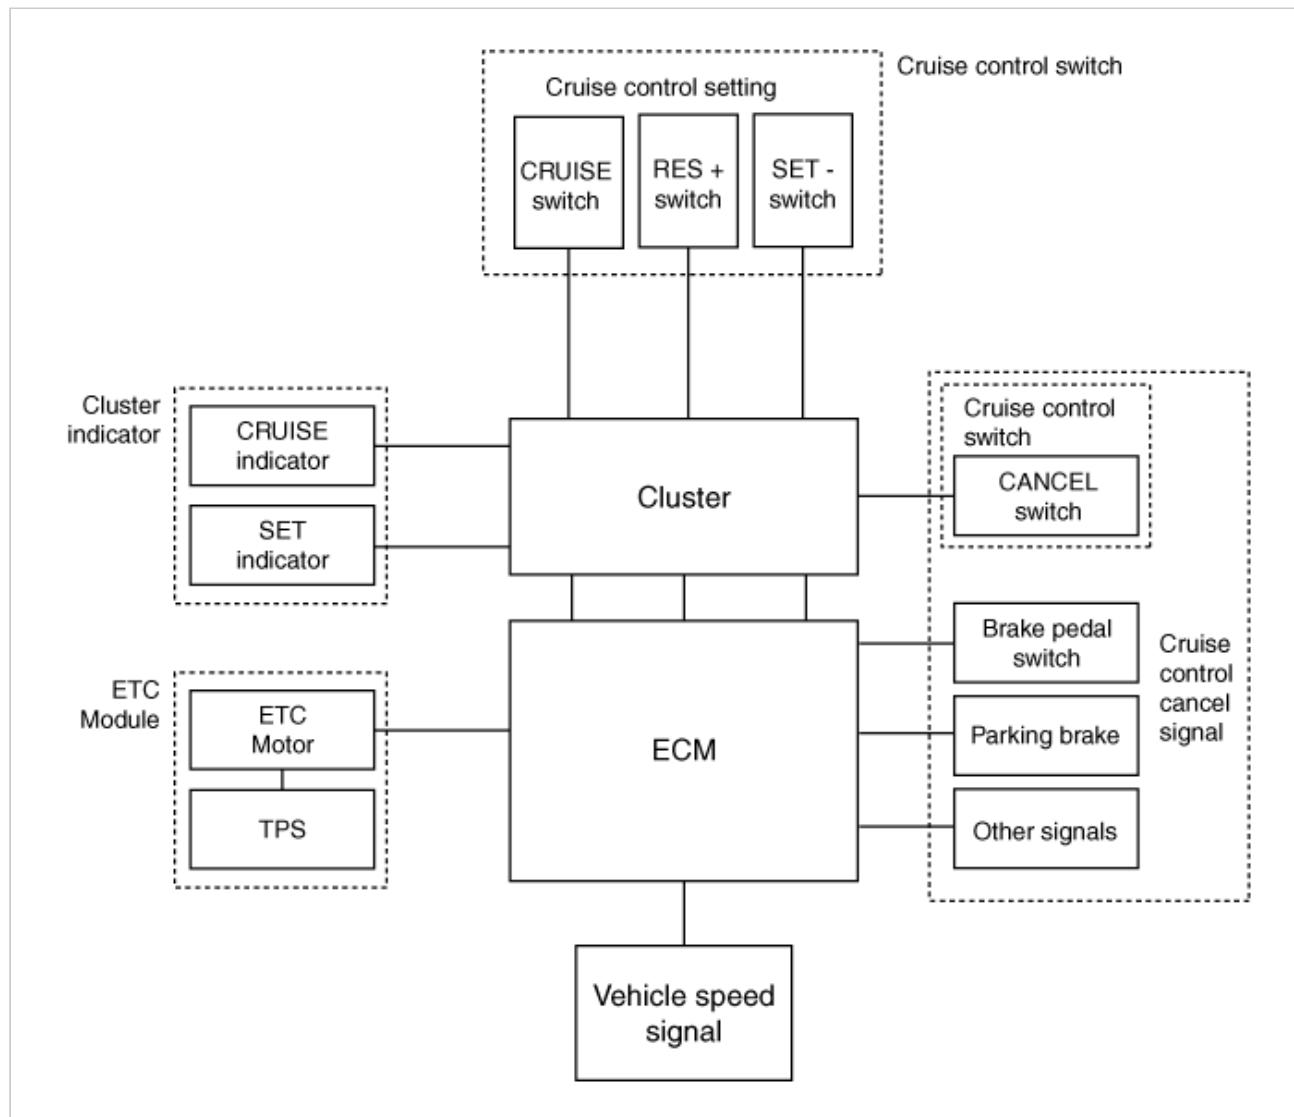

Component Parts And Function Outline

Component part		Function
Vehicle-speed sensor, ESP/ABS Control Module		Converts vehicle speed to pulse.
ECM		Receives signals from sensor and control switches.
Cruise control indicator		Illuminate when CRUISE main switch is ON (Built into cluster)
Cruise Control switches	CRUISE switch	Switch for automatic speed control power supply.
	RES+ switch	Controls automatic speed control functions by Resume/Accel switch (Set/Coast switch)
	SET- switch	
Cancel switches	Cancel switch	Sends cancel signals to ECM.
	Brake-pedal switch	
	Transaxle range switch (A/T)	
ETC motor		Regulates the throttle valve to the set opening by ECM.

* ETC Motor : Electronic Throttle Control Motor